

# INSTALLATION INSTRUCTIONS

Item#P1558-66A-L (Rev. 05/09/2023)

## READ AND SAVE THESE INSTRUCTIONS

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**

**AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.**

### PREPARATION

1. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.
2. Shut off power at the circuit breaker and remove the old fixture including the mounting hardware.

### MOUNTING THE FIXTURE (Fig. 1)


3. Attach mounting plate (A) to the outlet box (not included) using mounting screws (B) (Size: #8-32N\*L1"L) as shown in Fig.1. Note: The side of mounting plate (A) marked "GND" must face out.
4. Determine the desired hanging height and thread rods (F1, F2) to the coupling (E) on the top of the fixture body. Secure canopy (C) to rod (F1). Pass the wires carefully through each rod and canopy. Then tighten the rods and the canopy assembly until secured.
5. Adjust the arms to proper position as shown in Fig.3.
6. Align the bottom frame to the bottom of fixture body and with screws (G) using screwdriver (not included). Snap in the six decorative caps (H) to the bottom frame.
7. Place glass (K) onto fixture body, secure with metal caps (I) and screws (J).
8. The support cable is provided to support the weight of the fixture while wiring. Align the fixture to mounting plate (A) and attach hook (T) on the end of support cable (P) into a slot located on mounting plate (A). Carefully allow support cable (P) to support the weight of the fixture while wiring (Fig.1).

Fig. 1

Set# A-020-120D  
- Mounting plate  
- Ground screw  
- Mounting Screw\*2

Glass Shade #PG1558

Rod#  
- W30-H-66A(F1)  
- W30-1-66A\*3 (F2)

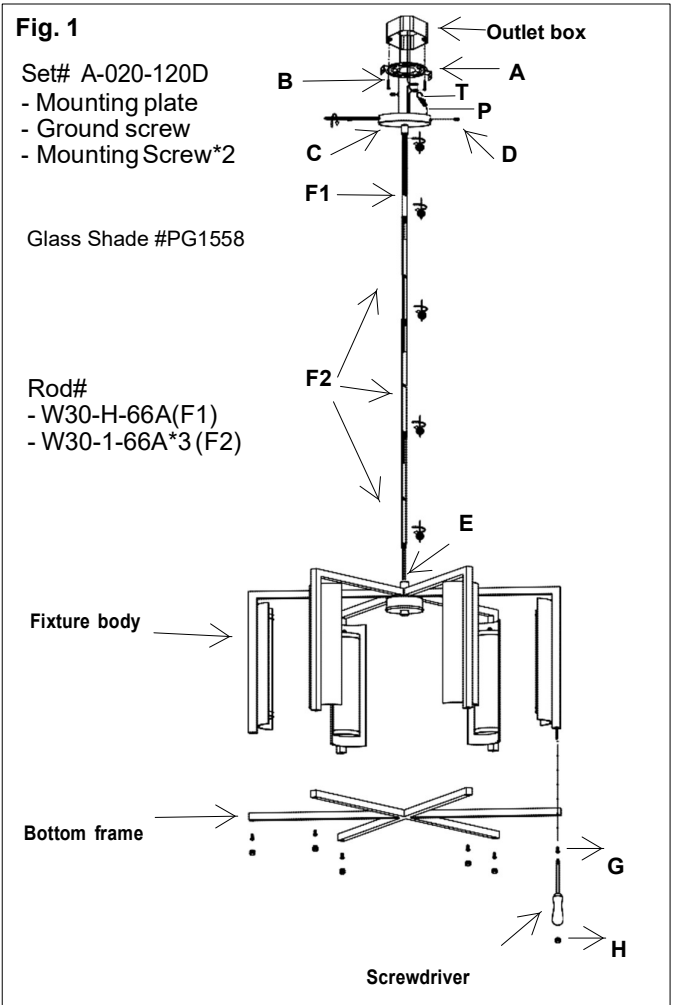

### CONNECTION THE WIRES (Fig. 2)

9. Connect the electrical wires as shown in Fig.2, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate (A) using the green screw provided. After wires are connected, tuck them carefully inside the outlet box.

### FINISHING THE INSTALLATION (Fig. 3)

10. Align canopy (C) over mounting plate (A). Secure with screws (D).

### Replacing LED module (Fig.4)

The LED module can be replaced by a qualified electrician without cutting of wire and without damage to any decorative element to which the fixture is attached. See installation steps for more details (Fig 3.)

- a. Shut off the power.
- b. Remove screws (D) and disconnect wire connectors and place fixture body on a clean surface. (Fig1)
- c. Remove screws (J) and metal caps (I) from the fixture body and remove glass (K).
- d. Press the button with printed "L" quick connector on LED module (L) with screwdriver (not included) to disconnect the black wire and then disconnect the white wire from the printed "N" quick connector on LED module (L). Carefully remove LED module (L) from the base.
- e. Reverse steps a-d for installing the new LED module.

Fig. 2

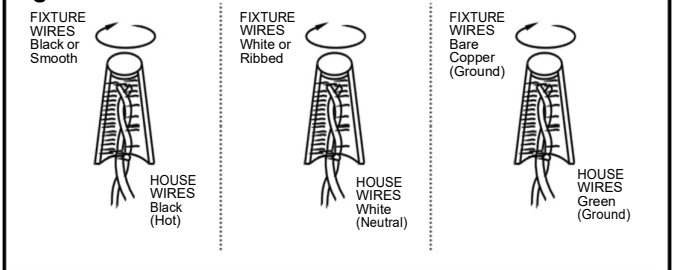


Fig. 3


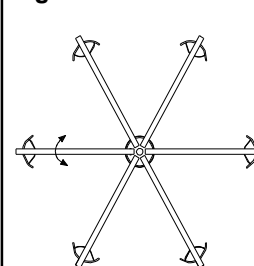


Fig. 4



Your installation is now complete. Return power to the outlet box and test the fixture.

**Note: The illustration in figure 1 on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.**  
**Dimmable with ELV and/or LED compatible wall dimmer switches.**

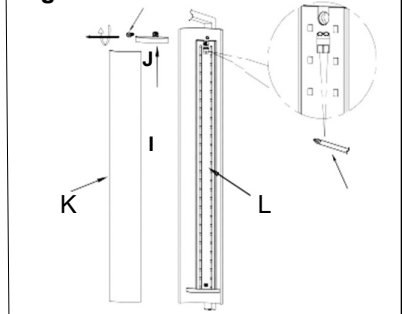

Page: 2/2

**P1558-66A-L**