

Sunward®

6' BubbleMassage™ Bath **K-1164-S1G**



Features

- End drain.
- Integral lumbar support and armrests for comfort.
- Textured bottom surface.
- 72" (1829 mm) x 42" (1067 mm) x 20" (508 mm)

Material

Acrylic

Hydrotherapy

- 120 BubbleMassage™ airjets.
- Zones of Control feature allows you to target massage to back, midsection, or feet.
- Automatic purge cycles remove residual water from air channels after use.
- Built-in 300 W heater.
- Lighted keypad control.

Installation

Drop-in

Recommended Accessories

K-11677 Bath Drain K-1491 Bath/Whirlpool Pillow K-1601 Bath/Whirlpool Footstop K-24916 Wireless Music Kit



Codes/Standards

ASME A112.19.7/CSA B45.10 CSA B45.5/IAPMO Z124 UL 1795 Greenguard UL 2818 - Gold CARB P2

KOHLER® One-Year Limited Warranty

See website for detailed warranty information.

Available Color/Finishes

Color tiles intended for reference only.


Color	Code	Description
	0	White
	96	Biscuit
	47	Almond



KOHLER®

Sunward®

6' BubbleMassage™ Bath **K-1164-S1G**

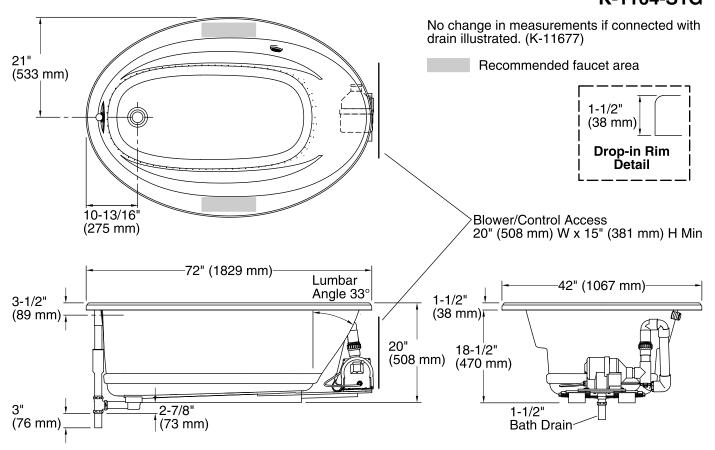

Required Electrical Service

One dedicated circuit required, protected with Class A Ground-Fault Circuit-Interrupter (GFCI) or Residual Current Device (RCD).

Blower: 120 V, 15 A, 60 Hz

Technical Information

All product dimensions are nominal.

Installation: Drop-in Drain location: End

Basin area, bottom: 55-1/4" x 23-1/2" (1403 mm x 597 mm)
Basin area, top: 64-1/2" x 32" (1638 mm x 813 mm)

Weight: 110 lbs (49.9 kg)

Minimum floor load: 35 lbs/ft² (170.9 kg/m²)

Water depth: 15" (381 mm)
Water capacity: 75 gal (283.9 L)

Template: Drop-in, 1042557-7, required, included Electrical component Blower: 120 V, 10 A, 60 Hz, 300 W

rating:

Notes

Measure your actual product for rough-in details. Install this product according to the installation instructions.

The hot water supply should be 70% of the capacity of the bath or greater. Installations will vary.

Provide one grounded electrical outlet within 24" (610 mm) of each component.

Remote blower installation kit is available for relocating the blower. Provide access for servicing the blower.

Do not relocate or alter the PVC tee or coiled flexible tubing connected to the blower. Follow the blower relocation instructions exactly.

