

INSTALLATION INSTRUCTIONS

MLINK-30-XX



⚠ WARNING

These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with these instructions, current electrical codes, and/or the current National Electric Code (NEC).

⚠ WARNING

To avoid electrical shock, disconnect or disable power at the source prior to installation or maintenance.

⚠ WARNING

To avoid electrical shock, **USE ONLY WITH CLASS 2 POWER UNIT.** Use a 24V DC plug-in power supply or a 24V DC hardwire power supply. Factory warranty will be void if used with a non-recommended power supply, transformer, or driver.

⚠ WARNING

The National Electrical Code (NEC) does not permit cords to be concealed where damage to insulation may go unnoticed. To prevent fire danger, do not run cord behind walls, ceilings, soffits, or cabinets where it may be inaccessible for examination. Cords should be visually examined periodically and immediately replaced when any damage is noted.

SAFETY INFORMATION










- Read all instructions before beginning; Save these instructions for future use.
- To reduce the risk of fire, electric shock, or injury to persons, pay close attention to this manual and stay within its guidelines when using this product.
- This fixture is intended for indoor use in dry or damp locations only. Do not use in the vicinity of standing water or liquids. Do not submerge in water or liquids.
- **WARNING:** Not intended for wet locations. Do not install within 15 ft of a swimming pool surface.
- Do not use if there is any damage to the unit or power cord's insulation. Inspect periodically.
- Do not route cords or units through walls, doors, windows or any similar part of a building structure.
- Secure units using integrated magnets, clips, or 3M® Tape Strips. Do not secure unit or its power cord with staples, nails, or any other sharp objects that may damage fixture.
- To maintain product integrity: do not bend, step on, or subject to pressure or flexing. Do not mount on uneven surfaces.
- **Risk of shock or fire hazard:** This fixture utilizes a constant voltage design and has a maximum run length of 16.4 ft (or 5 meters) in and a maximum of 10 fixtures connected in series. Do not exceed maximum run length in any connection series. Do not exceed capacity of power driver used.
- **Risk of shock or fire hazard:** This LED product is designed to be used with a regulated 24V DC power supply only. Do not use a 24V AC transformer because that will result in an "AC flicker" and overdriving of the LEDs due to the alternating current and non-regulated output.
- **Risk of shock or fire hazard:** Be sure to select a driver with a wattage capacity that can handle the total load, noting the following wattage for each size: MLINK-30-6 = 2.1 watts, MLINK-30-16 = 5.7 watts, MLINK-30-22 = 7.9 watts and MLINK-30-32 = 12.2 watts. Ideally, only load drivers up to 90% of the total capacity to maximize driver life. If loaded above 90%, allow 12" clearance above and around the driver

PRODUCT INFORMATION:

Each length of MicroLink (6", 16", 22", or 32") includes (1) power connection with female DC lead, (1) end cap, and (2) mounting clips with screws.



Additional connections are sold separately as follows:

6" Linking Jumper		"L" Connect Left		"T" Connect Left	
End Cap		"L" Connect Right		"T" Connect Right	
4" Mounting Clip		"X" Connect		"T" Connect Middle	

PRIOR TO INSTALLATION:

Determine the location of installation and lengths of MicroLink that will be needed. Determine what power and connection accessories you will be utilizing. If an intersection is involved, plan ahead by starting the layout there. Do not exceed the max run length of 16.4 ft (or 5 meters) or a maximum of 10 fixtures in a single series run. Remove the clear plastic wrap from each fixture prior to installation. Not intended for wet locations. Do not install within 15 ft of a swimming pool surface or other bodies of water.

INSTALLATION INSTRUCTIONS

MLINK-30-XX



MOUNTING MICROLINK (Figures 1 & 2):

Magnet Installation (See Figure 1)

1. The Microlink fixtures come with a set of magnets pre-installed on the underside of the fixture. To secure to a ferrous surface, simply space the magnets to bear the weight of the fixture and place on surface.

Mounting Clip Installation (See Figure 2)

1. If using mounting clips (either 1/2 in or 4 in), be sure to position and mark their location in a straight line so that the fixture can snap into each.
2. Using screws, install mounting clips in line, taking into account the lengths of each fixture being used.
3. Clip/snap the groove sides of the Mlink into mounting clips

Note: Begin with first fixture of run attached to surface and add additional fixtures to the run one at a time.

LINKING MICROLINK (Figure 3):

1. To link fixtures, align the peg-and-slot connector and apply light force from above. Fixtures will snap together.
2. Terminate runs with the provided end cap.

POWERING MICROLINK (Figure 4):

This LED product is designed to be used with a regulated 24V DC power supply only. Be sure to select a driver with a wattage capacity that can handle the total load, noting the following wattage for each size: MLINK-30-6 = 2.1 watts, MLINK-30-16 = 5.7 watts, MLINK-30-22 = 7.9 watts and MLINK-30-32 = 12.2 at the source prior to installation or maintenance.

1. Ensure all parts and pieces have been correctly linked and mounted. The first fixture in a run should have a power connection with female DC lead attached and the last fixture in a run should have an end cap attached.
2. For hardwire drivers (such as the ADPT-DRJ series), use a 2-wire DC adapter (DC-HW) to affix a male DC connection to the driver. Connect power cord from Microlink to 24V DC power supply by connecting DC connectors. Provide line voltage power to the driver by wiring according to driver instructions
3. For plug-in drivers (such as the PS-Series), connect power cord to 24V DC power supply by connecting DC connectors. Provide line voltage power to the driver by plugging in to a standard wall socket.

Note: Recommended power supplies include PS-Series Plug-in Drivers and ADPT-DRJ power supplies. See "Power Supplies and Drivers" at www.americanlighting.com for details.

CARE AND MAINTENANCE:

To dim Microlink fixtures, most standard 2-wire and CL dimmers may be used. Results vary depending on load and wall dimmer choices (approximately 5-100% light control).

CARE AND MAINTENANCE:

1. For cleaning, use a soft, dry or damp cloth. Do not use harsh chemicals or abrasives.

FIGURE 1

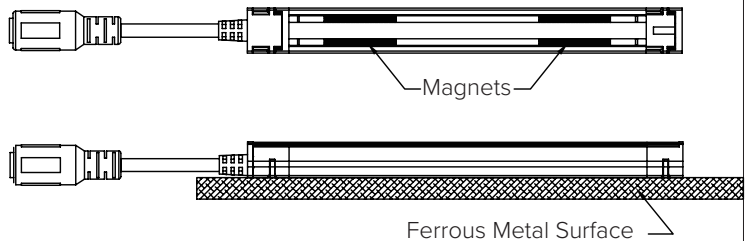


FIGURE 2

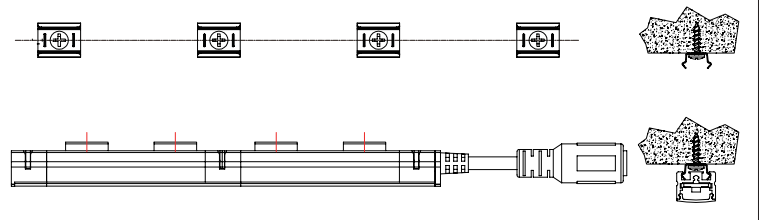


FIGURE 3

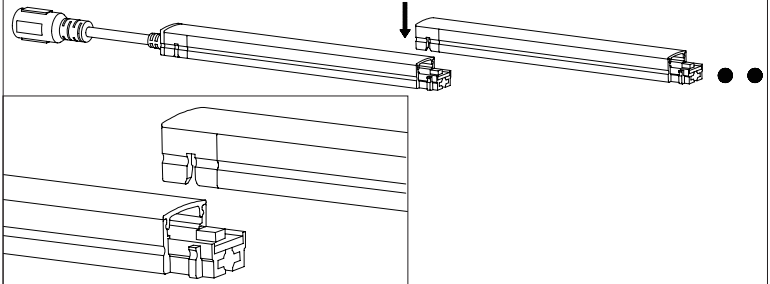


FIGURE 4

