

Jeremiah Lighting

28612-ABZ

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

GENERAL

Remove all parts and hardware from the box and mounting package and make sure that none are missing by referencing the illustrations provided.

ASSEMBLY AND INSTALLATION


1. Pull the SUPPLY WIRES (8 & 10) and the SUPPLY GROUND WIRE (7) out from the OUTLET BOX (1) (not included) and attach the MOUNTING STRAP (2) assembly to the OUTLET BOX (1) using the slotted holes of the MOUNTING STRAP (2) and the OUTLET BOX SCREWS and WASHERS (3). [See Fig. 1]
2. Remove the THREADED RING (16) from the SCREW COLLAR LOOP (5) and set aside. Place the CANOPY (15) over the OUTLET BOX (1) and adjust the SCREW COLLAR LOOP (5) and THREADED ROD (14) until the midpoint of the outside threads on the SCREW COLLAR LOOP (5) is centered (aligned) with the surface of the CANOPY (15). Remove the CANOPY (15) and tighten both HEX NUTS (4) down on the MOUNTING STRAP (2) and the SCREW COLLAR LOOP (5). [See Fig. 1]
3. Unravel the FIXTURE LEAD WIRES (9 & 11) and FIXTURE GROUND WIRE (6). Slide the FIXTURE LOOP (19) down the fixture wires and then thread onto the top of CENTER ROD (20) until tight. Thread the CENTER ROD (20) onto the threaded rod at the top of FIXTURE (24). Pull the ARMS (23) so that they are evenly spaced. Secure the lower part of the ARMS (23) to the FIXTURE (24) using the RUBBER WASHER (26) and the DECORATIVE SCREW (27). [See Fig. 2]
4. Attach one CONNECTING CHAIN LINK (18) to each end of the CHAIN (17). Then attach one end of the CHAIN (17) to the FIXTURE LOOP (19). Close CONNECTING CHAIN LINKS (18). Thread the FIXTURE WIRES (6, 9 & 11) through every other link of the CHAIN (17) starting with the chain link attached to the FIXTURE LOOP (19). Slide the THREADED RING (16) and the CANOPY (15) (in that order) onto the CHAIN (17) and FIXTURE WIRES (6, 9, & 11). [See Fig. 1 & 2]
5. Feed the FIXTURE LEAD WIRES (9 & 11) and FIXTURE GROUND WIRE (6) through the SCREW COLLAR LOOP (5) and THREADED ROD (14). Pull the FIXTURE LEAD WIRES (9 & 11) and the FIXTURE GROUND WIRE (6) upward to remove any excess slack. [See Fig. 1]
6. Attach the power supply wires to the fixture lead wires by connecting the BLACK SUPPLY WIRE (8) to the SMOOTH FIXTURE LEAD WIRE (9) and the WHITE SUPPLY WIRE (10) to the RIBBED FIXTURE LEAD WIRE (11). Loop the SUPPLY GROUND WIRE (7) around the GROUND SCREW (13) of the MOUNTING STRAP (2). [Note: Be sure to provide an extra 3in. length of the SUPPLY GROUND WIRE (7) for connection to the FIXTURE GROUND WIRE (6).] Connect the remaining SUPPLY GROUND WIRE (7) to the FIXTURE GROUND WIRE (6). Use a WIRE CONNECTOR (12) for all wire connections. Push wiring and connections inside the OUTLET BOX (1). [See Fig. 1]
7. Place the CANOPY (15) over the OUTLET BOX (1) and secure it by screwing the THREADED RING (16) onto the SCREW COLLAR LOOP (5). Open CONNECTING CHAIN LINK (18) at top of CHAIN (17) to attach CHAIN (17) to SCREW COLLAR LOOP (5). Close CONNECTING CHAIN LINK (18). [See Fig. 1]

ASSEMBLY AND INSTALLATION (Continued)

8. Place SHADES (22) over CANDLE COVERS (21).
9. Install bulbs, MAXIMUM 60W each.

INSTALLATION IS NOW COMPLETE

ADDITION

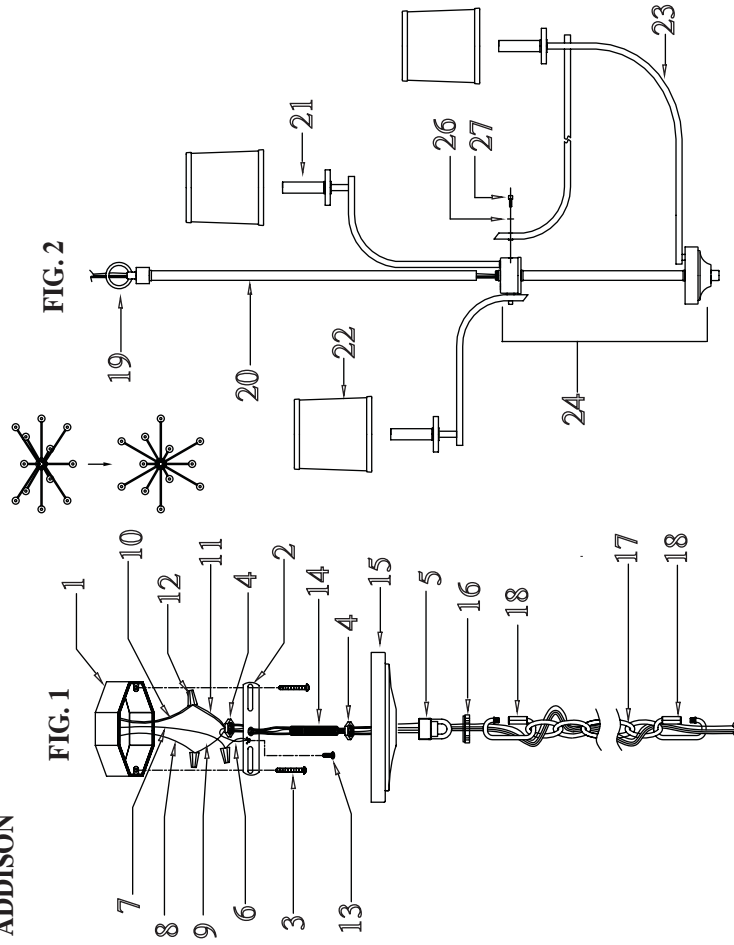

12-LIGHT CHANDELIER

- | | |
|---|---------------------------------|
| 1. OUTLET BOX (NOT INCLUDED) | 14. THREADED ROD (pre-attached) |
| 2. MOUNTING STRAP | 15. CANOPY |
| 3. OUTLET BOX SCREW and WASHER (pre-attached to outlet box) | 16. THREADED RING |
| 4. HEX NUT | 17. CHAIN |
| 5. SCREW COLLAR LOOP (pre-attached) | 18. CONNECTING CHAIN LINK |
| 6. FIXTURE GROUND WIRE | 19. FIXTURE LOOP |
| 7. SUPPLY GROUND WIRE (not included) | 20. CENTER ROD |
| 8. BLACK SUPPLY WIRE (not included) | 21. CANDLE COVER (pre-attached) |
| 9. SMOOTH FIXTURE LEAD WIRE | 22. SHADE |
| 10. WHITE SUPPLY WIRE (not included) | 23. ARM (pre-attached) |
| 11. RIBBED FIXTURE LEAD WIRE | 24. FIXTURE |
| 12. WIRE CONNECTOR | 26. RUBBER WASHER |
| 13. GROUND SCREW (pre-attached) | 27. DECORATIVE SCREW |