

Installation Instructions 2064.461

SERIN[™] SINGLE CONTROL WALL MOUNT FAUCET IN-WALL LAVATORY FITTING


Thank you for selecting American-Standard... the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly– please read these instructions carefully before you begin.




Certified to comply with ASME A112.18.1M U.S. Patent No. 5,819,789 M968918 Rev.1.6 (8/15)

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

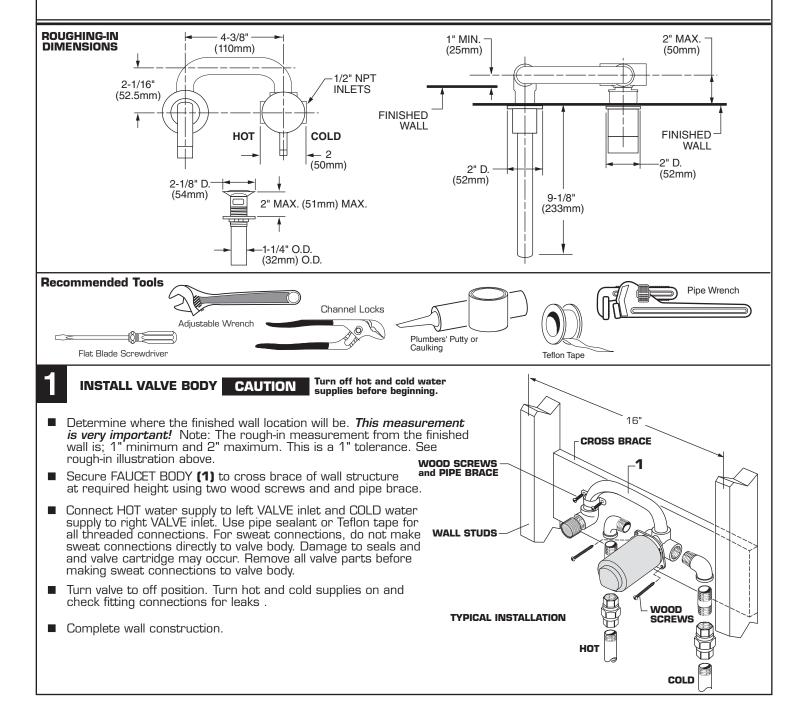


2 INSTALL WALL SPOUT

- Remove PLASTER GUARDS (1, 1a) from VALVE BODY and SPOUT NIPPLE (2).
- Apply thread sealant to SPOUT NIPPLE (2).
- Thread SPOUT MOUNT (3) onto SPOUT NIPPLE (2) using a 10mm Hex Wrench. Tighten completely.

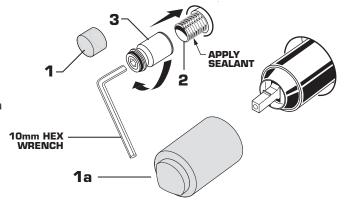


2a INSTALL WALL SPOUT

- Install SEAL (4) into SPOUT ESCUTCHEON (5). Place SPOUT ESCUTCHEON (5) with SEAL (4) onto SPOUT (6). Fig. A
- Push SPOUT (6) onto SPOUT MOUNT (3).
 Align SPOUT (6) and tighten SPOUT SET SCREW (7) with 2mm HEX WRENCH (8) supplied. Push SPOUT ESCUTCHEON (5) against finished wall.
- Install SEAL (9) into VALVE
 ESCUTCHEON 10). Place VALVE
 ESCUTCHEON (10) with SEAL (9)
 onto VALVE (11). Push VALVE
 ESCUTCHEON (5) against finished wall. Fig. B

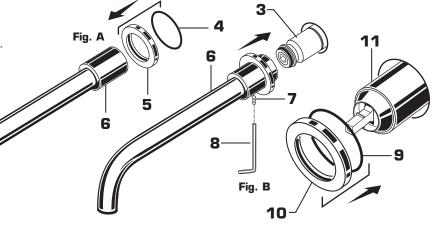


3 INSTALL HANDLE


- Push VALVE STEM (1) down to off position.
- Attach HANDLE ADAPTER (2) to VALVE STEM (1) with ADAPTER SCREW (3). Tighten fully.
- Install HANDLE (4) onto VALVE STEM (1) and tighten SET SCREW (5) with 2.5mm HEX WRENCH (6) supplied.
- Install PLUG BUTTON (7) into HANDLE (4).

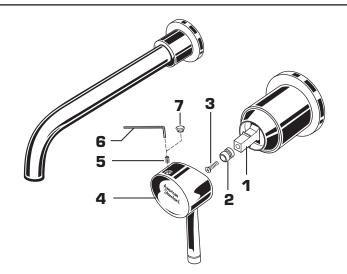

4. DRAIN INSTALLATION

- Apply a bead of PUTTY to underside of FLANGE on DRAIN BODY (1).
- Feed DRAIN BODY (1) down through lavatory.
- Assembly GASKET (2) WASHER (3) and LOCKNUT (4) onto DRAIN BODY (1). Tighten LOCKNUT (4) firmly.
- Apply Teflon Tape to TAILPIECE (5) and thread onto DRAIN BODY (1).

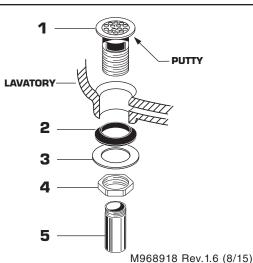

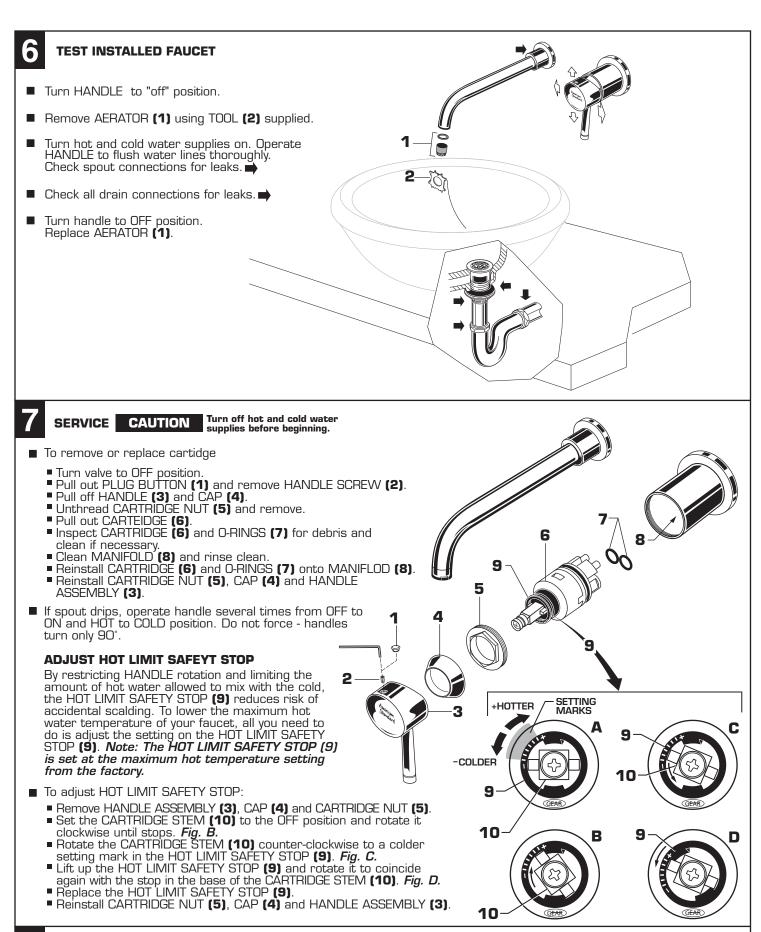

CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.


M968918 Rev. 1.6 (8/15)

American Standard

SERIN™ **SINGLE HANDLE WALL MOUNT LAVATORY FAUCET**

MODEL NUMBER

2064.461

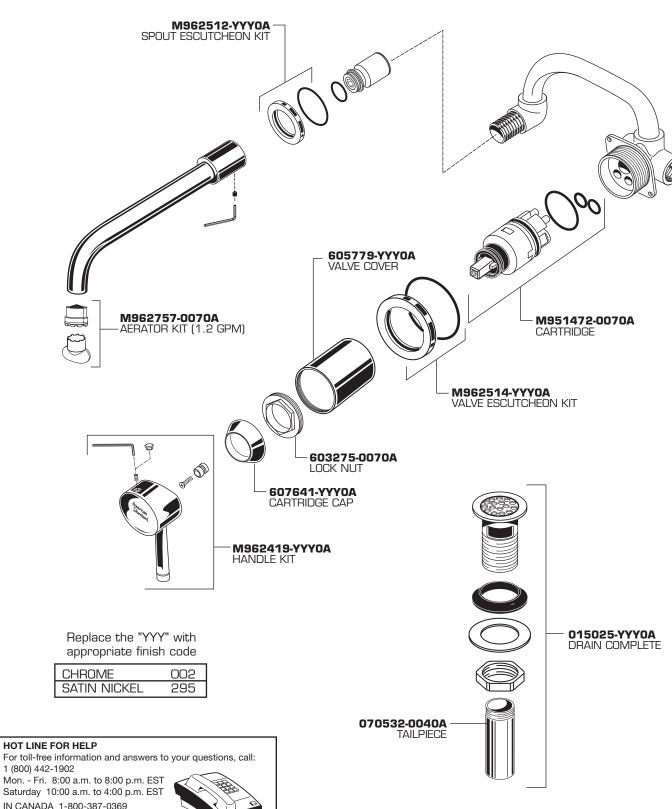

1 (800) 442-1902

Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST Saturday 10:00 a.m. to 4:00 p.m. EST

IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093) Weekdays 8:00 a.m. to 7:00 p.m. EST IN MEXICO 01-800-839-1200

