TECHNICAL DATA





A Masco Company


140 Business Park Drive • Winston-Salem, NC 27107 800.542.3789 • T 336.769.4077 • F 336.769.1839 www.libertyhardware.com

FUTURA®

Toothbrush & Tumbler Holder

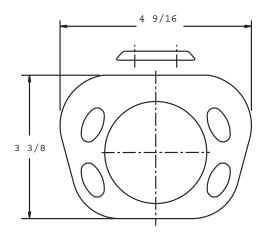

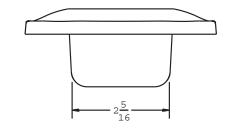



MATERIALS: Tray and Post Frame - Zinc Die Cast

Wall Plate - Steel; 20 Gage; Zinc Plated

INSTALLATION: Mount wall plate with 2 #8 x 1-1/4" round head zinc plated steel screws and plastic anchors provided.

Slip soap dish over the wall plate and tighten set screw until secure.

OPTIONAL FASTENER

INFORMATION: Wood blocking is preferable behind all wall surfaces. If wood

blocking is not available, the following fasteners are suggested:

Tile/Masonry - Plastic or Lead Anchors;

Plaster/Drywall - Toggle Bolts.

SPECIFICATION: Surface mounted soap dish shall be model _

(fill in model number) by Liberty Hardware Manufacturing Corporation.