


INSTALLATION

G U I D E

IRON WORKS
HISTORIC™
PEDESTAL

THE BOLD LOOK
OF **KOHLER**®

RECOMMENDED TOOLS AND MATERIALS



Masking
Tape



Tape
Measure



1/4" Hex
Wrench

BEFORE YOU BEGIN

- Observe local plumbing codes.
- Construct adequate stud frame support for the lavatory according to the instructions packed with the lavatory.

1. PREPARE THE SITE

NOTE: Assemble the pedestal on a clean, soft surface to avoid damage.


NOTE: Assemble this pedestal upside down to ease assembly.

The two back leg sections each have two notches at the end of the support brace. The remaining leg section is the front leg section, and it has one notch. Locate the front leg section, and identify it with a piece of masking tape.

Assemble the retainer hub to one of the leg sections with a bolt. Use a 1/4" hex wrench to turn in the bolt, but do not tighten securely at this time.

Use the 1/4" hex wrench and bolts to assemble the remaining two leg sections to the retainer hub. Do not tighten securely.


Thread the three levelers all the way into the pedestal legs.

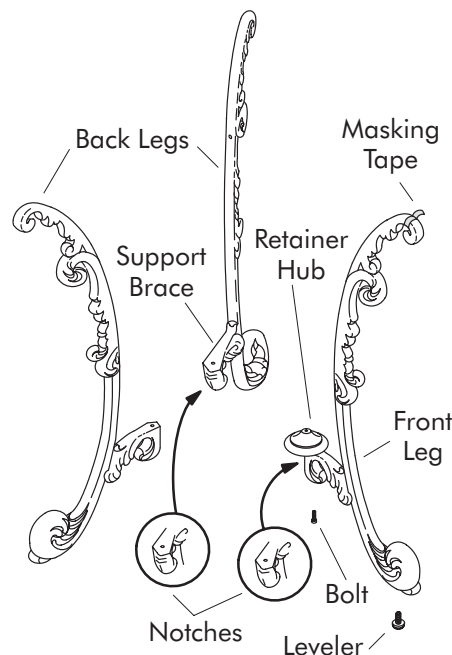

Stand the pedestal upright.
Position the center brace in the pedestal so the opening faces away from the marked front leg section. Attach the center brace to the pedestal legs with three bolts. Use a 1/4" hex wrench to turn in the bolts. After all three bolts have been started, securely wrench tighten.

Use the 1/4" hex wrench to securely wrench tighten the leg sections to the retainer hub.

Install the threaded rod and acorn nut to the retainer hub. Securely handtighten.

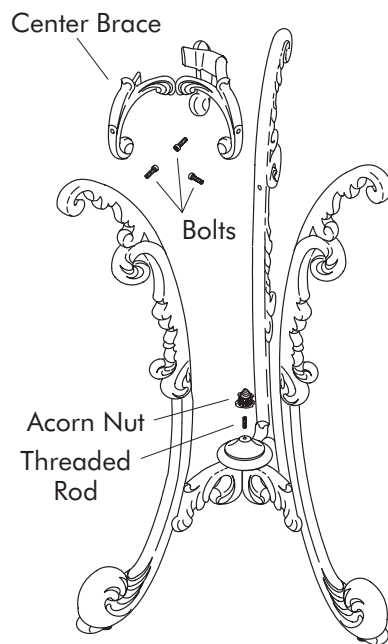


Move the assembled pedestal into position along the reinforced section of the finished wall so the marked front leg faces outward.

Adjust the placement of the pedestal so the outside edge of the back legs is 5-5/8" (14.3cm) from the finished wall.

Remove and discard the masking tape marker.

Install the lavatory to the wall according to the installation instructions packed with the lavatory.

Adjust the levelers as needed to ensure even three-leg contact with the lavatory surface.

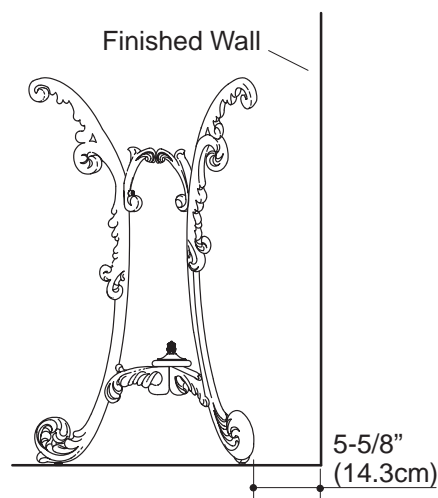

CALL US FOR HELP

Questions? Problems? First review the installation instructions to ensure correct installation. For additional assistance, call our Customer Service Department for direct help. You may also contact us at our web site listed below.

In the U.S.A., call 1-800-4-KOHLER

In Mexico, call 001-877-680-1310

In Canada, call 1-800-964-5590

THE BOLD LOOK
OF **KOHLER**®

www.kohlerco.com