

customerservice@arnsberg.com

www.arnsberg.com

ASSEMBLY INSTRUCTIONS

ALESSANDRO VOLTA

527580101/02

Technical Data

Power: 2. 2 W

Operating Voltage: DC 3. 7 V

• Luminous flux 192LM

• LED PHILIP 3014 / 20PCS


Lithium Battery: 18650/2200 MAH*2

Charge: 5-7 HrsWork time: 12 Hrs

Class: II

Safety type: IP54

Parts Included



CSA / UL Safety Requirements

CSA/UL requires that these IMPORTANT SAFETY INSTRUCTION be listed:




Care Instructions

Arnsberg suggests using only a micro fiber cleaning cloth to clean this fixture. If required, a slightly damp cleaning cloth may be used to spot clean. Do not use common household cleaners on this fixture, as the final finish may be damaged as a result. Enjoy your new Arnsberg fixture.



www.arnsberg.com

Assembly:

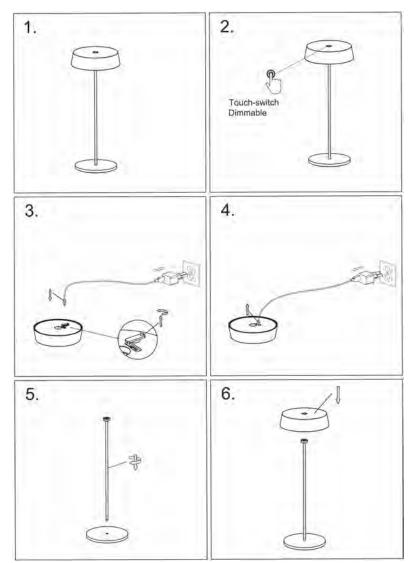

This lamp is equipped with safety overcharge protection.

ASSEMBLY INSTRUCTIONS

ALESSANDRO VOLTA

527580101/02

Operating

- 1. Before the first use, lift the silicone protective cover from the lamp head to charge.
- 2. Insert the charging port to the lamp, and charge for 5-7 hours until the indicator light is green.
- 3. Tap button to turn on/off
- 4. Press and hold button to dim light gradually.
- 5. When the lamp's battery is low, the light will turn off.
- 6. Apply pressure to the base to remove LED module. Reconnect to power to charge.