




Tissue Holder – Model D35109230

Thank you for selecting DXV by American Standard. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.



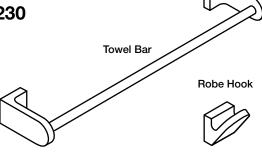

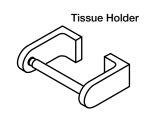











Tissue Holder

# **ROUGHING-IN DIMENSIONS:**

• For reference

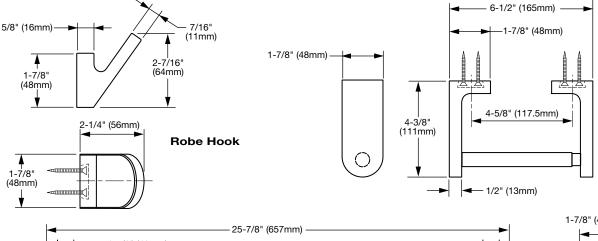

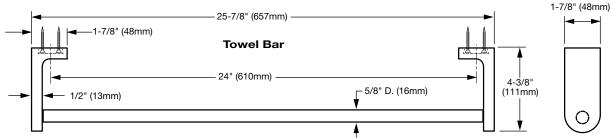

#### In the United States:

DXV by American Standard One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

#### In Canada:

DXV by American Standard 5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

#### In Mexico:

DXV by American Standard Via Morelos 330 Col. Santa Clara Coatitla Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200 www.DXV.mx

# INSTALL WALL BRACKET

- The wall mounted accessories works best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the WALL MOUNTED ACCESSORIES are to be installed on a tile or plaster wall, the ANCHORS (3) and SCREWS (2) should be used.
- Determine desired height and location (optional) and mark a center line. IMPORTANT: The \*center line for the MOUNTING PLATE (1) must be level or the wall accessory will not mount level. Using the MOUNTING PLATE (1) as a template mark the two spots for the ANCHORS (3). If MOUNTING PLATE (1) is secured to a stud or cross brace drill small pilot holes for SCREWS (2).
- For installations on drywall or tiled walls: Use ANCHORS (3) and SCREWS (2) for securing MOUNTING PLATE (1) to finished wall. Drill two 1/4" dia. holes a minimum of 1-3/4" deep. Insert the two ANCHORS (3) flush with face of the finished wall.
- Secure MOUNTING PLATE (1) to wall with SCREWS (2).

### 2 INSTALL ROBE HOOK and TISSUE HOLDER

