
NOTES

- 1. MODEL SP11FC IS DESIGNED FOR 1.2 GPM FLOW.
- ASSEMBLY INSTRUCTIONS:

5

- STEP 1. REMOVE OLD EYEWASH HEAD
- STEP 2. MAKE SURE THREADS ARE CLEAN.
- STEP 3. SCREW ON NEW EYEWASH HEAD UNTIL HAND TIGHT. <u>DO NOT USE PIPE SEALANT AS THIS COULD DAMAGE EYEWASH HEAD.</u>
- TEFLON TAPE CAN BE USED BUT NOT REQUIRED.

STEP 4. TURN ON VALVE & CHECK FLOW PATTERN USING EYEWASH GAGE PER ANSI Z358.1.

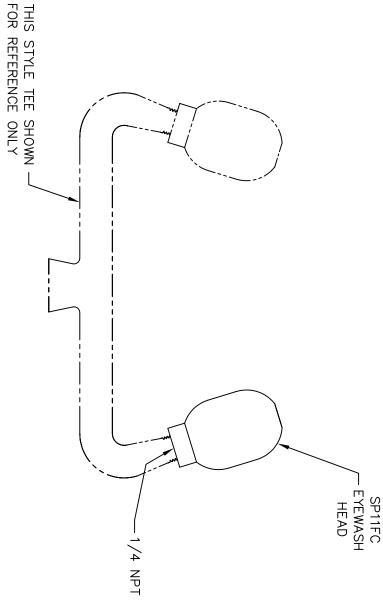

Phon
Have Mrg Pro

MODEL: SP1

INFO FAX : 1—888—FAX—HAWS (1—888—329—4297) 1455 Kleppe Ln, Sparks NV, 89431 Phone: 775—359—4712 Fax: 775—359—7424 Haws An Barchera 3 CH—3401 Rigraforf Switzerland

Phone: 775-359-4712 Fax: 775-359-7424
ws Ag Bachweg 3 CH-3401 Burgdorf Switzerland
ws Ag Bechweg 4 Sungei Kadut Loop Singapore 729531
li: Haws@hawsco.com website: www.hawsco.com

DWG. NO. 14845A00