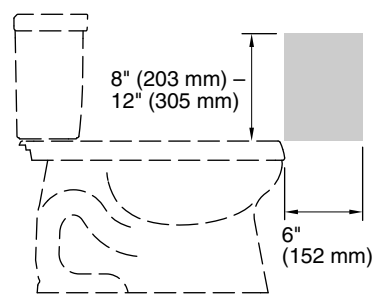

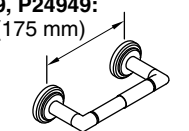
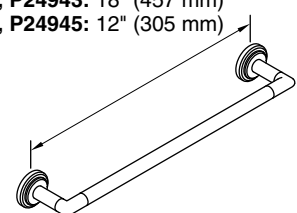
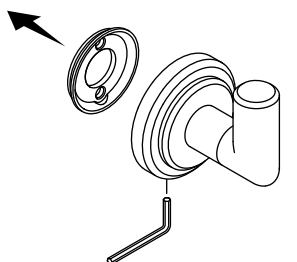
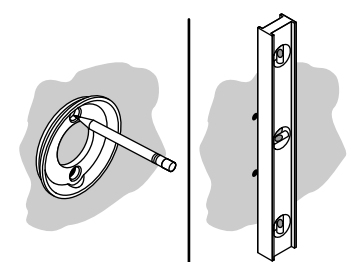
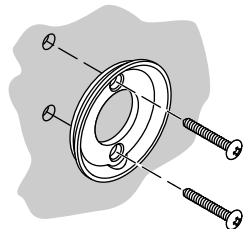
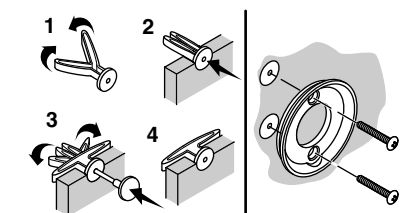
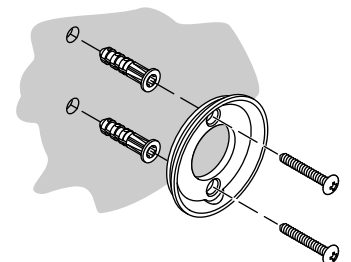
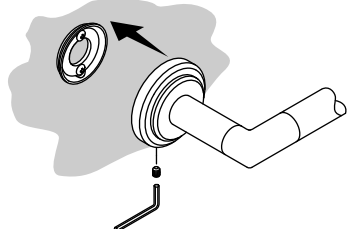


<p>Record your model number below for future reference:</p>	<p>⚠ CAUTION: Risk of personal injury. Do not install where the product might be used as a grab or support bar.</p>	<p>Important Information These products should be located and mounted to a wall stud. While it is possible to mount them to any surface, a stud mounted product will yield the best results.</p>	<p>Recommended Tissue Holder Location</p> 	<p>1 Two-Post Accessories: Verify "X" against the measurements of your product model.</p>  <p>P24939, P24949: 6-7/8" (175 mm)</p>  <p>P24931, P24941: 24" (610 mm) P24933, P24943: 18" (457 mm) P24935, P24945: 12" (305 mm)</p> 	<p>2 For All Installations: Loosen the setscrew and remove the wall plate from the accessory.</p> 
<p>3 Single-Post Accessories: Position the wall plate and mark the holes. Verify plumb.</p> 	<p>4 Drywall Into Studs: Drill 1/8" holes. Secure the wall plate(s).</p> 	<p>Drywall Between Studs: Drill 5/16" holes. Use the provided pin to install the drywall anchors. Secure the wall plate(s).</p> 	<p>Ceramic Tile: Drill 1/4" holes. Insert ceramic anchors. Secure the wall plate(s).</p> 	<p>5 For All Accessories: Position the accessory onto the wall plate(s). Tighten the setscrew(s).</p> 	

FIVE-YEAR LIMITED WARRANTY

All Kallista products carry Kallista's five-year limited warranty unless otherwise noted.*

Kallista products are warranted to be free of defects in material and workmanship for five years from the date of installation.

Kallista will, at its election, repair, replace, or make appropriate adjustment where Kallista inspection discloses any such defects occurring in normal usage within five (5) years after installation. Kallista is not responsible for removal or installation costs. Damages due to improper handling, installation or maintenance are not considered manufacturing defects and are not covered by this warranty. This warranty is valid for the original consumer purchaser only. Use of in-tank toilet cleaners will void the warranty.

To obtain warranty service, contact your Kallista Authorized Showroom.

IMPLIED WARRANTIES INCLUDING THAT OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. KALLISTA AND/OR SELLER DISCLAIMS ANY LIABILITY FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Some states/provinces do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of special, incidental or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state/province to state/province.

This is Kallista's exclusive written warranty.

* Kallista's Hampstead and Stafford vitreous products, stainless steel accessories, and wooden accessories carry a one-year Limited Warranty.

Questions? Problems? For additional assistance, please contact KALLISTA's Customer Service Department at 1-888-4-KALLISTA (1-888-452-5547) or kallista.com.