

Top of 80" Panel 84" Panel will extend above this template Directions For Using Templates: 1/2" (12 mm) 1/2" (12 mm) 4 mm) 1. Align template bottom with bottom of door/drawer panel. 2. Tape the template of the door/drawer panel. 5/16" (84 3. Drill all of 0.125" pilot holes. 4. Remove the template from the panel. \Im Solid Door Template Custom Panel 3/4" (20 mm) 1/2" (12 mm) Pilot holes 0.125" diameter, 0.300" depth 3 - 5/16" (84 mm) Important: Before drilling holes for brackets, please make 2 - 7/16" (62 sure they do not line up with thin areas on the panel. , 0, 1/2" (12 mm) 1/2" (12 mm) - 13/16" (224 mm) 13/16" (224 mm) ∞ ∞ 6" (152.4 mm) ART IS CORRECT IN SIZE AND SCALE WHEN LINE LENGTH IS CORRECT 31-1000149 01-19



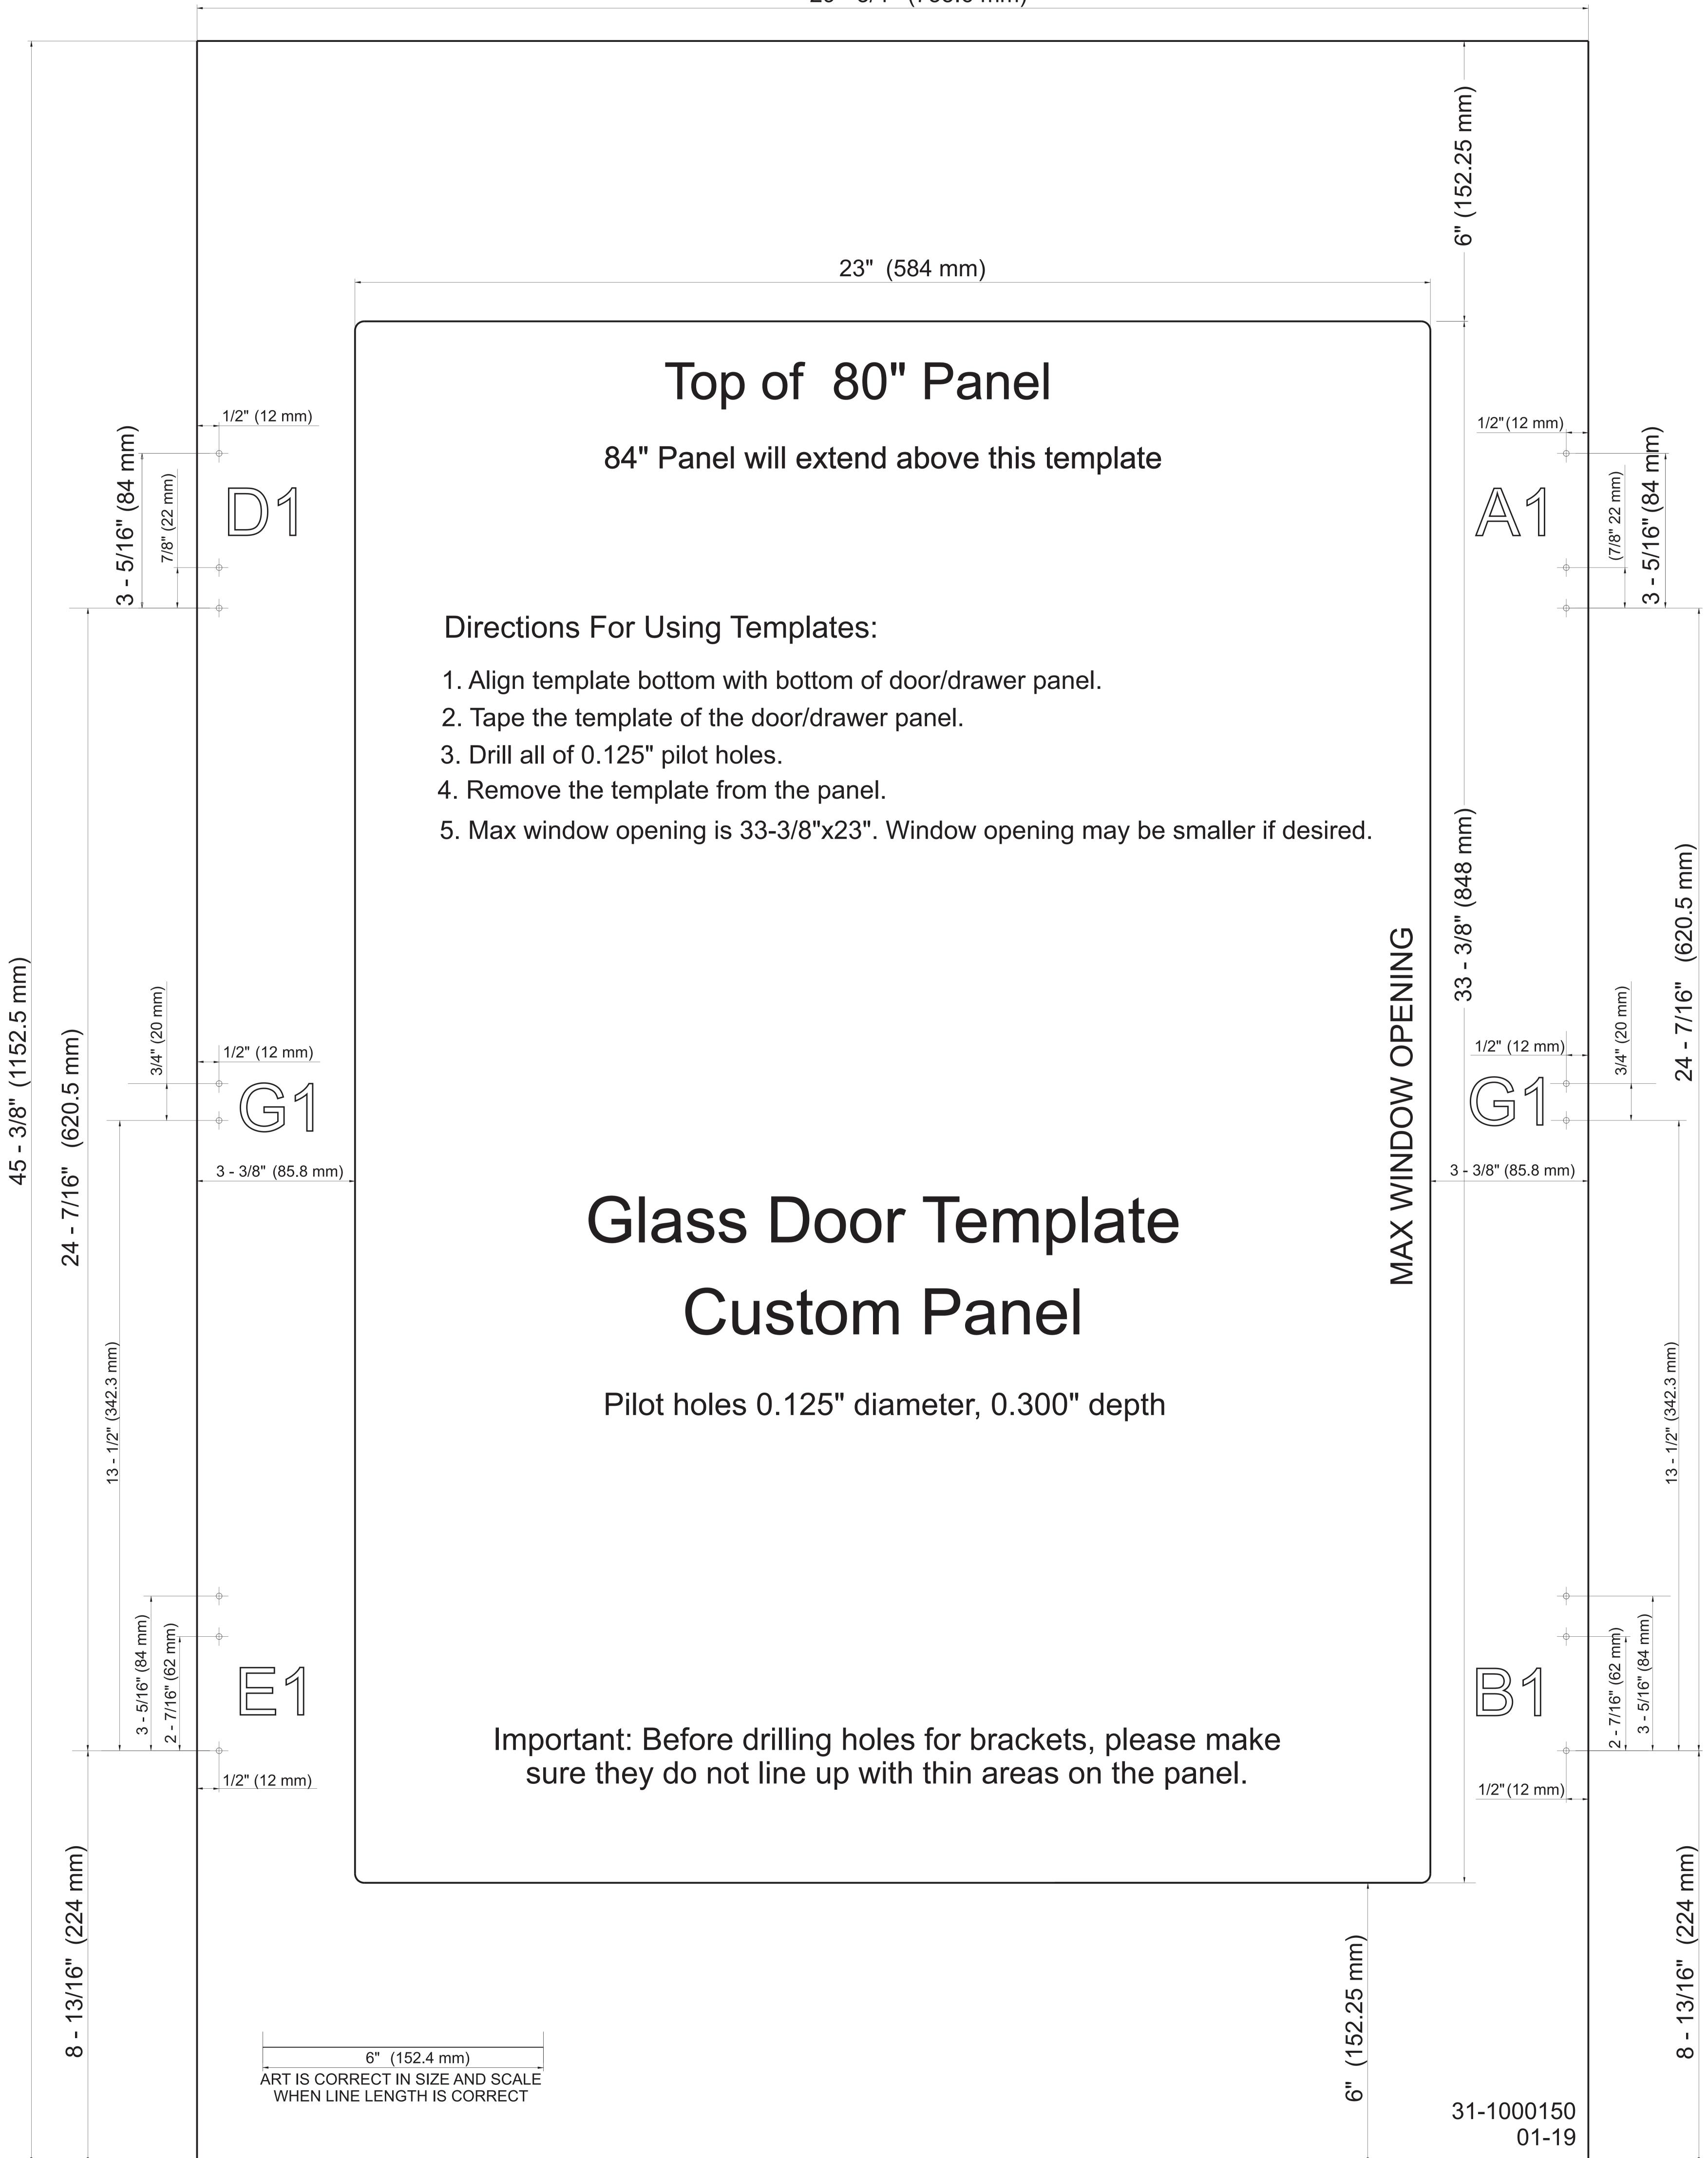

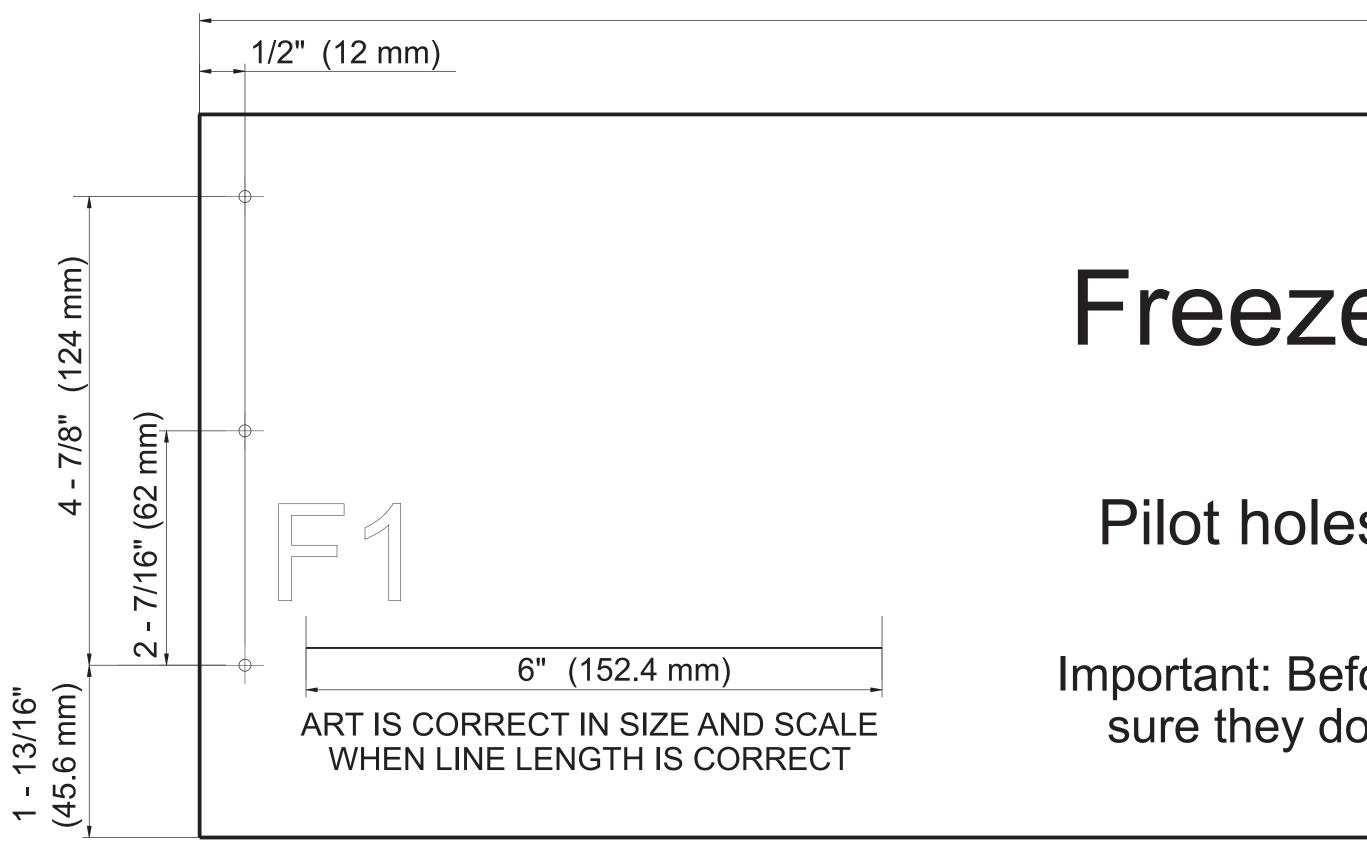

Top of Panel Freezer Drawer Template Custom Panel

Pilot holes 0.125" diameter, 0.300" depth

Important: Before drilling holes for brackets, please make sure they do not line up with thin areas on the panel.

