

Description

Exposed, Battery Powered, Sensor Activated Sloan ECOS® Electronic Dual Flush Bedpan Washer Model Water Closet Flushometer for floor mounted or wall hung top spud bowls.

Flush Cycle

□ Full Flush (Large Button) / 1.6 gpf/6.0 Lpf Reduced Flush (Small Button) / 1.1 gpf/4.2 Lpf

Specifications

Quiet, Exposed, Diaphragm Type, Chrome Plated Closet Flushometer for either left or right hand supply with the following features:

- If the user is present for less than one minute and leaves the sensing zone or chooses the small override button, a reduced flush initiates (1.1 gpf/4.2 Lpf) eliminating liquid and paper waste, saving 1/2 gallon of water
- If the user is present for greater than one minute and leaves the zone or chooses the large override button, the full flush initiates (1.6 gpf/6.0 Lpf) eliminating solid waste and paper Reduces water volume by up to 30% when a reduced flush occurs
- PERMEX[®] Synthetic Rubber Diaphragm with twin linear filtered bypass and vortex cleansing
- action
- · Flex Tube Diaphragm designed for improved life and reduced maintenance
- ADA Compliant Sloan ECOS® Electronic Dual Flush Battery Powered Infrared Sensor for automatic "No Hands" operation
- Infrared Sensor with Multiple-focused, Lobular Sensing Fields for high and low target • detection
- Latching Solenoid Operator
- · Engineered Metal Cover with replaceable Lens Window
- User friendly three (3) second Flush Delay
- Courtesy Flush® Override Button
- Four (4) Size AA Batteries factory installed
- "Low Battery" Flashing LED
- Infrared Sensor Range Adjustment Screw
- Initial Set-up Range Indicator Light (first 10 minutes)
- Chrome Plated Metal Handle Cap •
- 1" I.P.S. Screwdriver Bak-Chek® Angle Stop
- Free Spinning, Vandal Resistant Stop Cap and Adjustable Tailpiece
- High Back Pressure Vacuum Breaker Flush Connection with One-piece Bottom Hex Coupling Nut
- Spud Coupling and Flange for 11/2" Top Spud •
- Sweat Solder Adapter w/Cover Tube and Cast Wall Flange w/Set Screw
- High Copper, Low Zinc Brass Castings for Dezincification Resistance
- Fixed Metering Bypass and No External Volume Adjustment to Ensure Water Conservation ٠
- Flush Accuracy Controlled by CID Technology
- Diaphragm, Stop Seat and Vacuum Breaker molded from PERMEX® Rubber Compound for • Chloramine resistance
- Buy American Act Compliant

Bedpan Washer Diverter Assembly with the following features:

- · Solid One-piece Body Construction
- Solid Brass Sprav Arm
- Counter Balanced Pivot Assembly
- Diverter Valve Wall Support

Valve Body, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037. Installation conforms to ADA requirements.

Variations

🗆 SG	SaniGuard® Anti-microbial Spray Arm*
□ YI	Two Wall Bumpers (for open front seat without cover)

Offset Vacuum Breaker-Specify: 1" 1-1/2", 2"

* SaniGuard does not protect users or others against disease-causing bacteria.

Special Finishes

D PB	Polished Brass (PVD Finish)
D BN	Brushed Nickel (PVD Finish)
SF	Satin Chrome

See Accessories Section and OPTIMA Accessories Section of the Sloan catalog for details on these and other OPTIMA Plus® Flushometer variations.

BPW-8111 1.6/1.1

Model





Manual Operation

Sloan ECOS® Electronic Dual Flush Flushometers incorporate intuitive Split-button design for easy manual activation. The small button controls the reduced flush cycle (1.1 gpf/4.2 Lpf), the large button controls the full flush cycle (1.6 gpf/6.0 Lpf). Straightforward graphics alert user to proper activation. Reduced flush for liquid waste, full flush for solid waste. To further educate the user, two (2) instructional wall plates are included with each Sloan ECOS® Flushometer.

Automatic Operation

Sloan ECOS® Electronic Dual Flush Flushometers can also be activated via multi-lobular infrared sensor. By detecting user presence and duration, the Sloan ECOS® Smart Sense Technology™ will determine the proper flush volume for unequalled water efficiency.

Functional & Hygienic

Touchless, sensor operation eliminates the need for user contact to help control the spread of infectious diseases. The Sloan ECOS® Electronic Dual Flush Flushometers are provided with Reduced or Full Flush Override Buttons to allow a "courtesy flush" for individual user comfort.

Warranty

3 year (limited)

Patented D598,976



This space for Architect/Engineer approval			
Job Name	Date		
Model Specified	Quantity		
Variations Specified			
Customer/Wholesaler			
Contractor			
Architect			

Model

BPW-8111 1.6/1.1

Description

Exposed, Battery Powered, Sensor Activated Sloan ECOS® Electronic Dual Flush Bedpan Washer Model Water Closet Flushometer for floor mounted or wall hung top spud bowls.

Flush Cycle

Full Flush (Large Button0) / 1.6 gpf/6.0 Lpf
Reduced Flush (Small Button) / 1.1 gpf/4.2 Lpf

ELECTRICAL SPECIFICATIONS

- Control Circuit
 - Solid State 6 VDC Input 8 Second Arming Delay 3 Second Flush Delay
- Sloan ECOS® Dual Flush Sensor Type Active Infrared
- Sloan ECOS® Dual Flush Sensor Range Nominal 22" - 42" (559 mm -1067 mm), Adjustable ± 8" (203 mm)

OPERATION

 A continuous, invisible light beam is emitted from the Sloan ECOS[®] Dual Flush Sensor.



2. As the user enters the beam's effective range, 22 to 42 inches (559 mm to 1067 mm), the beam is reflected into the Scanner Window to activate the Output Circuit. Once activated, the Output Circuit continues in a "hold" mode for as long as the user remains within the effective range of the sensor. If the user stays longer than 65 seconds, a full flush will automatically initiate when the user leaves.

Battery Type (4) AA Alkaline

Battery Life

Indicator Lights

Sentinel Flush

Operating Pressure

3 Years @ 4,000 Flushes/Month

Range Adjustment/Low Battery

15 - 100 psi (104 - 689 kPa)


Once Every 72 Hours After the Last Flush



 Once a user is detected, if the user leaves in 65 seconds or less, a reduced flush will automatically initiate. The circuit automatically resets and is ready for the next user.



Rough-in

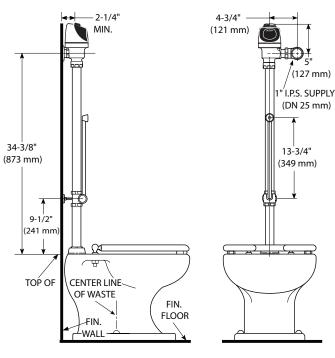

When installing the Sloan ECOS[®] Flushometer in a handicap stall: Per the ADA Guidelines (section 604.9.4) it is recommended that the grab bars be split or shifted to the wide side of the stall.

SLOAN VALVE COMPANY • 10500 SEYMOUR AVENUE • FRANKLIN PARK, IL 60131

Phone: 1-800-982-5839 or 1-847-671-4300 • Fax: 1-800-447-8329 or 1-847-671-4380 • www.sloanvalve.com