



SEF-1801-TW SEF-1801-8-TW **EYESAVER® Combination Faucet** With Tepid Water Supply

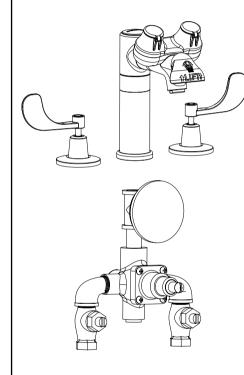

Need Help? For additional assistance or service call:

SPEAKMAN Company 400 Anchor Mill Road New Castle, DE 19720

PHONE: 800-537-2107 EMAIL: customerservice@speakmancompany.com WEB: www.speakmancompany.com

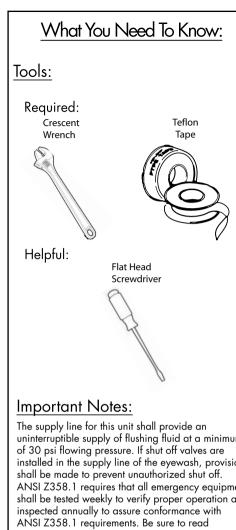

uninterruptible supply of flushing fluid at a minimum installed in the supply line of the eyewash, provisions ANSI Z358.1 requires that all emergency equipment shall be tested weekly to verify proper operation and instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur.


Safety Tips:

Cover your drain to prevent loss of parts. Always wear eye protection.


Maintenance:


Keep the EYESAVER[®] faucet looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.


Turn off water supply. Verify diameter of hole in countertop is a (1)minimum of 1-1/4''. Install mounting studs into base of spout.

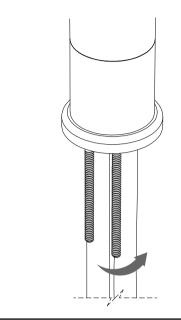


Install bottom washer over hoses and slide up to meet the base of (2)the spout. Place hoses through hole in countertop/sink one at a time. Place spout with studs through hole.

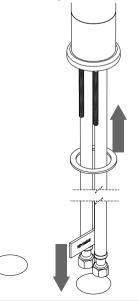

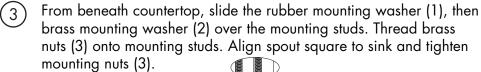


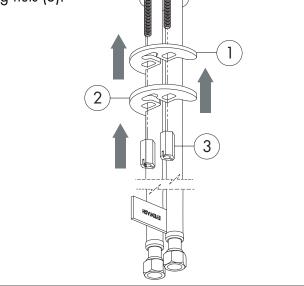


A The end bodies are installed next. First, the end body flange nuts (1) and rubber washers (2) must be removed. At the same time, loosen the mounting nut (3) to lower the cup washer. Repeat process for the blue (COLD) end body.

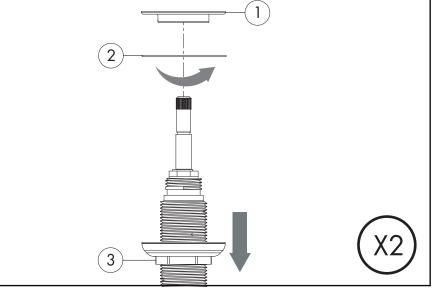


5 Locate end body with a red marking. From below, position the red (HOT) end body up through the corresponding hole location in the countertop and loosely secure with rubber washer (1) and end body flange nut (2). Repeat process for the blue (COLD) end body.

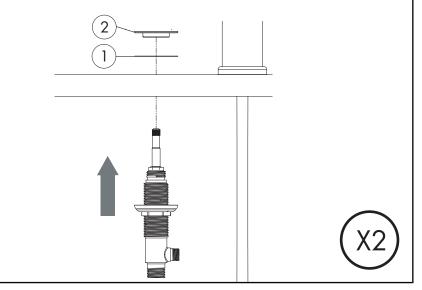


6 While holding the end body from below, tighten end body flange nut until the top is flush with the start of the chamfer (see below). Tighten the set screw (1) to secure this position. Repeat for the blue (COLD) end body.

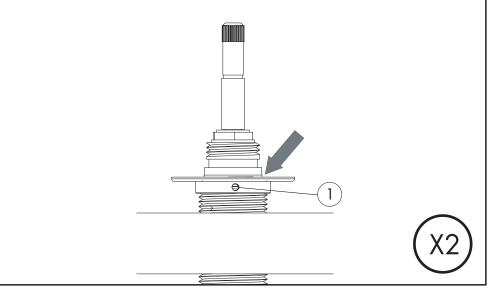

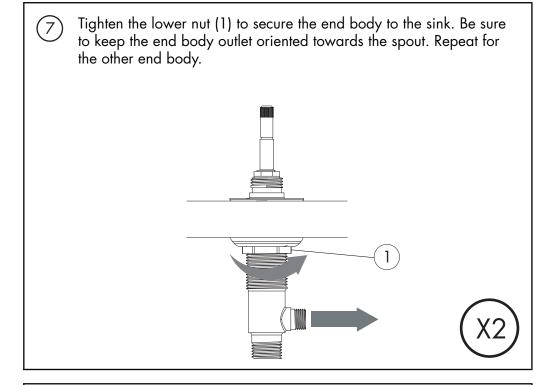


Prepare the SE-370 for mounting by applying Teflon tape to the larger 1/2" threads of adapters. Install and wrench tighten adapters in the 3 positions shown below.


(8)

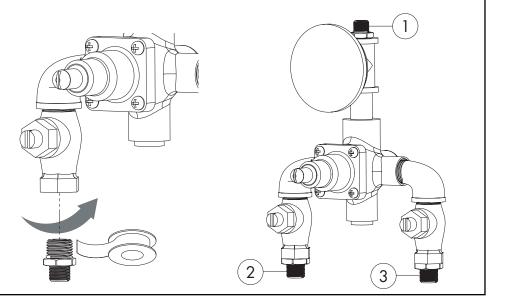



Mount the SE-370 to wall using 1/2" pipe hangers with wall plates (not included), no more than 18" below the countertop. Be sure to mount the SE-370 in a location that will not interfere with the drain assembly or wall stops. Refer to the rough in on the last page during installation.

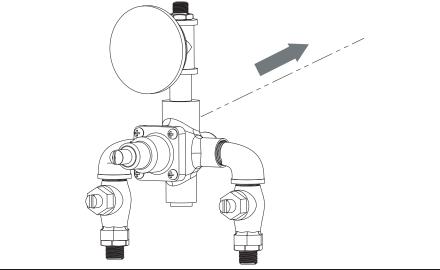


10 Retrieve the two 6" long stainless steel hoses from the box. Connect one to the COLD supply valve, and the other to the HOT supply valve. Wrench tighten both connections.

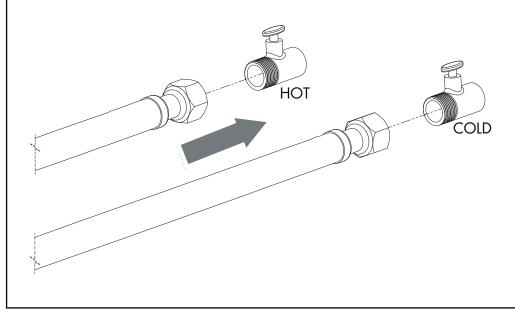


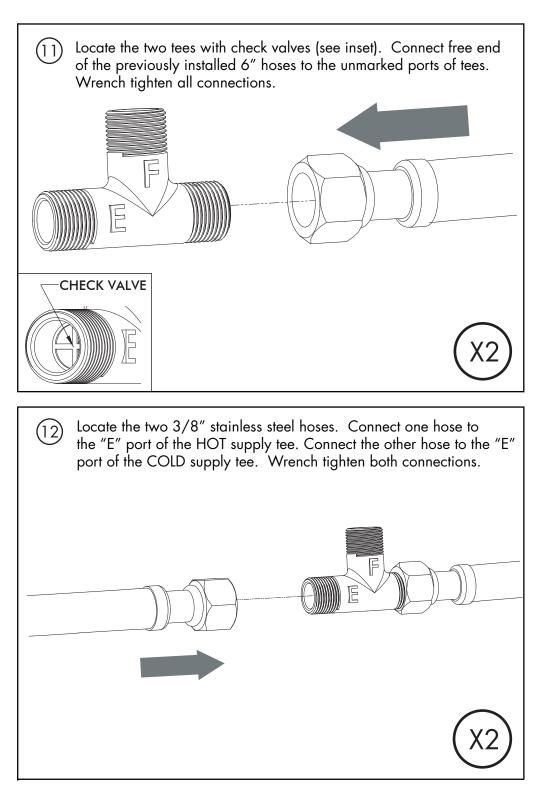

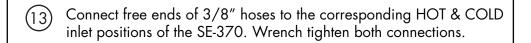


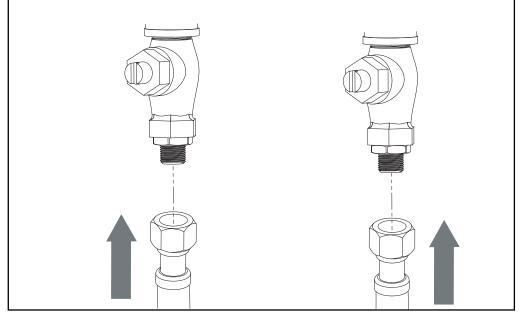


(14) Connect pre-installed eyewash hose from the base of the spout body to the outlet port of the SE-370. Wrench tighten connection.

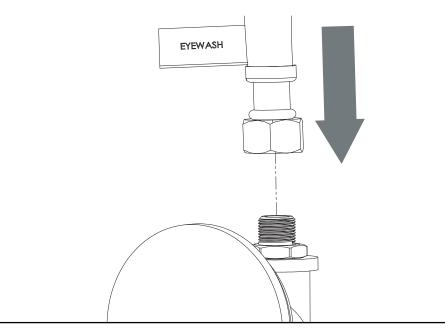

(15) Retrieve supplied hose with a 3/8" fitting on one end, and a 1/2" fitting on the other. Connect 3/8" fitting end to the "F" port of the COLD tee with check valves. Wrench tighten. Repeat for HOT tee.

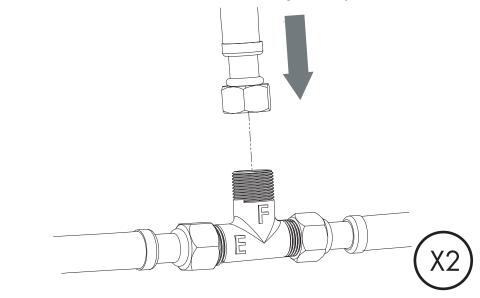


Connect the remaining end of the hose (with 1/2" fitting) to the bottom port of the COLD end body. Wrench tighten. Repeat for the HOT end body.

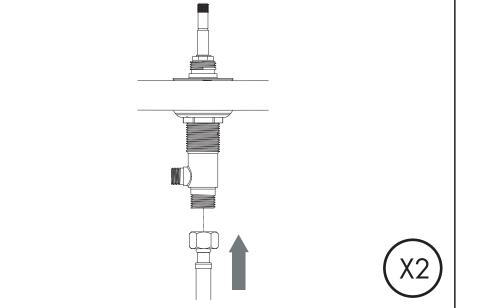




Retrieve the supply tee with no check valves. Connect the "F" port of the supply tee to the remaining hose pre-installed in the base of the SEF-1801. Wrench tighten.

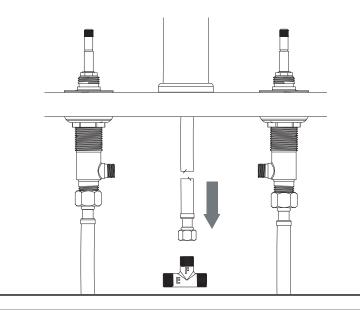


18 Retrieve the two (2) remaining supplied hoses. Take the first hose and connect one end to the "E" port of the supply tee with no check valves. Connect the other end to the 3/8" port of the HOT end body. Wrench tighten.




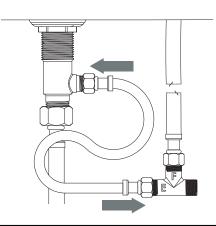

Connect one end of the remaining hose to the blank port of the supply tee with no check valves. Connect the remaining end to the 3/8" port of the COLD end body. Wrench tighten.

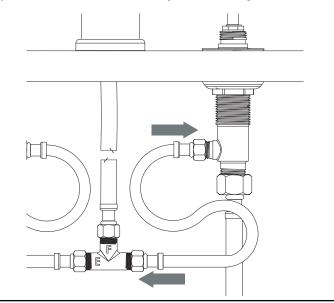


20 The handle trim can now be installed. Place flange (1) over spindle and lower onto end body. Thread collar (2) onto end body and hand tighten. Repeat for other side.

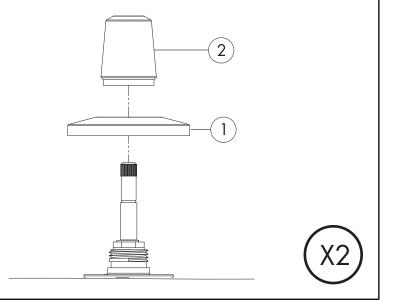




Slide trim sleeve (1) over the spindle, followed by the handle (2), lock washer (3) and screw (4). Tighten screw and install colored index (5). RED=HOT, BLUE=COLD. Repeat for other side.

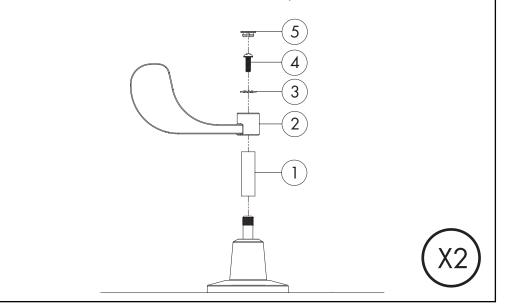




NOTE: Before testing, you must remove tape from Eyewash Caps. Turn on water supplies and check for leaks. Activate Eyewash by lifting activation handle and check for proper function using the chart at the the end of this document. Tepid water supply should be between 65°-95° F. Check the SE-370 manual for temperature adjustment instructions.

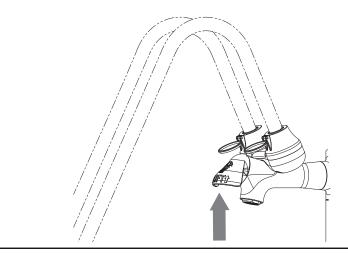



23 Turn on HOT and COLD handles of faucet and allow water to run for <u>one minute</u> to flush any debris from faucet. Turn off faucet and install aerator with supplied aerator wrench.

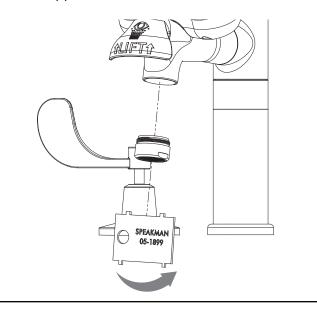

The spout was designed to swivel from left to right. If a <u>non-swivel</u> spout is preferred, remove top cover from body. Remove allen head set screw from position (1) as seen below. Center the spout between the handles and install the previously removed set screw into position (2) and tighten (DO NOT OVERTIGHTEN). Replace cap.

(24)

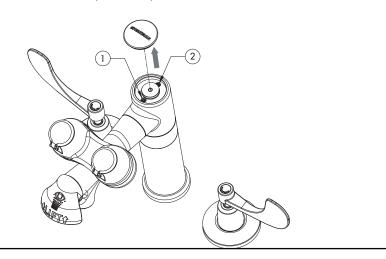

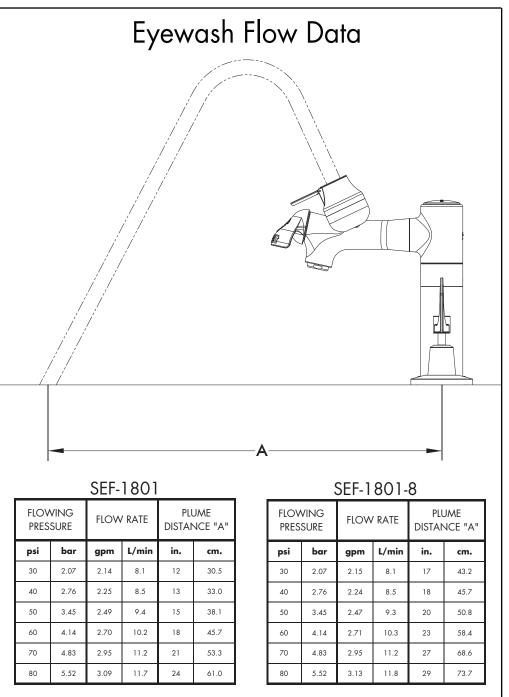

NOTE: If plume heights are low, check to ensure that your supply valves are fully open. If there is a noticeable height difference between the two plumes, remove the aerators and flow controls and remove any debris that would inhibit the flow of water.