

Bone Table Lamp

HT1021 | 1.0

GENERATION LIGHTING PORTABLE


General Product Information:

This product is safety listed for dry locations only.

This instruction shows a typical installation.


SAVE THESE INSTRUCTIONS!

IMPORTANT SAFETY INSTRUCTIONS
This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

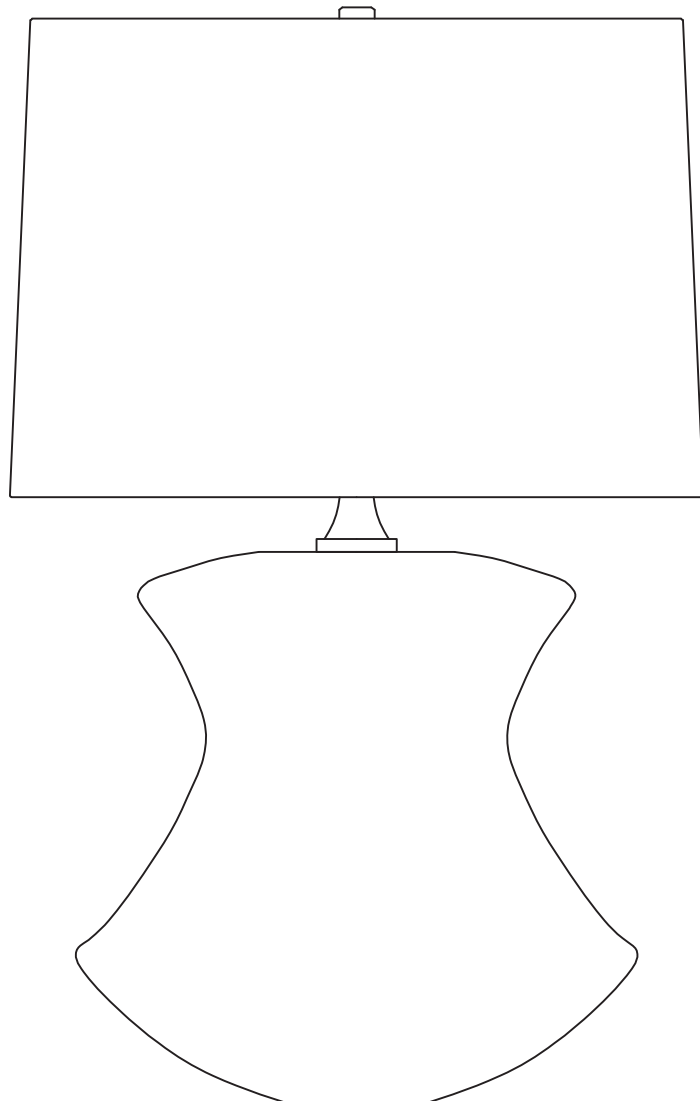

GENERATION LIGHTING
7400 Linder Ave., Skokie, IL 60077
T 847.410.4400 | F 847.410.4500
www.generationlighting.com

Assemble the Lamp

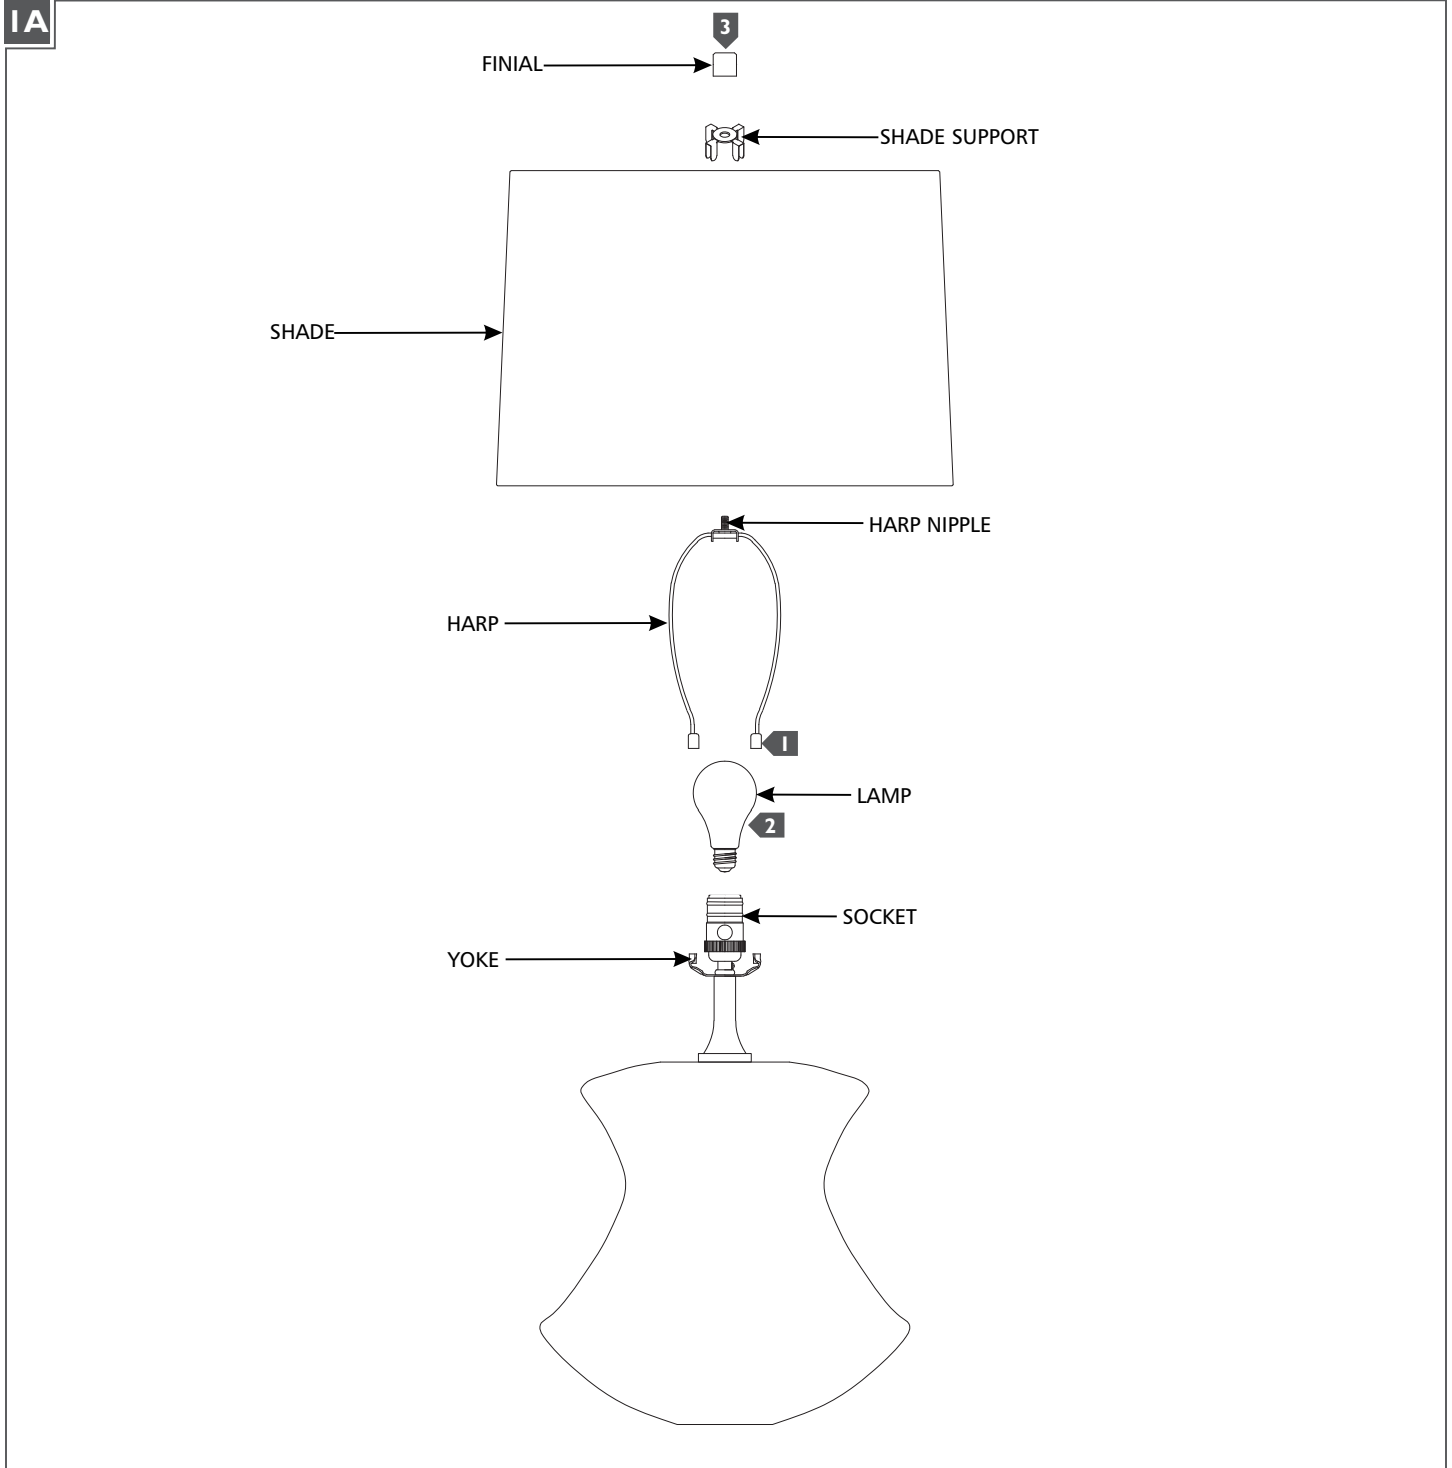

- 1** Install the harp inside the yoke.
- 2** Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.
- 3** Place the shade support and shade on the harp nipple, then secure them in place by screwing the finial onto the harp nipple.