Features Flow T1.11

- Modern Deck-Mounted Hospital Bathroom Faucet
- Single handle lever controls water flow and temperature
- Polished Chrome Finish
- Made of Lead-Free Solid Brass
- Requires Single-Hole Installation
- Includes Ceramic Disc Cartridge
- Flow Rate: 1.5 GPMSpout Reach: 4.4"




## **Finishes**




Polished Chrome

| Col  | 11 | е | С | t | i | 0 | n |
|------|----|---|---|---|---|---|---|
| Flow | 7  |   |   |   |   |   |   |

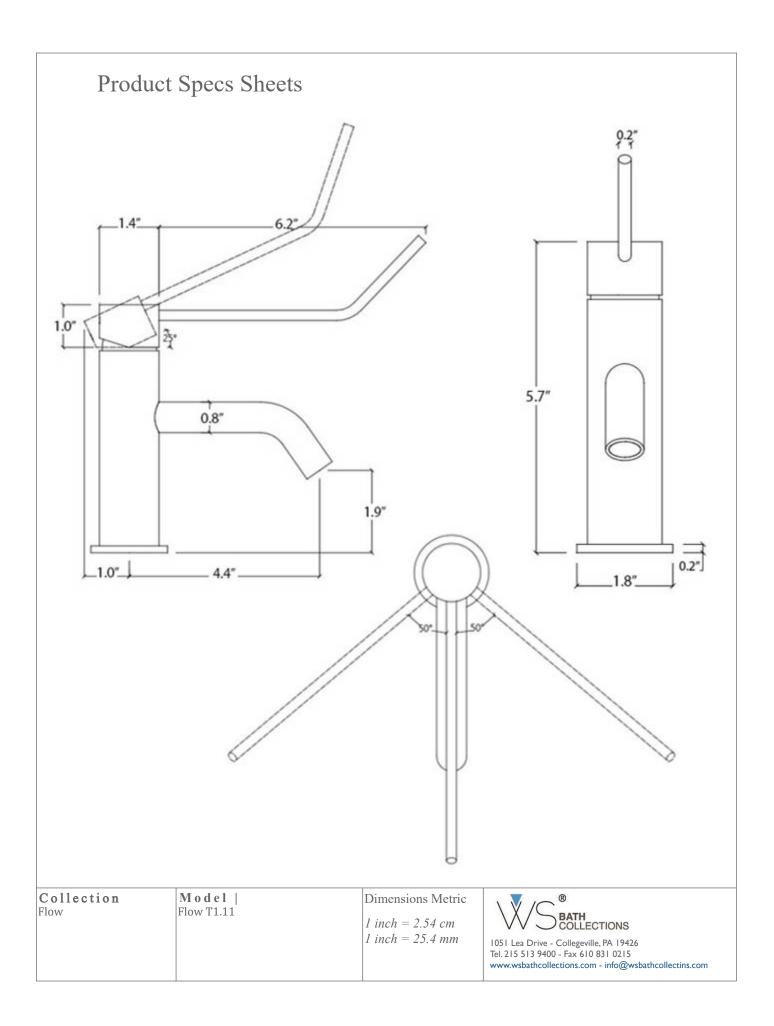

## Product Specs Sheets / Parts Diagram

Note: Item Fully Assembled

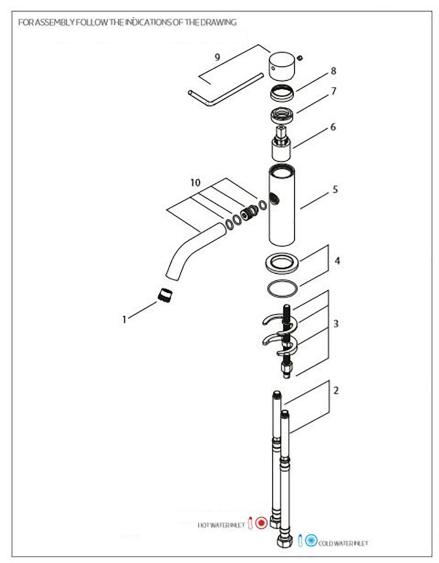

|    | TECHNICAL DATA       |
|----|----------------------|
| No | DESCRIPTION          |
| 01 | AERATOR              |
| 02 | CONNECTION FLEXIBLE  |
| 03 | FIXING KIT           |
| 04 | PLATE                |
| 05 | TAP BODY             |
| 06 | CARTRIDGE            |
| 07 | LOCKNUT              |
| 08 | CARTRIDGES CONCEALER |
| 09 | HANDLE               |
| 10 | SPOUT                |

## INSTALLATION RECOMENDATIONS

Before installing a tap, it is good to rinse the supply pipes to remove all residues. We also recommend installing the taps with a filter. The installation of the tap must be done with the surface clean and dry. to perform the water pressure test, the taps must be open.

## CLEANING AND MAINTENANCE

Cleaning must be done with liquid soap and water. Do not use liquid detergents containing abrasive or acidic substances, abrasive sponges or disinfectants. Incorrect cleaning may permanently ruin the surface of taps.

On color finishings, do not use products containing alcohol, acetone and other solvents.

| C    | 0 | 1 | 1 | е | С | t | i | 0 | n |  |
|------|---|---|---|---|---|---|---|---|---|--|
| Flow |   |   |   |   |   |   |   |   |   |  |