

SeekTech® ST-510

10 Watt Pipe and Cable Line Transmitter

Operator's
Manual



⚠️ WARNING!

Read this operator's manual carefully before using this tool. Failure to understand and follow the contents of this manual may result in electrical shock, fire and/or serious personal injury.

RIDGID®

Table of Contents

GENERAL SAFETY INFORMATION	2
TRANSMITTER COMPONENTS	5
KEYPAD	6
DISPLAY SCREEN	6
GETTING STARTED	7
INSTALLING/CHANGING BATTERIES.....	7
OPERATION TIME	7
OPTIONAL EXTERNAL POWER SOURCE.....	7
POWERING UP/DOWN.....	8
SOUNDS OF THE SEEKTECH TRANSMITTER.....	8
USING THE ST-510 LINE TRANSMITTER	8
DIRECT CONNECT METHOD	9
USEFUL OPERATING POINTS	11
INDUCTIVE CLAMP	12
INDUCTIVE MODE	12
FEATURES	13
48' (16M) COIL CORDS	13
AUTO BACK LIGHT	13
HIGH VOLTAGE INDICATOR.....	13
MAIN MENU	13
BATTERY SAVER MODE	14
AUTO SHUT OFF ADJUSTMENT.....	14
OTHER MANUFACTURERS MENU	15
ADJUSTING THE LCD SCREEN CONTRAST	15
USEFUL INFORMATION	16
RESISTANCE AND IMPEDANCE	16
USING HIGH AND LOW FREQUENCIES	16
FCC LIMITS	17
TRANSPORTATION AND STORAGE.....	17
MAINTENANCE AND CLEANING	17
SERVICE AND REPAIR	17
TROUBLE SHOOTING GUIDE.....	19
SPECIFICATIONS	18
FREQUENCIES	20
EXACT FREQUENCIES	20
MANUFACTURERS FREQUENCY TABLE (SEE PAGE 14).....	20
WARRANTY	23

RIDGID[®]**SeekTech[®] ST-510 Line Transmitter****SeekTech[®] ST-510 Line Transmitter**

Record the Serial Number and Software Version of your unit below and retain for your records.

Serial
Number

Software
Version

General Safety Information



WARNING

Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury

SAVE THESE INSTRUCTIONS!

Work Area Safety

- **Keep your work area clean and well lit.** Cluttered benches and dark areas may cause accidents.
- **Do not operate electrical devices or power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or heavy dust.** Electrical devices or power tools create sparks, which may ignite the dust or fumes.
- **Keep bystanders, children, and visitors away while operating tool.** Distractions can cause you to lose control.

Electrical Safety

- **Do not attach the leads to a high voltage line.**
- **Do not operate the system with electrical components removed.** Exposure to internal parts increases the risk of injury.
- **Avoid exposure to rain or wet conditions.** Keep battery out of direct contact with water. Water entering electrical devices increases the risk of electric shock.
- **Use only in the manner specified.** Protection provided by the equipment may be impaired if used in a manner not specified by the manufacturer.
- **Do not open the transmitter case.** High voltages are present and no serviceable parts are available.

Battery Precautions

- **Use only the size and type of battery specified. Do not mix cell types (e.g. do not use alkaline with rechargeable).** Do not use partly discharged and fully charged cells together (e.g. do not mix old and new).
- **Recharge batteries with charging units specified by the battery manufacturer.** Using an improper charger can overheat and rupture the battery.
- **Properly dispose of the batteries.** Exposure to high temperatures can cause the battery to explode, so do not dispose of in a fire. Some countries have regulations concerning battery disposal. Please follow all applicable regulations.

Personal Safety

- **Avoid Traffic. Pay close attention to moving vehicles when using on or near roadways. Wear visible clothing or reflector vests.** Such precautions may prevent serious injury.
- **Stay alert, watch what you are doing and use common sense.** Do not use tool while tired or under the influence of drugs, alcohol, or medications. A moment of inattention while operating tools may result in serious personal injury.
- **Gloves should always be worn for health and safety reasons.** Sewer lines are unsanitary and may contain harmful bacteria and viruses.
- **Do not overreach. Keep proper footing and balance at all times.** Proper footing and balance enables better control of the tool in unexpected situations.
- **Use safety equipment.** Always wear eye protection. Dust mask, non-skid safety shoes, hardhat, or hearing protection must be used for appropriate conditions.
- **Use proper accessories.** Do not place this product on any unstable cart or surface. The product may fall causing serious injury to a child or adult or serious damage to the product.
- **Prevent object and liquid entry.** Never spill liquid of any kind on the product. Liquid increases the risk of electrical shock and damage to the product.

SeekTech Line Transmitter Use and Care

- **Use equipment only as directed.** Do not operate the transmitter unless proper training has been completed and the owner's manual read.
- **Do not immerse the antennas or case in water. Store in a dry place.** Such measures reduce the risk of electric shock and equipment damage.
- **Store idle tools out of the reach of children and other untrained persons.** Tools are dangerous in the hands of untrained users.
- **Maintain tools with care.** Properly maintained tools are less likely to cause injury.
- **Check for breakage of parts, and any other conditions that may affect the transmitter's operation.** If damaged, have the tool serviced before using. Many accidents are caused by poorly maintained tools.
- **Use only accessories that are recommended by the manufacturer for your tool.** Accessories that may be suitable for one tool may become hazardous when used on another tool.
- **Keep handles dry and clean, and free from oil and grease.** Allows for better control of the tool.
- **Protect against excessive heat.** The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

Service

- **Tool service must be performed only by qualified repair personnel.** Service or maintenance performed by unqualified repair personnel could result in injury.
- **When servicing a tool, use only identical replacement parts.** Follow instructions in the maintenance section of this manual. Use of unauthorized parts or failure to follow maintenance instructions may create a risk of electrical shock or injury.
- **Provide proper cleaning.** Remove batteries before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

- **Conduct a safety check.** On completion of service or repair of this product, ask the service technician to perform checks to determine the product is in proper operating condition.
- **Damage to the product that requires service.** Remove the batteries and refer servicing to qualified service personnel under any of the following conditions:
 - If liquid has been spilled or objects have fallen into product;
 - If product does not operate normally by following the operating instructions;
 - If the product has been dropped or damaged in any way;
 - When the product exhibits a distinct change in performance.

CAUTION

Remove batteries entirely before shipping.

If you have any questions regarding the service or repair of this machine, call or write to:

Ridge Tool Company
 Technical Service Department
 400 Clark Street
 Elyria, Ohio 44035-6001
 Tel: (800) 519-3456
 E-mail: TechServices@ridgid.com
www.ridgid.com

In any correspondence, please give all the information shown on the nameplate of your tool including model number and serial number. Provide software version if applicable (see page 8).



DANGER

The ST-510 transmitter is intended for use with a SeekTech locator/reciever. SeekTech locators are diagnostic tools that sense electromagnetic fields emitted by objects underground. They are meant to aid the user in locating these objects by recognizing characteristics of their field lines and displaying them on the screen. As electromagnetic field lines can be distorted and interfered with it is important to verify the location of underground objects before digging.

Exposing the utility is the only way to verify its existence, location and depth. Ridge Tool Co., its affiliates and suppliers, will not be liable for any injury or any direct, indirect, incidental or consequential damages sustained or incurred by reason of the use of the NaviTrack.

Note: Connection To Energized Conductors

The line transmitter is designed to withstand up to 240 VAC 50/60 Hz excitation between the two leads. The user is cautioned *not* to deliberately connect to live power lines. The protection is *not* intended to be used continuously. If the transmitter indicates the presence of high voltage, *use high voltage precautions to carefully disconnect the line transmitter from the high voltage source.*

The line transmitter is normally powered by internal batteries, and is designed to protect the user from voltages up to 240 VAC that may be accidentally encountered. Powering the line transmitter by batteries provides the highest level of isolation and safety, and is therefore the recommended power source.

The line transmitter may also be powered by an optional external power supply. The user must ensure that the external power source is fully isolated from ground and from the power mains. The user is cautioned to use only external power sources recommended by the manufacturer. If a line transmitter is powered by an external source that is not isolated from ground and from the power mains, the line transmitter is not protected from connection to live power lines! The line transmitter may be destroyed and may present a safety hazard. **DO NOT USE NON-ISOLATED POWER SUPPLIES WITH THE LINE TRANSMITTER.**

Wear appropriate heavy soled footwear as you would when working with any high-voltage equipment.


DANGER

If the line transmitter is powered by a vehicle 12 VDC cigarette lighter connection, and the line transmitter is connected to a power line, the vehicle is now connected to that power line. The vehicle is now at a potentially lethal voltage. If the vehicle is grounded, the line transmitter may be destroyed.

European Frequency Set

The Seektech ST-510 as delivered in Europe is slightly different than the ST-510 delivered in U.S. Markets.

European frequencies are limited to 95 KHz. The version of the ST-510 for European markets has a top frequency of 93 KHz. The U.S. version has a 262 kHz frequency capability.

93 Kiloherz Frequency Use

The default 93 kHz frequency has an actual cycle count of 93,696 cycles per second.

Some older transmitters use a different value for the nominal 93 kHz frequency, 93,622.9 cycles per second.

If you find that your transmitter signal at 93 kHz cannot be detected by your receiver, set the transmitter's frequency to 93-B kHz, which is set to the older value. Both 93 and 93-B frequencies can be found under the Manufacturer's Menu. (See page 20.)


DANGER

ALWAYS HOOK UP LEADS FIRST BEFORE POWERING THE UNIT ON TO AVOID SHOCK.

ALWAYS TURN UNIT OFF BEFORE DISCONNECTING LEADS.

ELECTRIC SHOCK MAY RESULT FROM FAILURE TO CONNECT LEADS BEFORE POWERING THE UNIT ON.

Do not handle the transmitter while you are connected directly to ground yourself.

Transmitter Components



Top View

Back View



Bottom View

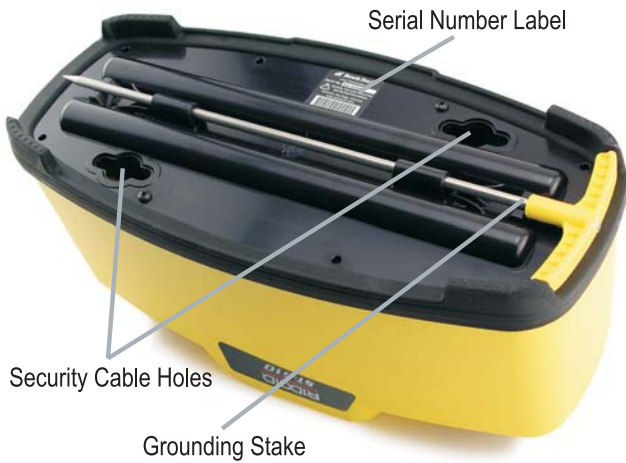


Figure 1: ST-510 Components

Keypad

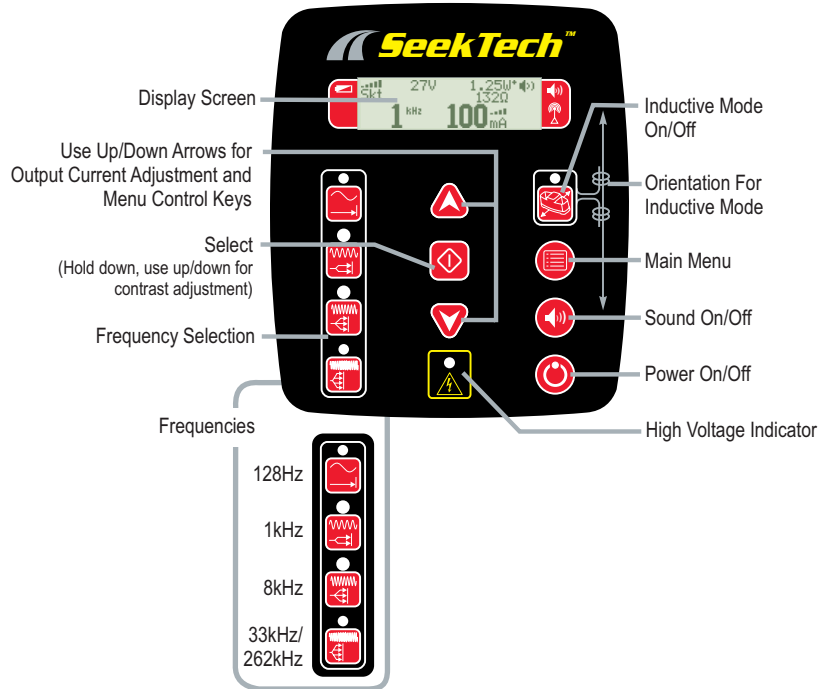


Figure 2: Keypad

Display Screen

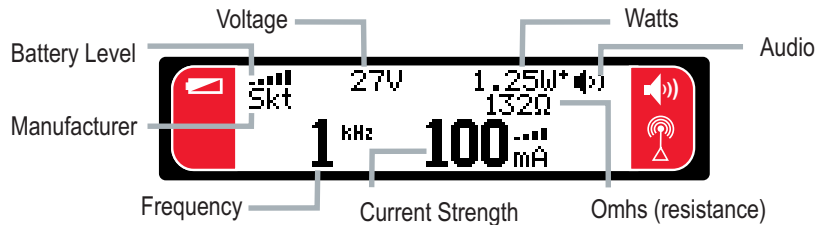


Figure 3: Display Screen

- **Battery Level** - Shows remaining battery power in 5 steps.
- **Manufacturer** – Shows the manufacturer’s frequency set being used (default is SeekTech).
- **Voltage** – Voltage that is applied to the leads. This may say **MAX**, indicating the voltage is at its highest allowable point (~80 V peak-to-peak, ~30V RMS (square wave.))
- **Current Strength** – This is the current flowing through the circuit in milliamps (mA).
- **Sound** – Indicates if sound is ON or OFF.
- **Ohms (resistance)** – This shows the approximate resistance in the circuit. See page 16.
- **Watts (Power)** – Total power that the transmitter is putting out. In Battery Saver mode, this is absent.
- **Frequency** – Frequency being used.

Getting Started

Installing/Changing Batteries

To install batteries into the ST-510 Line Transmitter, turn the knob on the battery holder counter clockwise. The battery carriage will pull out slightly. Pull straight back on the knob to slide out. Insert the batteries as shown on the inside decal.

Fit the carriage into the case and turn the knob clockwise while lightly pushing in to close. The battery carriage can be installed in either orientation.



Figure 4: Inserting Battery Holder

Note: When replacing batteries use 8 D cells that are the same type. Do not mix Alkaline with NiCd (NiCad or Nickel Cadmium) for example. Be sure to replace with batteries where all of the cells have the same amount of charge. Do not mix half-used alkalines with brand new ones.

CAUTION

Always remove batteries before shipping the unit.



CAUTION

Do not allow debris or moisture into battery compartment. Debris or moisture may short the battery contacts, leading to rapid discharge of the batteries, which could result in electrolyte leakage or risk of fire.

Operation Time

Typical operation time for the SeekTech line transmitter, using alkaline cells, is about 12.5 hours which varies depending on factors such as load and current transmitted, and how much the backlight is on. Select the Battery Saver feature if extended battery life is needed. Other factors that affect the operation time will include chemistry of the battery. (Many of the new high performance batteries, such as the “Duracell® ULTRA” do last 10%-20% longer than conventional alkaline cells under high demand applications). Operation at low temperatures will also reduce battery life. Typical operating times will be generally on the order of those shown here.


These figures assume a notional load of approximately 150 ohms. Note that Battery Saver mode limits output current to 100 mA.

Estimated Operating Times	
Current	Est. Time to Depletion
400 mA	1.8 hours
200 mA	3.6 hours
100 mA	7.25 hours
50 mA	14 hours
25 mA	28 hours

Batteries can recover after being subjected to high loads. If time is allowed, batteries may recover enough to offer additional hours of operation.


Optional External Power Source

Use only a power supply approved to IEC 61010-1 or IEC 60950. Output must be isolated, SELV and Limited-Energy Circuit per IEC 61010-1 or LPS per IEC 60950, 12-15VDC, 30W minimum. Output connection is standard barrel plug, 2.1mm pin, tip positive.

 **DANGER**

If the line transmitter is powered by a vehicle 12 VDC cigarette lighter connection, and the line transmitter is connected to a power line, the vehicle is now connected to that power line. The vehicle is now at a potentially lethal voltage. If the vehicle is grounded, the line transmitter may be destroyed.


Powering Up/Down

Power the unit ON by depressing the Power  key on the keypad. The SeekTech logo displays and the software version number and mode will appear at the bottom. An ascending tone sounds.

Note: The software version should be noted in the manual and provided with any service request for the unit. It is the first number on the lower left of the startup screen. See form on page 1.



Figure 5: ST-510 Startup Screen

Power the unit OFF by depressing and releasing the Power  key on the keypad. A descending tone sounds.

Sounds of the SeekTech Transmitter

Sounds are associated with specific events.

They include:

- Ascending/Descending Beeps – Power On/Off.
- Beeps upon connection.

The unit will beep, then pause to measure how much current is flowing onto the cable or pipe. The unit will beep faster when more current is detected.

- Short Buzz on shifting into inductive mode.
- Double-beeps during inductive mode operation.

To mute the sound, press the Sound key.



Figure 6: Sound Key (Highlighted)

Using the ST-510 Line Transmitter

The SeekTech ST-510 line transmitter is part of Ridgid’s SeekTech cable and pipe locating system. The ST-510 is used to energize a pipe or line with an “active” signal, so that the underground line may be traced with a compatible receiver. This allows the line’s location to be correctly marked so it can be exposed for repair or avoided during excavation.

The ST-510 line transmitter can apply an active tracing signal to a target conductor in three ways:

Direct Connect – The receiver’s leads are connected directly to the target conductor or tracing wire, and a suitable ground.

Inductive Clamp (optional) – The jaws of the inductive clamp encircle the target conductor; there is no metal-to-metal contact.

Inductive (internal coils) – The transmitter is placed over and in-line with the utility . Its internal coils generate a field which induces current in the underground target conductor.



DANGER

Always connect leads before turning the transmitter on to avoid electrical shock. Ensure transmitter is well grounded.

Direct Connect Method

1. Attach the ST-510 line transmitter to the ground and to the target line.

Remove the ground spike from the bottom of the unit and insert it into the ground. Connect one of the cable leads to the grounding spike. The leads are universal, so either may be used.



Figure 7: Attaching Lead to Ground Stake

2. Connect the other lead to the target conductor.



Figure 8: Example of Connecting to a Gas Line



Figure 9: Alternative Connection to a Pipeline



DANGER

NEVER CONNECT TO LINES ENERGIZED WITH A POTENTIALLY DANGEROUS ELECTRICAL CURRENT. To increase safety, the ground lead should be attached first. If there were an unknown high voltage running through the target line, this would allow a means of redirecting the current away from the transmitter and operator.

ALWAYS HOOK UP LEADS FIRST BEFORE POWERING THE UNIT ON TO AVOID SHOCK.

ALWAYS TURN UNIT OFF BEFORE DISCONNECTING LEADS.

3. Select a Frequency

The ST-510 line transmitter provides five frequencies:



Figure 10: Frequency Selection

Note: For 262 Hz, press the 33 kHz button a second time. (In European versions, this will set the unit to 93 kHz).

4. Check the Circuit

More current gives a stronger signal. Less current prolongs battery life. Signal strength measured by the receiver is directly proportional to the amount of current on the line. More current means a stronger signal will be received by the receiver.

To prolong battery life and reduce the chance of the signal “bleeding over” onto adjacent lines, use the minimum amount of current needed to get a clear reading on the receiver.

Look at the ohms (Ω) (resistance), the voltage (V) and the current (mA) displayed on the screen. Generally the lower the ohms (total resistance) the more efficiently current can be added. Lower total resistance indicates an efficient circuit and requires less voltage to illuminate the line.



Figure 12: Current Selection (Up and Down Arrows)

There are 7 current levels that the user can choose from: 5, 25, 50, 100, 200, or 400 mA.



Figure 11: Display Panel

Note: Ohms, current, power and voltage displayed are *approximate* values.

The transmitter will beep faster if the resistance is lower, and slower if the resistance is higher. See notes about Resistance and Impedance on page 16.

5. Adjust Current

Use the up and down arrows to adjust the amount of current in milliamps (mA).



Figure 13: Current Selected

When a current level is chosen, the transmitter will adjust the voltage to try and produce the selected current and lock it in. *If the transmitter cannot produce the current selected it will adjust down to the next level.*

The transmitter’s maximum current output depends on the amount of resistance in the circuit. When the transmitter is putting out the *maximum current possible* for internal and external conditions, **MAX** will be displayed in place of the current strength number.



Figure 14: MAX Current

MAX will also appear if the power output of the transmitter is at its allowable limit. (See FCC limits in the Useful Information section on page 17.)

When the current drops below 5 mA, “LO” will appear instead of a number.

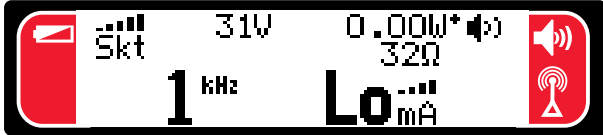



Figure 15: LO Current

 **WARNING**


If the transmitter is showing low or no current, the signal may be *too low to be detected* by the receiver locator and inadequate for tracing.

6. Check the Receiver

Set the receiver's frequency to match that on the transmitter. Confirm the receiver is picking up the transmitted frequency by holding it near the transmitter and observing the increase in receiver signal.

Useful Operating Points

- The lower the total resistance, the more current will be put on the line. A good circuit is one that allows enough current to flow so that the locator gets a clear and stable signal.
- To help lower the resistance of the circuit, scrape away dirt, paint and corrosion before connecting to the target conductor or grounding spike.
- A good ground lowers resistance, which allows more current flow and a stronger signal. For a better connection to ground, insert the grounding spike as far as possible. Moist ground is a better conductor than dry soil. Wetting the ground can improve a circuit in dry soil.
- If the desired current output cannot be produced, the voltage and ohms (resistance/impedance) readings can give useful information. For example, if the transmitter is putting out a high voltage, the resistance/impedance of the circuit is probably too high. If the voltage is lower (30v max) and the ohms (resistance) reading is also low, the line transmitter may be constrained by power restrictions. (See FCC limits information on page 17)
- The transmitter's leads can act as antennas, broadcasting a strong signal. If locating close to the transmitter, keep the leads as short as possible by stowing the excess length in the transmitter's side pockets. This will reduce the amount of interfering signals from the leads.
- It is usually best to start by using the lowest frequency and the least amount of current needed to effectively illuminate the line. Lower frequencies travel farther. Higher frequencies generally make it easier to illuminate a line, but they do not travel as far and are much more likely to couple onto other utility lines. This can distort the signal and reduce accuracy.

 **DANGER**

ALWAYS HOOK UP LEADS FIRST BEFORE POWERING THE UNIT ON TO AVOID SHOCK. ALWAYS POWER UNIT OFF BEFORE DISCONNECTING LEADS.

Inductive Clamp Method



Figure 16: Inductive Clamp (Optional)

1. Plug the inductive clamp into the 1/4" phone jack above the battery cover. Plug must be mono or, if stereo, connected between tip and base. The coil cords are disabled when the clamp is connected.
2. Clamp the jaws of the Inductive Clamp around a section of the pipe or cable to be traced.
3. Power the transmitter on and proceed as in the Direct Connect method. Be sure the receiver and the transmitter are set to the same frequency.

Inductive Mode

The ST-510 can be used without a direct connection to a pipe or cable. In Inductive Mode, the ST-510 generates a field which induces a current into a conductor such as a pipe running directly beneath it.

1. Be sure that the transmitter is positioned correctly over the line.



Figure 17: Orientation to the Conductor (Inductive Mode)

2. Push the inductive mode (upper right) button to induce a signal onto the line. The Inductive Mode message will appear on the screen.



Figure 18: Inductive Mode Key

3. Lower frequencies couple poorly inductively. When using Inductive Mode, use higher frequencies in order to get a good signal at the receiver.
4. Note that the line into which current is induced must be grounded in both directions for a signal to be induced away from the transmitter.
5. The transmitter in inductive mode will generate a field through the air around it as well as into the ground under it. If the receiver is within about 20-30 feet of the transmitter it will

measure this field instead of on the target conductor. Place the transmitter at least 20 feet away from the region where tracing occurs in order to avoid this “air coupling”.

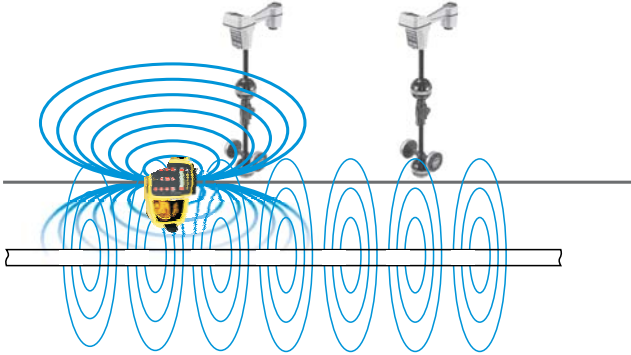


Figure 19: Air Coupling

- Generally if you trace a line with an induced signal checking for a valid depth measurement and a strong stable proximity signal is the best way to confirm that you are locating the induced signal in a line and not the signal directly from the transmitter through the air (air coupling).

Note: If you have been using the ST-510 in inductive mode, be certain to switch inductive mode off if you are going to use the unit in direct connect mode. Air coupling can create very confusing signals if you inadvertently have the unit set to inductive mode but are trying to use it in direct connect mode.

Features

48’ (16m) Coil Cords (Extended)

The leads of the ST-510 are specially designed, hybrid copper and stainless steel, aircraft-grade coiled cables. They can be stretched out to offer more freedom in choosing grounding points and connections to the line. The further out they are extended, the more incidental signal they can send out; accordingly, the receiver should be used further away from the transmitter to avoid being misled by the cords acting as antennas.



Figure 20: Storing Leads: Right Way and Wrong Way

To avoid tangled cords, “feed” the cords back into the pockets when storing, lead end last.

Note: Avoid over-stretching the coil cords as they may not fully retract, and become difficult to store in pockets. They can extend to 48’ (16m) readily. If they are extremely warm they may take a while longer to contract fully after full extension.

Auto Back Light

The SeekTech is equipped with an automatic LCD backlight. Whenever a key is pressed, the backlight is activated to aid viewing for 80 seconds.

High Voltage Indicator

When ever the line transmitter encounters voltage higher than about 42 volts (RMS), it will flash a red LED at the bottom of the keypad. The LCD will display “High Voltage”. If this occurs, follow high-voltage safety procedures to disconnect the transmitter.



Figure 21: High Voltage Indicator

Main Menu

To access the Main Menu:

1. Press the menu key:



Figure 22: Menu Key

2. Use the Up and Down keys to scroll through the menu choices in either direction.



Figure 23: Main Menu Choices



Figure 24: Up and Down Keys

3. To accept the highlighted choice, press the Select key.



Figure 25: Select Key

Battery Saver Mode

This allows the user to limit the power output of the ST-510 line transmitter to approximately 1 watt in order to prolong the life of the batteries. In many cases 1 watt of power is all that is needed. Using the unit with up to 10 watts allows for more power to be used, but consumes the batteries much faster. Battery Saver is off by default.



Figure 26: Battery Saver and Auto-Off Options

Auto Shut Off Adjustment

Check this box to have an automatic shut down of the transmitter. When checked, using the select key, the ST-510 will automatically shutdown to help conserve batteries. Shutdown time using this feature varies with current draw. The approximate values are:

8 hrs	25ma output or less
4 hrs	50-100ma
2 hrs	200-400ma
1hr	>400ma

This feature prevents the batteries from running down if the unit is inadvertently left on. A is off by default. See Figure 26 above.

Other Manufacturers Menu

This menu allows you to use the ST-510 to transmit on different manufacturer's frequencies. This is convenient if you are using a locator/receiver other than a SeekTech (the default setting). Simply choose the manufacturer of the intended receiver and frequencies for that system will be loaded and available. See the Manufacturer's Frequencies table on page 20.



Figure 27: Manufacturers Menu Selection

This selection brings up the list of manufacturers.



Figure 28: List of Manufacturers (First Screen)

When using a receiver frequency set other than SeekTech's, select the frequency according to the relative position of the other manufacturer's frequency on their frequency list (see table on page 20). For example, the low frequency key would correspond to their lowest frequency; the highest frequency key to their highest. If the manufacturer has more than 4 frequencies, the highest frequency key will switch to the next highest frequency. The selection will move up one frequency for each press; after the highest available frequency is reached the selection will cycle to the lowest frequency in that set.

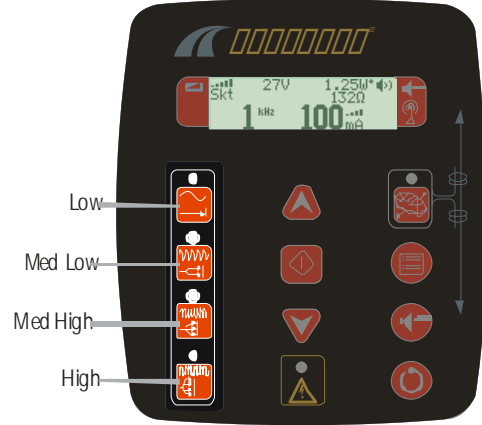


Figure 29: Frequency Buttons

Adjusting the LCD Screen Contrast

LCD contrast is set at the factory and should not normally require adjustment. Optimal contrast is set when the background remains white, while the black pixels are set to be as dark as possible.

Note: The LCD can be adjusted to completely white or completely black, which will affect readability.

LCD contrast may change with extremes in temperature. When the screen is exposed to high heat from direct sunlight it may darken. It is recommended that the screen be shaded if it is to be exposed to excessive sunlight. Use the shoulder strap to cover the screen if needed.

If the display appears too dark or too light when it is on, it is likely that the LCD contrast has become misadjusted. First try powering the unit OFF and then back ON. If the problem persists adjust the LCD contrast darker or lighter as needed.

To adjust the LCD Contrast:

1. Press and **hold** down the select key:
2. Simultaneously press the up arrow key to lighten the display or press the down arrow key to darken the display.

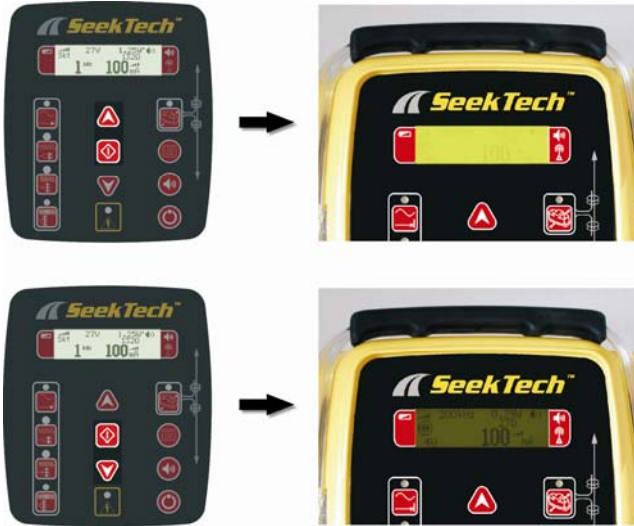


Figure 30: Adjusting LCD Contrast

Useful Information

Resistance and Impedance

A circuit has a certain resistance that is measured in ohms (Ω). Higher resistance reduces the amount of current that can be put on an underground line at a given voltage. (Current is equal to voltage divided by resistance). Factors that affect resistance are conductivity of the line itself, insulation material and condition, breaks or faults in the line, and how well the transmitter is grounded.

Grounding can be affected by soil conditions (wetness or dryness, for example), length of grounding stake, or how the line transmitter is connected to the grounding rod. Improving the ground connection is the quickest way to improve a tracing circuit.

Note: It is difficult to set up a good ground connection in extremely dry soil. This condition can be remedied by moistening the soil around the grounding stake.

Impedance is resistance which varies with AC frequency. The measurement units in both cases are the same, ohms. Impedance increases with the frequency transmitted. Total “resistance” can include impedance, and can be effected by inductance and capacitance in the circuit and nearby metallic objects.

Using High and Low Frequencies

Understanding the behaviour of different frequencies under different conditions can be important in doing effective and accurate locates.

In both direct-connect and inductive mode, the ST-510 is essentially doing the same thing – imposing a wave of traceable energy onto the target pipe or line. This electrical energy rises and falls a certain number of times per second, which in turn causes a *magnetic* field to build and collapse around the conductor at a regular rate. This rate is known as the *frequency* of the generated current and of its consequent magnetic field.

Frequency is expressed in terms of hertz (Hz), which means cycles per second, or kilohertz (kHz), which means thousands of cycles per second.

Low Frequencies

The ST-510 will generate frequencies as low as 128 hertz. Low frequencies are especially useful for several reasons. First, they will travel farther at a detectable level along a continuous pipe or wire conductor than a high frequency will. Secondly, lower frequency fields lose less energy to the area around the conductor. If you can get a clear signal on your receiver using a low frequency, it is generally preferable because you will be able to trace it further and it will tend to confine itself to the original conductor more than a high-frequency signal will. But a low-frequency signal is more likely to be interrupted by gaps in the line, poor insulation or hidden by other magnetic fields in the area. It is a “weaker” signal in that respect. While it doesn’t jump as readily onto other lines, it will lose signal if traveling on a line with poor insulation, bare-concentric cable, or bare pipe exposed to earth, and will follow the path of least resistance, which is not always the path intended by the operator. This can make tracing the original conductor difficult.

High Frequencies

The ST-510 will generate frequencies as high as 262 kilohertz. (European versions are limited to 93 kHz.) There are certain conditions where only higher frequencies will serve. High-frequency signals are especially valuable when you are tracing a line that has some sort of interruption—such as a gasket, or decayed insulation – in the continuity of the

conductor. The reason is that a high-frequency signal can “jump” some barriers and continue without losing as much signal.

A high-frequency signal can also be valuable in getting a signal on a receiver when there is a poorly grounded circuit, compared to the signal the same receiver will detect at a lower frequency. While all currents tend to follow the path of least resistance, a high-frequency current will “buck” this tendency to some degree, reaching across incidental barriers.

The disadvantage to higher frequencies is that they also jump onto other conductors (known as bleed-over). If you have two wires side by side in a trench, a higher frequency used to trace one of them may illuminate both of them. Additionally, nearby metallic objects, or even highly metalized soil, may pick up a higher frequency and distort the picture at the locator. If a gas line is being “illuminated” with a high frequency current, it may bleed over onto a water line or a power cable running nearby, confusing the picture of where the original line is.

As a general rule, detecting with lower frequencies is more reliable for the reasons given above, IF you can get a good signal.

High Frequencies:

- Don’t travel as far
- Overcome some barriers
- Bleed-over more.

Low Frequencies:

- Travel further
- Lose signal when hitting barriers, gaskets, poor insulation
- Do not bleed-over as much.

FCC Limits

47 CFR 15.213 says that from 9kHz up to (but not including) 45kHz, peak output power shall not exceed 10 W. From 45kHz to 490kHz, it must not exceed 1W.

Transportation and Storage

Before transporting make sure that the unit is OFF to preserve battery power.

Make sure that the ST-510 line transmitter is secure and does not bounce around or get bumped by loose equipment.

The ST-510 line transmitter should be stored in a cool dry place.

Note: If storing the ST-510 line transmitter for an extended period of time, the batteries should be removed. If storage is brief then the battery carriage may be pulled out ½ an inch to preserve battery power. **Remove batteries entirely before shipping.**

Maintenance and Cleaning

1. Keep the ST-510 line transmitter clean with a damp cloth and some mild detergent. Do not immerse in water.
2. When cleaning, do not use scraping tools or abrasives as they may permanently scratch the display. NEVER USE SOLVENTS to clean any part of the system. Substances like acetone and other harsh chemicals can cause cracking of the case. Locating Faulty Components

For troubleshooting suggestions, please refer to the trouble shooting guide at the end of the manual. If necessary, contact SeekTech Technical Service at (800) 519-3456. We will establish a plan of action to get your equipment working for you.

Service and Repair

Transmitter should be taken to a RIDGID Independent Authorized Service Center or returned to the factory. All repairs made by Ridge service facilities are warranted against defects in material and workmanship.

If you have any questions regarding the service or repair of this machine, call or write to:

Ridge Tool Company
 Technical Service Department
 400 Clark Street
 Elyria, Ohio 44035-6001
 Tel: (800) 519-3456
 E-mail: TechServices@ridgid.com

For the name and address of your nearest Independent Authorized Service Center, contact the Ridge Tool Company at (800) 519-3456 or www.ridgid.com.

CAUTION

Always remove batteries entirely before shipping.

Icon Legend

High Voltage Present



Caution



Inductive Mode - Press frequency button 2x to turn on



Inductive Clamp



Power On/Off

External Power
12-15VDC**Specifications****Power Source:**

8 Alkaline or rechargeable batteries.(D-Cells)

Weight:

4.75 lbs (2.15 kg) w/o batteries, 7.5 lbs (3.4 kg) w/batteries

Cable length:

48' Extended (14m); 46" contracted (1.1m)

Dimensions:

Depth 7.0" (17.8 cm)
Width 15" (38.1 cm)
Height 6.5" (16.5 cm)

Output Power:

Nominal 10 watts max. 1 watt maximum if frequency is above 45kHz.

Maximum output voltage 30V RMS; ~ 48V peak

Power Settings: 4 mA
15 mA
50 mA
150 mA
600 mA

Trouble Shooting Guide

PROBLEM	PROBABLE FAULT LOCATION
Display appears completely dark, or completely light when it is ON.	Try powering the unit OFF and then back ON.
	Adjust the LCD screen contrast.
	Allow the unit to cool if it has been exposed to excessive heat from sunlight.
Receiver will not pick up the line transmitter's signal.	Check that the correct frequency has been selected on both units. (See Control Menu for the ST-510 receiver.)
	Check to make sure that the receiver and the line transmitter are in the same mode and on the same frequency. (See note on page 4 about using 93 kHz frequencies.)
	Make sure that the proper functions are activated on the receiver. e.g. activating the line trace function for line tracing. (See manual for the particular receiver being used.)
Unit will not power ON.	Check orientation of batteries.
	Check that the batteries are fresh or charged.
	Check to see that the battery contacts are OK.

Estimated Operating Times

Current	Est. Time to Depletion
400 mA	1.8 hours
200 mA	3.6 hours
100 mA	7.25 hours
50 mA	14 hours
25 ma	28 hours

Standard Equipment

SeekTech ST-510 Transmitter
 Direct connect leads and clips
 Operator's Manual
 8 D-cell batteries (Alkaline)

Default settings for the transmitter:

60 Hz Mode
 2 hr shutoff
 30V-RMS Maximum
 SeekTech frequencies loaded

Standard Replacement Parts



- A. Direct Connect Lead (48ft./16m) (Cat#22758)
- B. Battery Holder Cover Assembly (Cat#18428)
- C. Battery Holder (Cat#18433)
- D. Ground Spike (Cat#18438)
- E. Direct Connect Lead Clip (Cat#18443)
- F. Inductive Clamp (Optional) (Cat # 20973)

Frequencies

Exact Frequencies per Band (In Hz)

		128 Hz	1kHz	8kHz	33kHz	93kHz*	262kHz
Default (SeekTech)	Line	128	1024	8192	32768	93623 *(European model only)	262144 (European model limited to 93KHz)

Manufacturers Frequency Table (see page 15)

Displayed Option	Company	Available Frequencies	Model	Exact frequency (Hz)	Notes
Dyna	3M Dynatel™	577Hz 8kHz 33kHz 200kHz	2273	577 8192 32768 200012	200 KHz not present in European model of the ST-510.
Fish	FISHER	820Hz 8.2kHz 82kHz	TW-8800	821 8217 82488	
Gen	Gen-Eye™	512Hz 8kHz 65kHz	LCTX 512/8/65	512 8192 65536	
Gold	GOLDAK	117.5kHz	3300	11750	Not recommended for use with the ST-510 transmitter. Not present in European model of the ST-510.
Heath	Heath Consultants Incorporated	8.1kHz 81kHz 480kHz	ALLPRO	8128 81326 480323	480 KHz not present in European model of the ST-510.

Displayed Option	Company	Available Frequencies	Model	Exact frequency (Hz)	Notes
McLau	McLAUGHLIN®	9.5kHz 38kHz	VERIFIER	9499 37997	Made by Takachiho Sanyo Co., Ltd.
Metro	METROTECH®	982Hz 9.8kHz 82kHz 83kHz	9890 810 for 83kHz	982 9820 82488 83080	
MicroE	Microengineering	76.8kHz	Xmtr-101	76802	
Mytan	MyTana	76.8kHz	PT20	76802	
Phorn	PipeHorn	480kHz		479956	Not present in European model of the ST-510.
RD	Radio Detection (Same as Gen-Eye™ above)	512Hz 8kHz 33kHz 65kHz 82kHz 200kHz	(Same as LCTX 512/8/65 above)	512 8193 32768 65538 81865 200000	200 KHz not present in European model of the ST-510.
RIDGID (Old)	Ridge Tool Co.	512 8kHz 33kHz 51kHz 200kHz		512 8192 32768 51712 200000	200k changed to 93khz in European model of the ST-510.
RIDGID (New)	Ridge Tool Co.	128 Hz 1 kHz 8 kHz 33 kHz 93 kHz 262 kHz		128 1024 8192 32768 93623 262144	262k, changed to 93khz in European model of the ST-510.
RIDGID-B (New)	Ridge Tool Co.	128 Hz 1 kHz 8 kHz 33 kHz 93 kHz		128 1024 8192 32768 93696	Older 93 kHz value
Ryco	RYCOM	815Hz 82kHz	8876	815 82318	

Displayed Option	Company	Available Frequencies	Model	Exact frequency (Hz)	Notes
SeekTech-B		128 Hz		128	Older 93 kHz value
		1kHz		1024	
		8kHz		8192	
		33kHz		32768	
		93kHz*		93696	
		262kHz		262144	
Schon	Schonstedt Instrument Company	575Hz	TraceMaster	575	
Ssurf	SubSurface	8kHz 27kHz	PL-2000	8055 26721	Made by FUJI TECOM.
SubS	SUBSITE ® ELECTRONICS Ditch Witch ®	1kHz 8kHz 29kHz 80kHz	950	1170 8009 29430 80429	
Telex		577Hz		577	



What is covered

RIDGID® tools are warranted to be free of defects in workmanship and material.

How long coverage lasts

This warranty lasts for the lifetime of the RIDGID® tool. Warranty coverage ends when the product becomes unusable for reasons other than defects in workmanship or material.

How you can get service

To obtain the benefit of this warranty, deliver via prepaid transportation the complete product to RIDGE TOOL COMPANY, Elyria, Ohio, or any authorized RIDGID® INDEPENDENT SERVICE CENTER. Pipe wrenches and other hand tools should be returned to the place of purchase. **Note: Always remove batteries before shipping the unit.**

What we will do to correct problems

Warranted products will be repaired or replaced, at RIDGE TOOL'S option, and returned at no charge; or, if after three attempts to repair or replace during the warranty period the product is still defective, you can elect to receive a full refund of your purchase price.

What is not covered

Failures due to misuse, abuse or normal wear and tear are not covered by this warranty. RIDGE TOOL shall not be responsible for any incidental or consequential damages.

How local law relates to the warranty

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific rights, and you may also have other rights, which vary, from state to state, province to province, or country to country.

No other express warranty applies

This FULL LIFETIME WARRANTY is the sole and exclusive warranty for RIDGID® products. No employee, agent, dealer, or other person is authorized to alter this warranty or make any other warranty on behalf of the RIDGE TOOL COMPANY.

Ridge Tool Company

400 Clark Street

Elyria, Ohio 44036-2023

Part Number : 748-014-603-0A

Rev. B