


Congratulations on purchasing your new Hunter® ceiling fan! It will provide comfort and performance in your home or office for many years. This installation and operation manual contains complete instructions for installing and operating your fan.


We are proud of our work and appreciate the opportunity to supply you with the best ceiling fan available anywhere in the world.

To register your fan, please visit:  
[www.HunterFan.com/register](http://www.HunterFan.com/register)  
Save your receipt for proof of purchase.


What to Expect with Your Installation

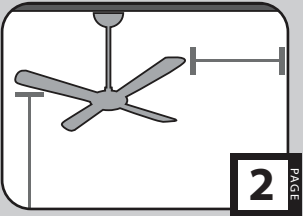


Tools Needed

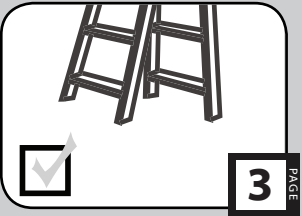


Mounting Options

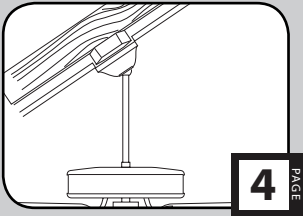


Ceiling Bracket

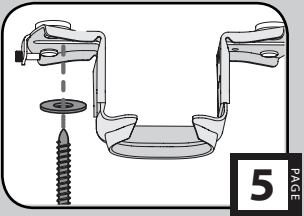


Preparation

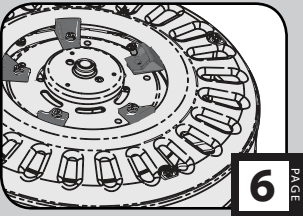


Downrod

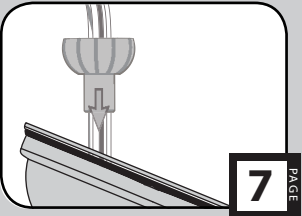


Wiring

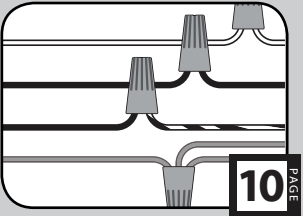


Canopy

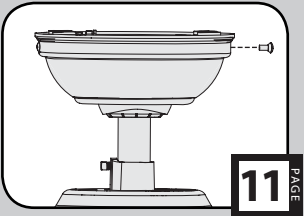


Blades

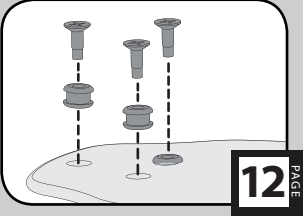


Switch Housing

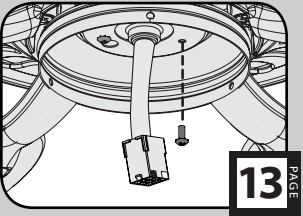


Light Kit

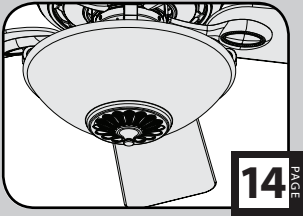


Remote Control

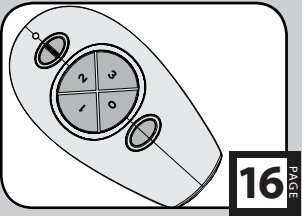

Maintenance & Cleaning

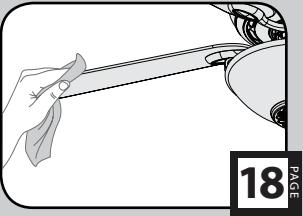

Troubleshooting

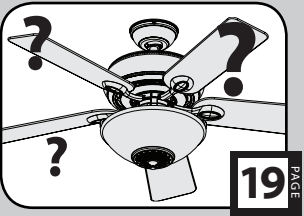




☒ Must be able to secure the fan to building structure or fan-rated outlet box

If you are unfamiliar with wiring, use a qualified electrician.



☒ Know your wiring

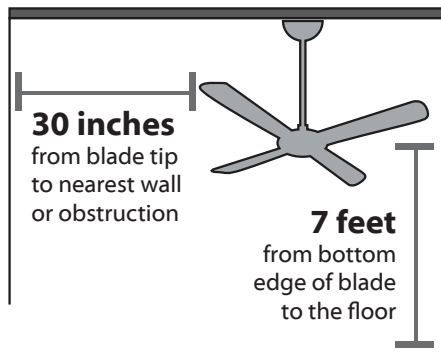

☒ Assess location

You may need a friend to help you.



☒ Check box to see fan weight



Ceiling angles greater than 34° will require an Angled Mounting Kit. See page 4 for details.

☒ Assess ceiling angle

**1 Standard Downrod**  
for ceilings 8-10 feet high

**2 Longer Downrod**  
for ceilings 10 feet or higher

☒ Select a downrod length

## Read and Save These Instructions

This product conforms to UL Standard 507.

### ⚠ WARNINGS


- w.1 - To reduce the risk of fire, electrical shock, or personal injury, mount fan directly from building structure and/or an outlet box marked acceptable for fan support of 70 lbs (31.8 kg) and use the mounting screws provided with the outlet box.
- w.2 - To avoid possible electrical shock, before installing or servicing your fan, disconnect the power by turning off the circuit breakers to the outlet box and associated wall switch location. If you cannot lock the circuit breakers in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.
- w.3 - To reduce the risk of fire, electrical shock, or motor damage, use only Hunter Solid State Speed Controls.
- w.4 - To reduce the risk of personal injury, do not bend the blade brackets when installing the blade brackets, balancing the blades, or cleaning the fan. Do not insert foreign objects in between rotating fan blades.

### ⚠ CAUTIONS


- c.1 - All wiring must be in accordance with national and local electrical codes ANSI/NFPA 70. If you are unfamiliar with wiring, use a qualified electrician.
- c.2 - Use only Hunter replacement parts.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications.*
- This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment, ships at sea, or other critical navigation or communications equipment operating between 0.45-30 MHz. This device complies with Part 18 of the FCC Rules.*




☒ Ladder

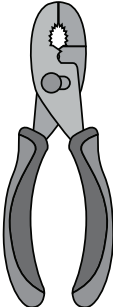


☒ Pliers

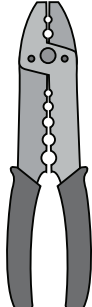


☒ Wire Strippers

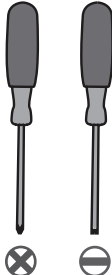

☒ Screwdrivers

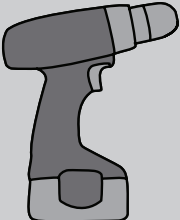

☐ Power Drill (optional)



☐ 9/64" Drill Bit (optional)

If mounting to a support structure, you will also need these tools.

34°

CEILING ▲

**If you have a flat ceiling:**Hang your fan by a standard downrod (*included*).Standard  
Mounting

OPTION 1




**If you have an angled ceiling:**

1. You will need a longer downrod (*sold separately*).
2. If your ceiling angle is greater than 34°, you will also need an Angled Mounting Kit (*sold separately*).

Angled  
Mounting



OPTION 2

Use the three steps below to determine if your ceiling angle is greater than 34°

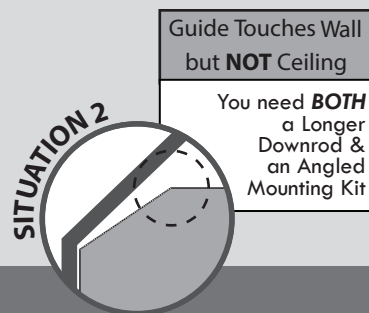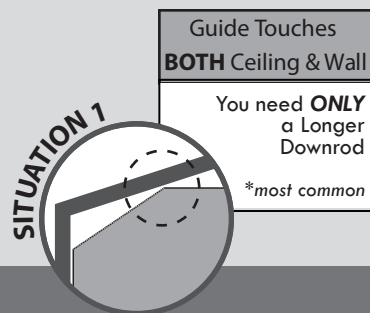
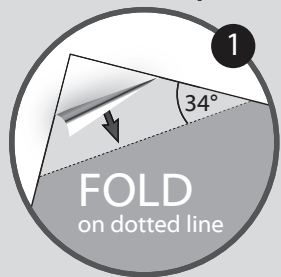
**Mounting Options**

www.HunterFan.com



1.866.268.1936

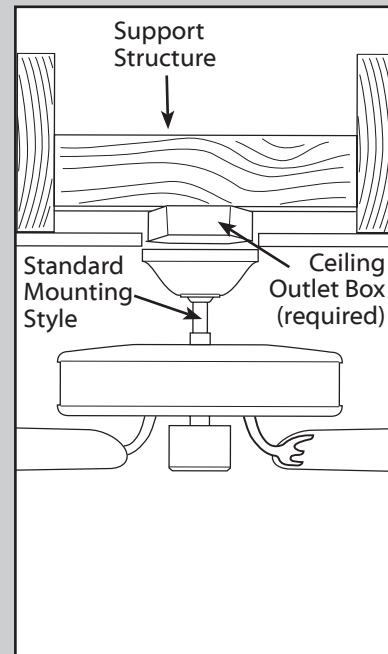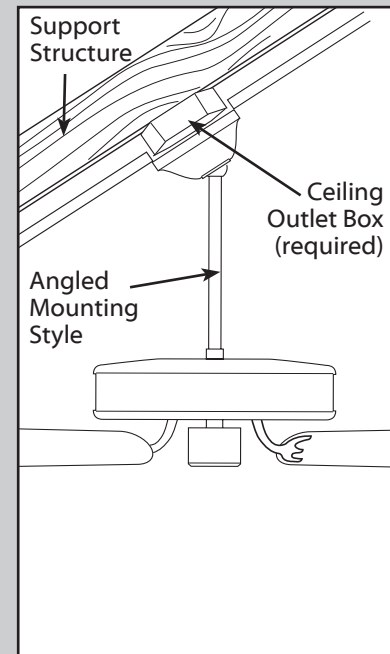Use **Standard Mounting**  
to hang the fan from a flat ceiling.Use **Angled Mounting**  
to hang the fan from a  
vaulted or angled ceiling.



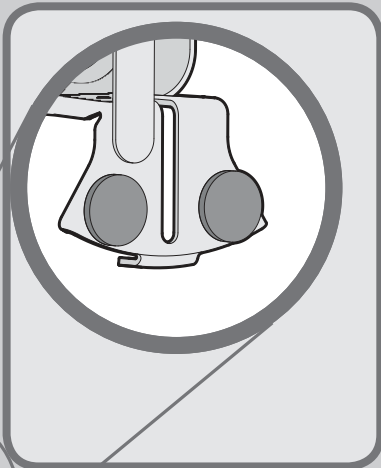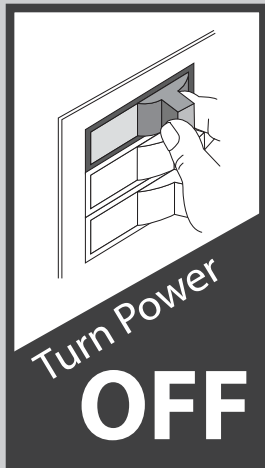


Make sure all four (4) bumpers are still attached.

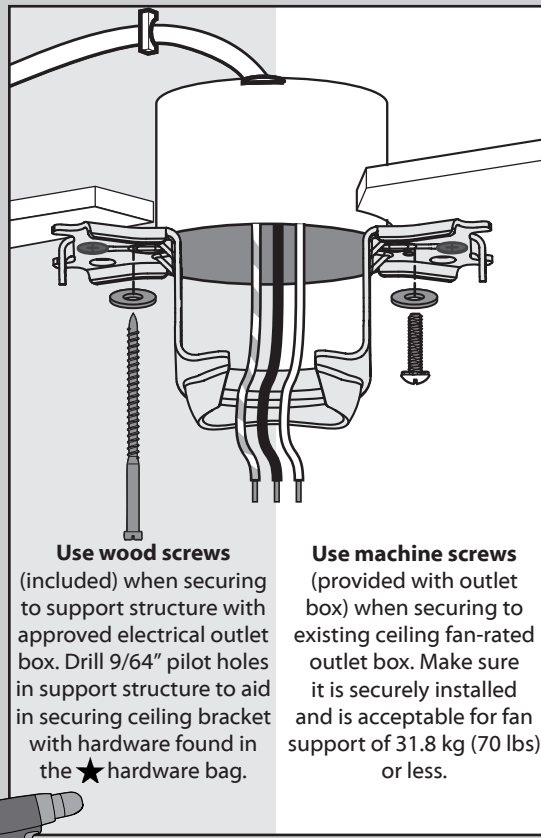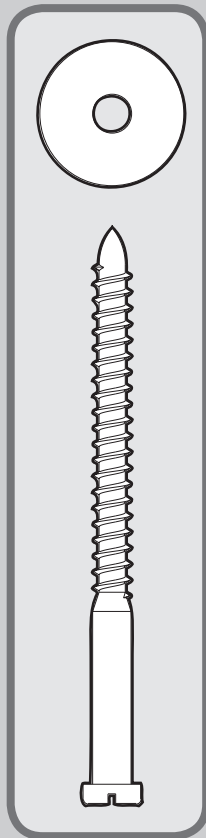

**Use wood screws** (included) when securing to support structure with approved electrical outlet box. Drill 9/64" pilot holes in support structure to aid in securing ceiling bracket with hardware found in the ★ hardware bag.

**Use machine screws** (provided with outlet box) when securing to existing ceiling fan-rated outlet box. Make sure it is securely installed and is acceptable for fan support of 31.8 kg (70 lbs) or less.



For angled ceilings, point opening toward peak.

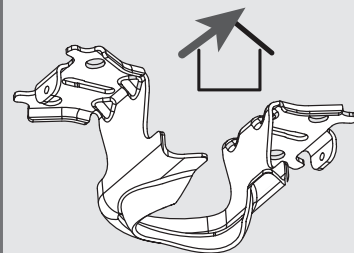


*If you are unable to do this, call Technical Support at 1-888-830-1326.*

To avoid possible electrical shock, before installing your fan, disconnect the power by turning off the circuit breakers to the outlet box associated with the wall switch location.



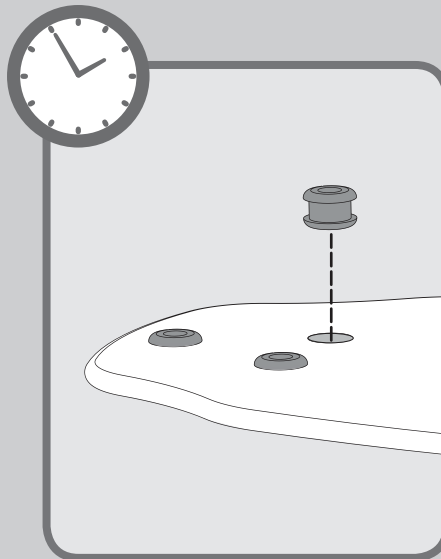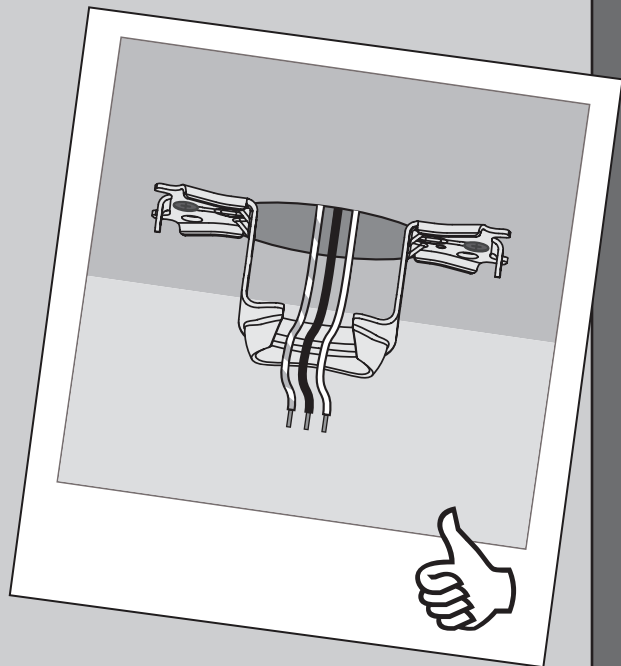

**Time Saver Tip:** Get a helper to insert grommets, found in the ■ hardware bag, into the blades while you're doing the next couple of steps.

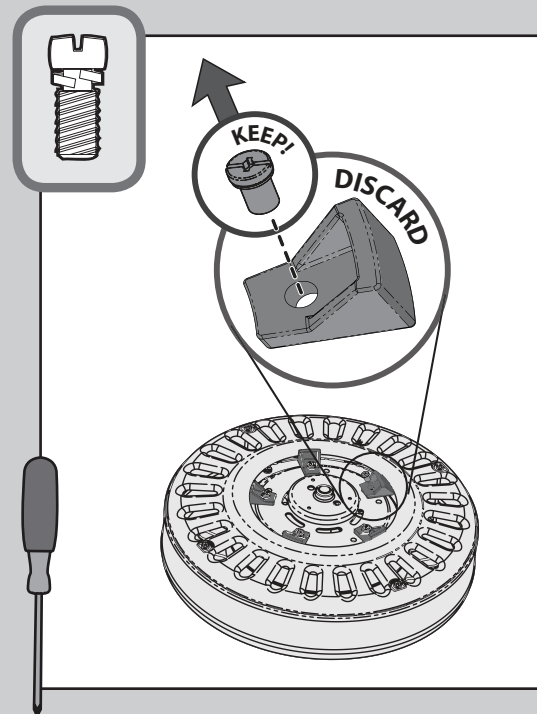

⊗ Remove the shipping blocks from the motor. **Save the screws. They will be needed for blade iron installation.**

**Note:** Some fans will have a shipping ring instead of shipping blocks. Please remove the ring and save the screws.

Option 1

Standard  
Downrod  
for ceilings 8-10' high



Included  
(pre-assembled)

Option 2


Longer  
Downrod  
for angled  
ceilings or  
ceilings 10' or  
higher




Sold Separately


skip to next page

If you need a different downrod length follow these steps:

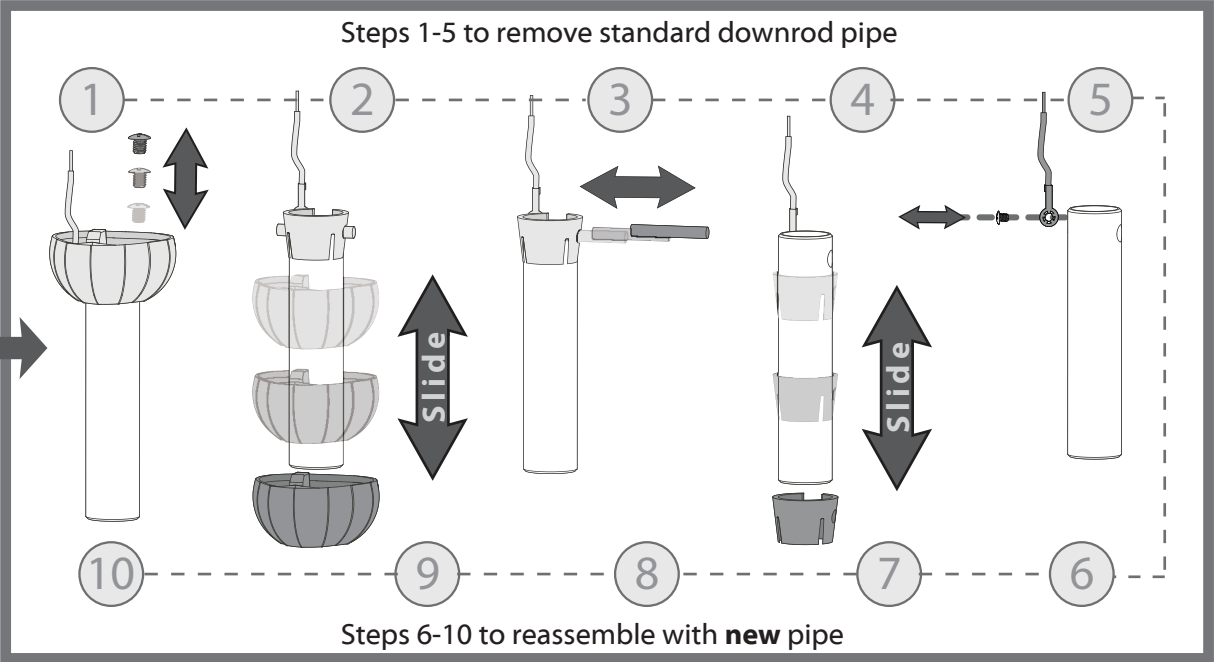


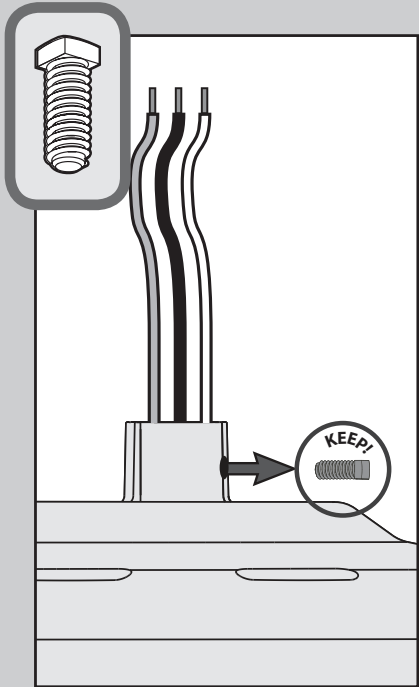


Remove the pre-installed setscrew so that the downrod can be inserted.

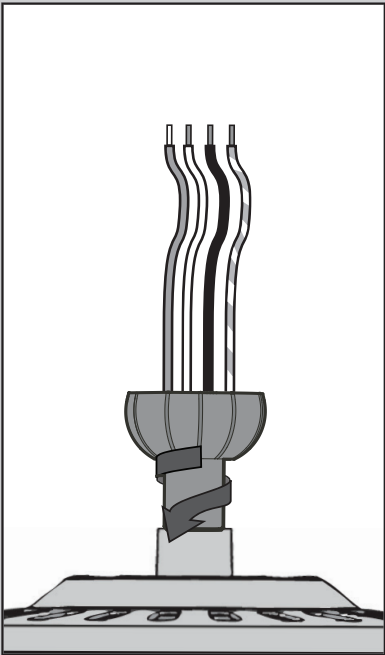

Hand tighten the downrod (at least 4-5 full turns) until it stops.

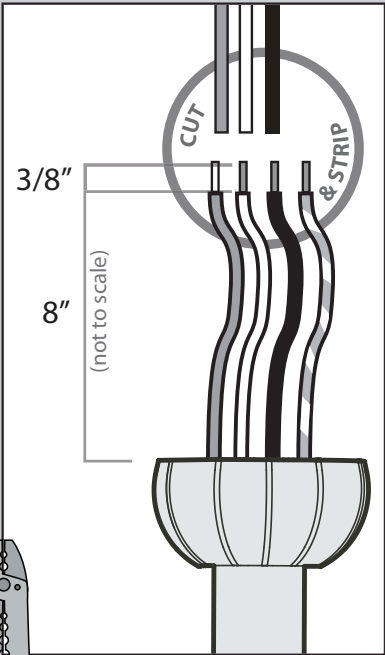

The wires can be cut, but leave at least 8" extending from the top of the downrod.

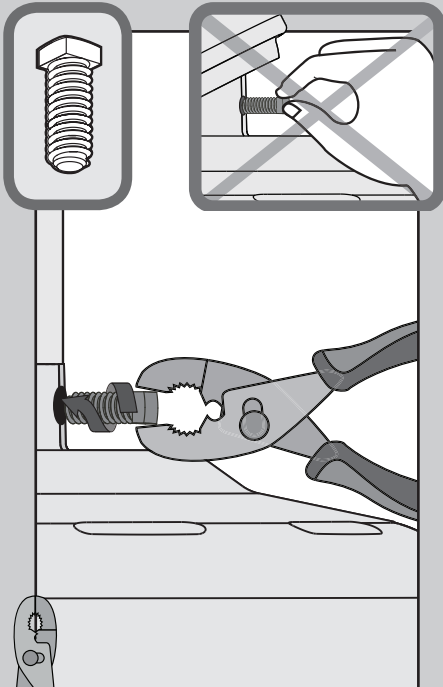


Tighten the setscrew with pliers. **DO NOT HAND TIGHTEN.**




If the setscrew is not tightened securely, the fan may fall.




Put the wires and downrod through the canopy. Let the canopy sit loosely on top of the fan.

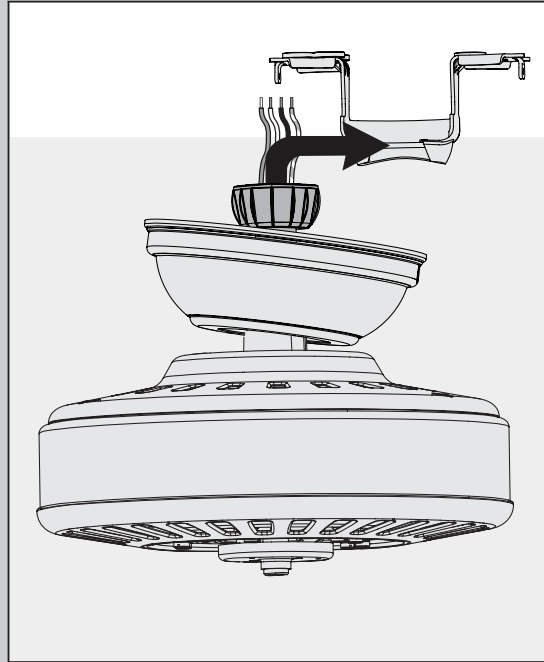


**DO NOT PICK THE FAN UP BY THE CANOPY OR WIRES.** Place the downrod ball into the slot in the ceiling bracket.

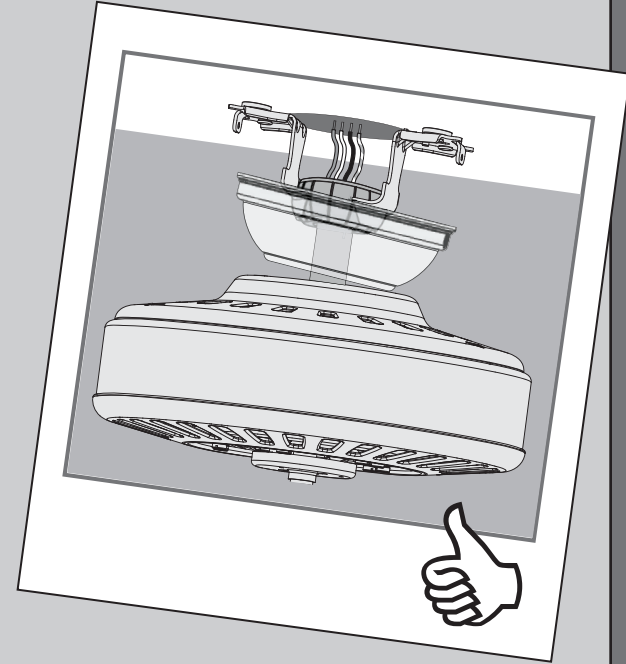

**Note:** To connect the wires, hold the bare metal leads together and place a wire connector over them, then twist clockwise until tight.

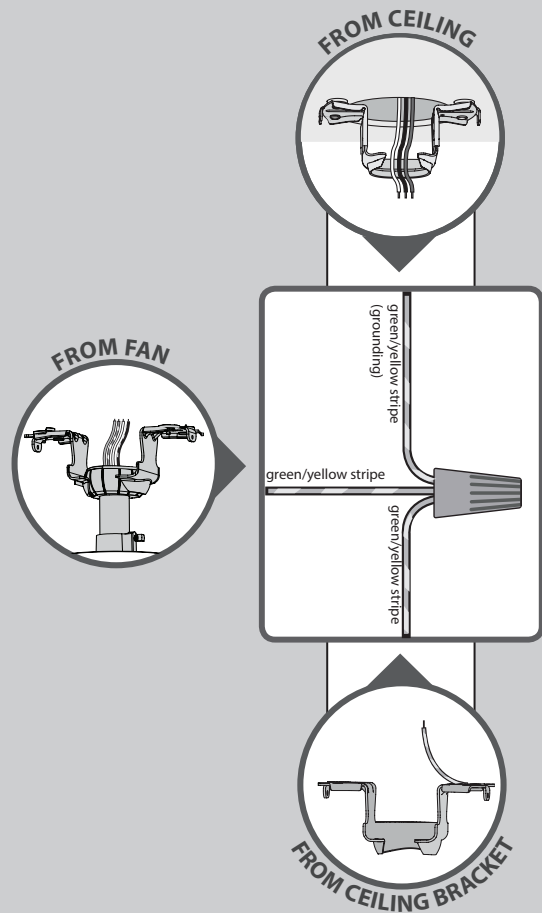


Using an orange wire connector from the ★ hardware bag, connect the 3 grounding wires (green, green/yellow stripe, or bare copper) coming from the ceiling, downrod, and hanging bracket.

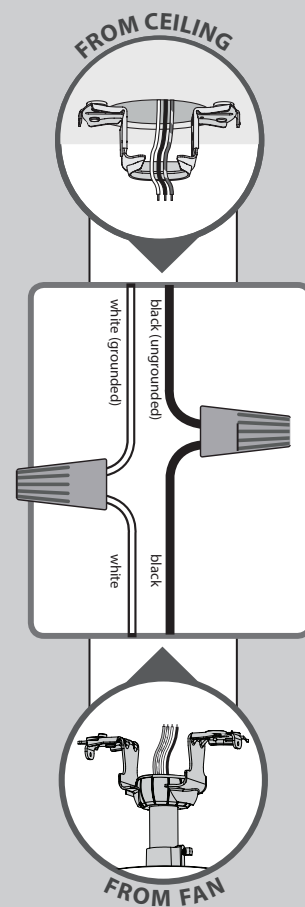


Using an orange wire connector from the ★ hardware bag, connect the black wire (ungrounded) from the ceiling to the black wire from the receiver. Connect the white wire (grounded) from the ceiling to the white wire from the receiver.

Refer to CAUTION c.1 on pg. 2


Turn the splices upward and push them carefully back through the hanger bracket into the outlet box. Spread the wires apart, with the grounded wires on one side of the outlet box and the ungrounded wires on the other side of the outlet box.

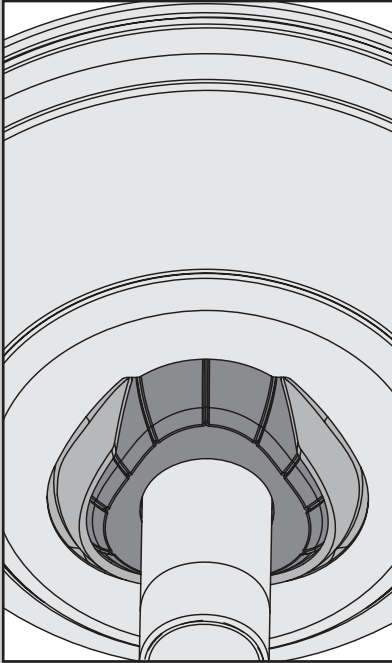


Position the canopy so that, when lifted into place, the canopy fits into the hanging bracket as shown.

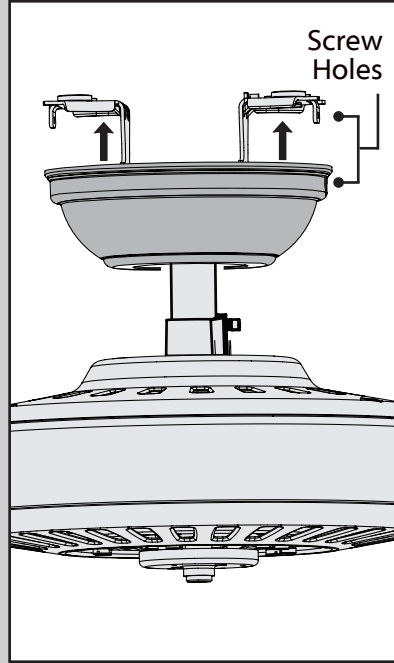


Lift the canopy into place so that the screw holes are aligned.

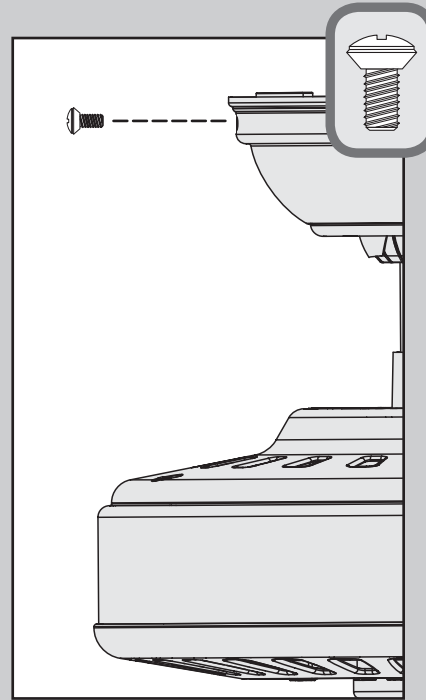


Insert the two canopy screws found in the ● hardware bag.

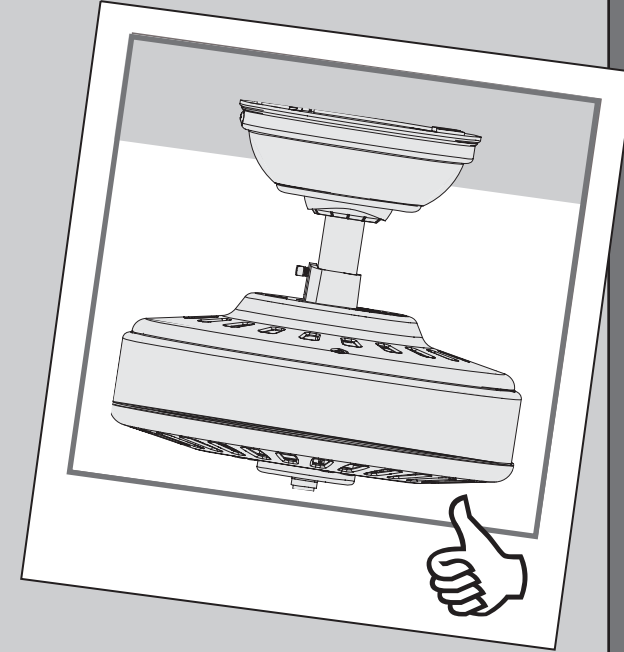

**Note:** Fan style may vary.

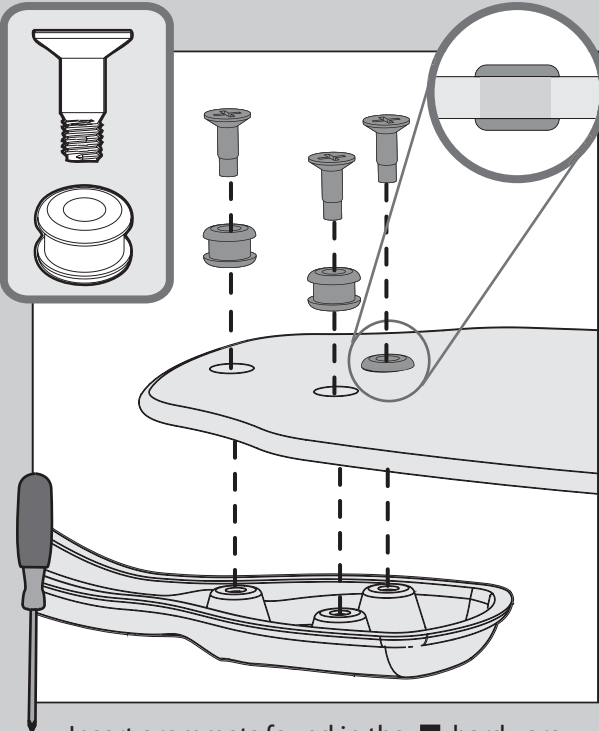


✕ Insert grommets found in the ■ hardware bag into the holes in the blades, then secure each blade to a blade iron with screws found in the ▲ hardware bag.

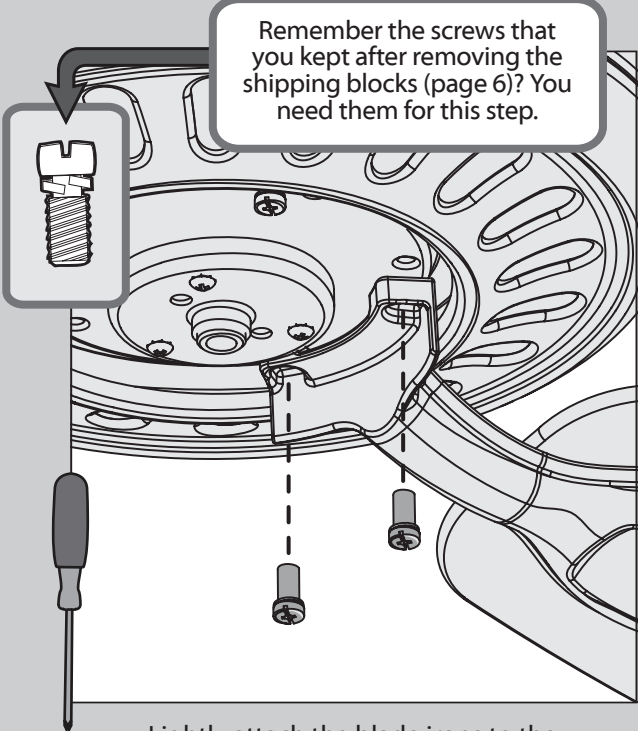


✕ Lightly attach the blade irons to the motor with the blade iron armature screws, then securely tighten after both screws are attached.






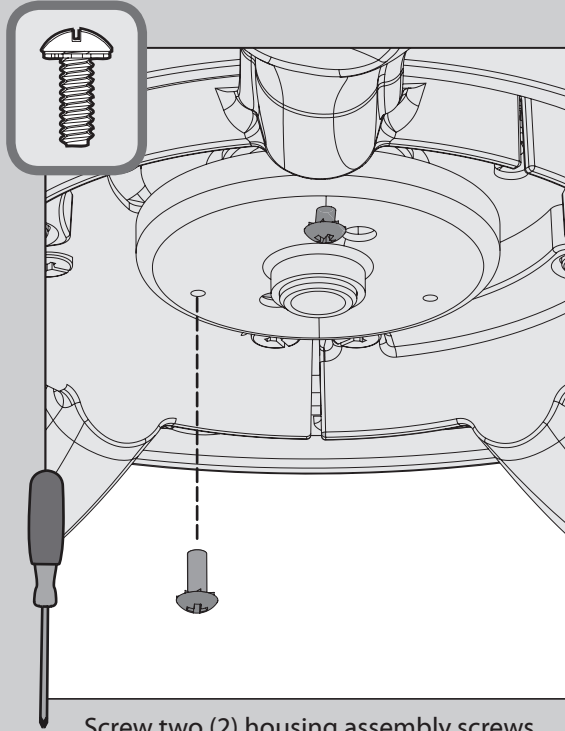

⊗ Screw two (2) housing assembly screws from the ≡ hardware bag halfway into the motor housing. It does not matter which two screw holes you choose.

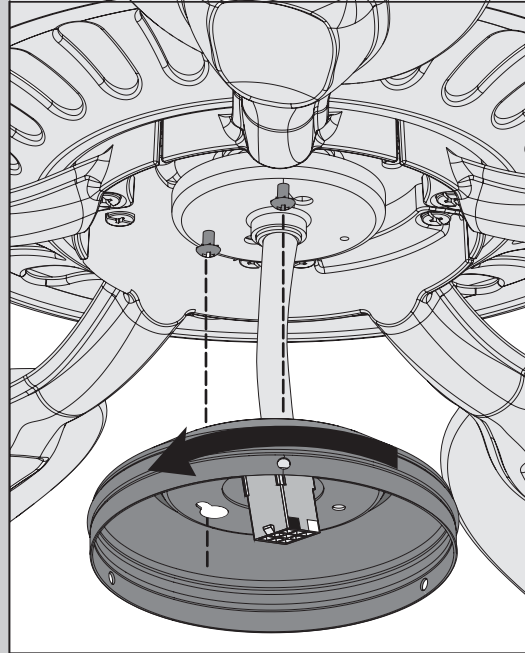


Feed the wire plug through the center hole of the upper switch housing, then wrap keyhole slots around the screws and twist counterclockwise.

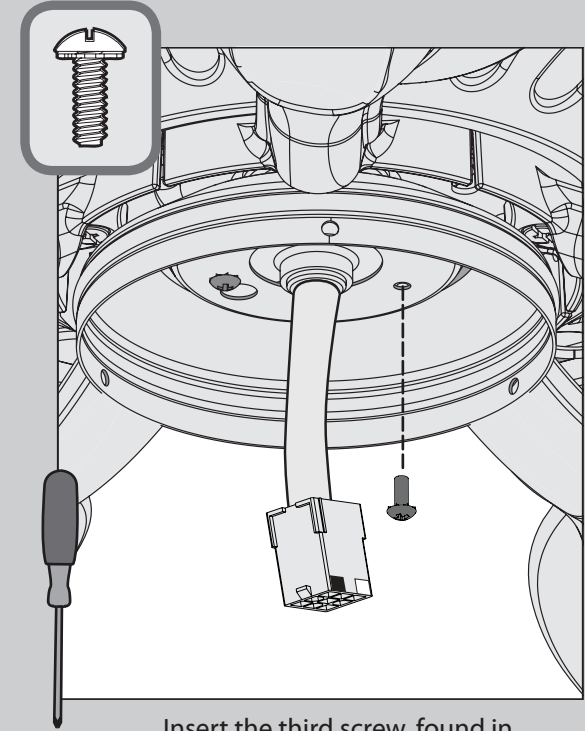


⊗ Insert the third screw, found in the ≡ hardware bag, into place and then tighten all three (3) screws.


Make sure the upper switch housing is securely attached to the mounting plate. Failure to properly secure all 3 assembly screws could result in the switch housing fixture falling.

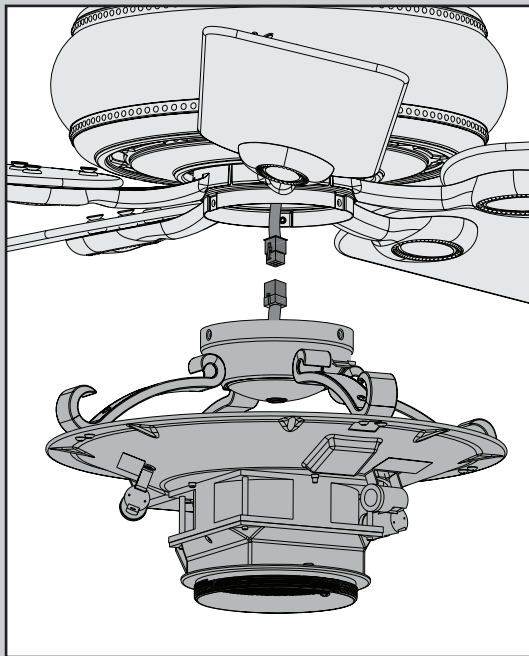


Connect the plugs from the upper and lower switch housings. Make sure to line up the colored markings on the connectors.

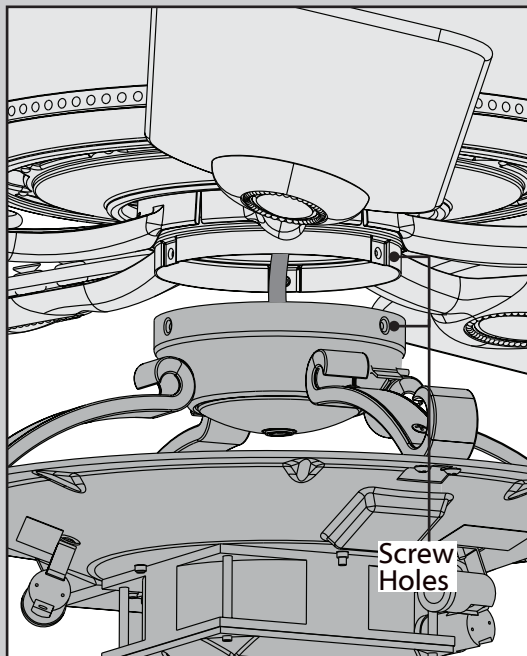


Lift the lower switch housing up until its screw holes are aligned with the screw holes in the upper switch housing.

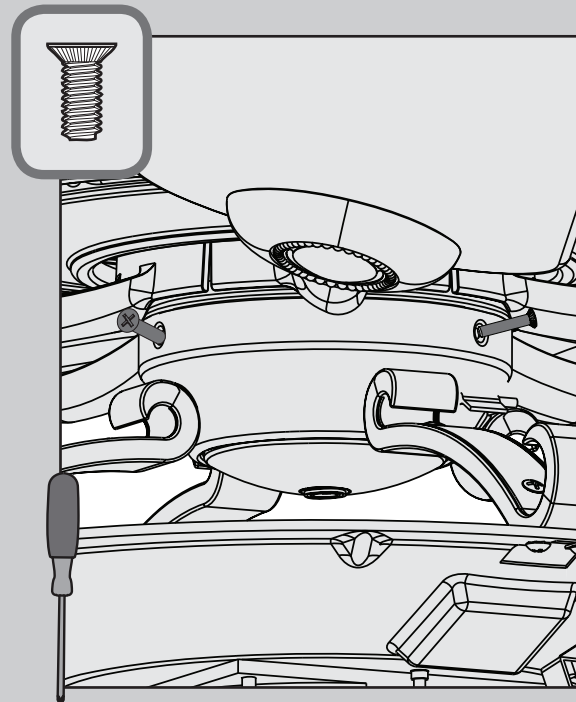

⊗ Install the three switch housing screws found in the  hardware bag.


Make sure the lower switch housing is securely attached to the upper switch housing. Failure to properly secure all three assembly screws could result in the light fixture falling.



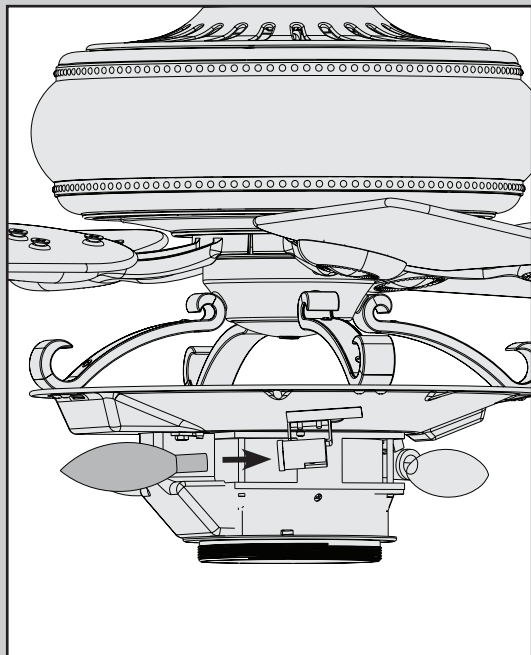


Install a light bulb in each socket.

**Note:** Do not use CFL bulbs to replace your light bulbs. Your lights may flicker or fail to work.

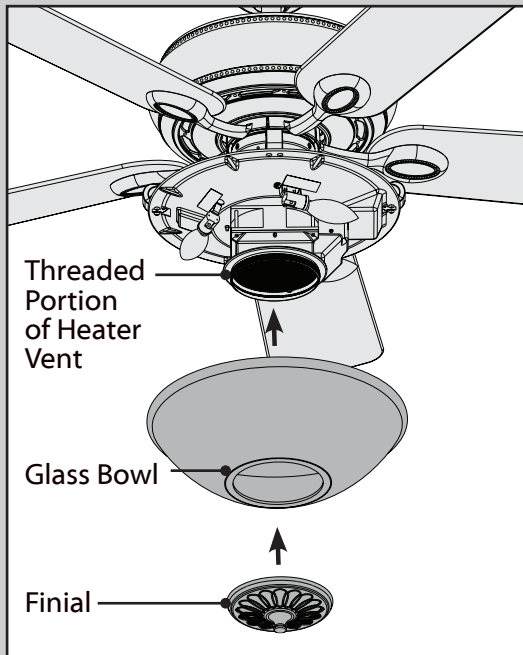


Place the glass bowl over the heater vent, ensuring the threaded portion of the heater vent comes out of the bottom of the glass bowl. Place the finial over the threaded portion of the heater vent and twist it to tighten it against the glass bowl.

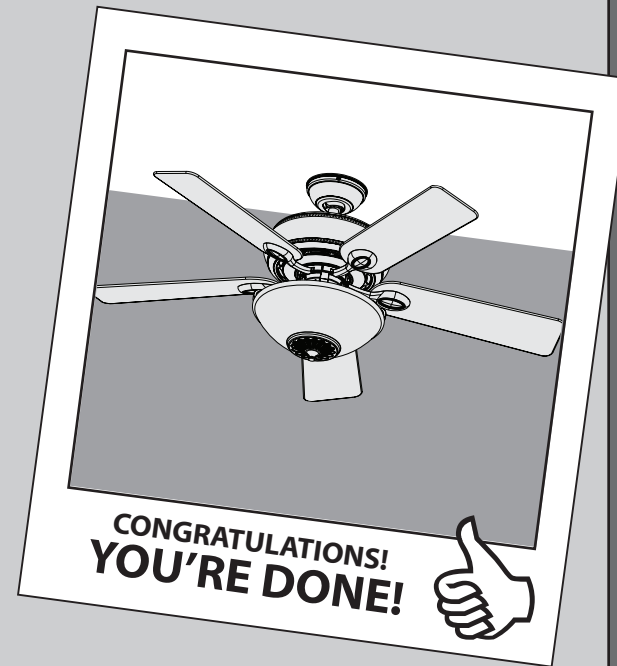

**See next page for fan operation instructions.**

**Note:** Globe style and number of lights may vary.

**Note:** In compliance with US federal energy regulations, this ceiling fan contains a device that restricts its light output. Exceeding the wattage limit marked on the MAX wattage sticker affixed to the light socket(s) may result in fire hazard or improper operation.

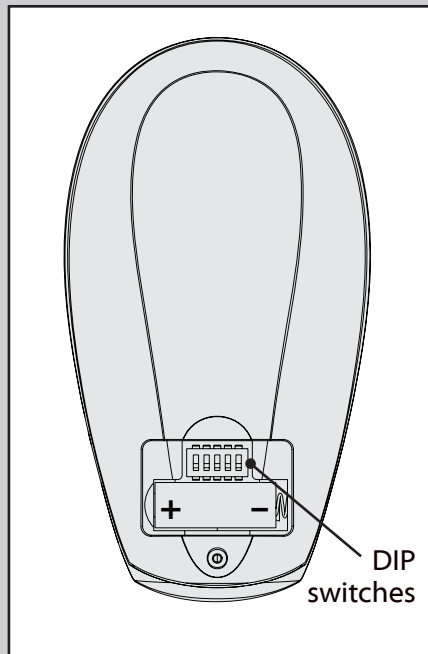


Install one (1) 12-Volt, type 23A, MN-21 battery (included) into the transmitter. Clean the battery contacts and also those of the device prior to battery installation. Ensure the battery is installed correctly with regard to polarity (+ and -). Please contact your local battery recycling center for proper battery disposal information.

## Setting the DIP switches:


**You will only have to change the DIP switch settings in the remote if you are using more than one remote controlled fan in the same area and want to control them separately.** You may want to label your remotes to ensure you do not mix them up.

1. At the circuit breaker or fuse box, turn the power off for the fan you want to change. Do not turn the power off at the circuit breaker for the previously installed fan, as you may inadvertently change the DIP switch code settings for it as well.
2. Slide the cover off the back of the remote and remove the battery. The battery must be removed when changing DIP switch settings.
3. Change the DIP switch settings, so that they are different from the previously installed fan.
4. Replace the battery and cover.
5. At the circuit breaker or fuse box, turn the power back on for the fan whose settings you are changing.
6. Within 20 seconds of restoring power, push the 3 (high), 2 (medium), and 1 (low) buttons (in that order) on the remote.

**Note:** The receiver (built into the fan) has a memory function that retains the last DIP switch code setting. The setting will not change in the event of power failure or if the power to the fan is inadvertently shut off.

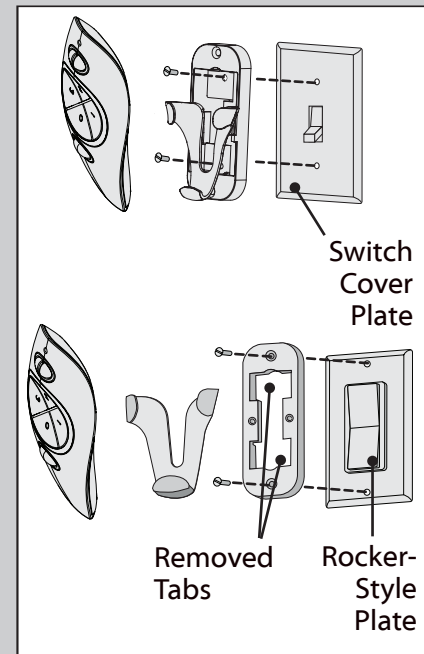

To install the transmitter cradle, remove the two screws holding the switch cover plate. Do not remove the cover plate. Orient the cradle by lining up the two mounting holes with those on the cover plate. Insert and tighten the screws. Do not over tighten. **Note:** For rocker-style cover plates, break off the tabs by pushing outward.

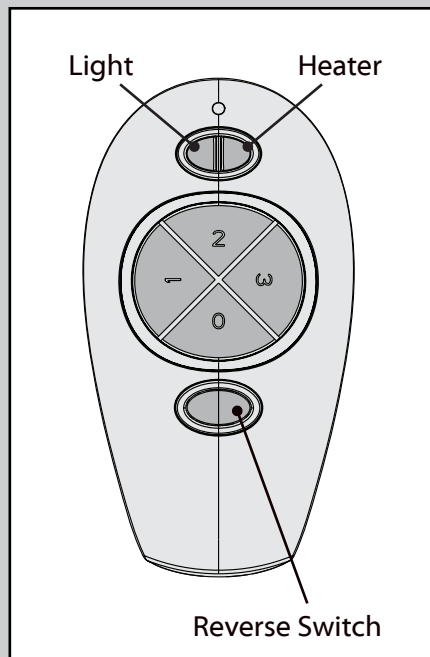**CAUTION:**

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment which is not to be used for an extended period of time.
- Remove used batteries promptly.

**Fan Operation:**

To start the fan, press the speed button on the remote at the level you desire:

- 3 for high
- 2 for medium
- 1 for low

To turn off the fan, press 0.

**Light Operation:**

The light button is used to turn on, dim, and turn off the light.

**To Turn the light on:**

- Press the light button 1 time and the light will come on to the previously set level.

**To dim the light:**

- Press and hold the light button until the light has reached the desired level. (As you hold the button, the light level will move throughout its entire range within 16 seconds.) Release the button at the desired level.

**To Turn the light off:**

- Press the light button 1 time for gradual off and the light will dim automatically for approximately 20 seconds until all the way off to allow for safe exit from the room.
- Press the light button 2 times or 1 time while the light is dimming for instant off.

**Auto Resume Feature**



This fan contains a receiver with an auto resume feature. The receiver remembers the intensity of the light, speed and direction of the fan, and whether the heater is on or off. When power is restored to the receiver, the fan, light, and heater will be at the previous settings.

**Heater Operation:**


The heater button is used to turn on, and off the heater.

- Press the heater button 1 time to turn the heater on.
- Press the heater button again to turn the heater off.


**Note:** Regardless of the speed setting on the fan, when the ceiling fan is operating and the heater function is turned ON, the ceiling fan automatically switches to low-speed updraft only and will not accept any commands from the remote until the heater is turned off.

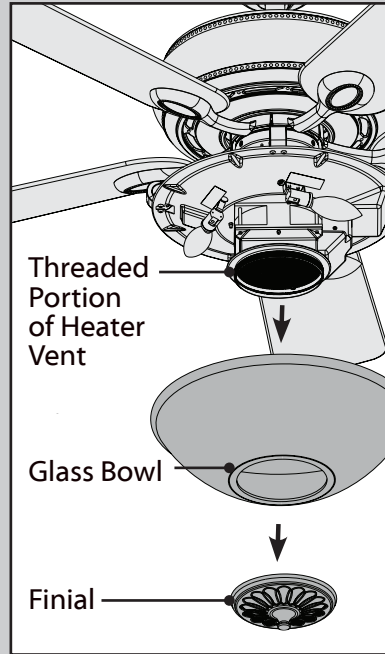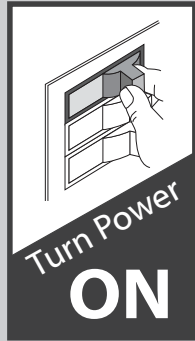

**Changing the bulbs** - unscrew the finial and remove it from the heater vent while supporting the glass bowl with your other hand. Carefully remove the glass bowl. Unscrew bulbs and replace with bulbs of same type and wattage. Reinstall the glass bowl assembly.

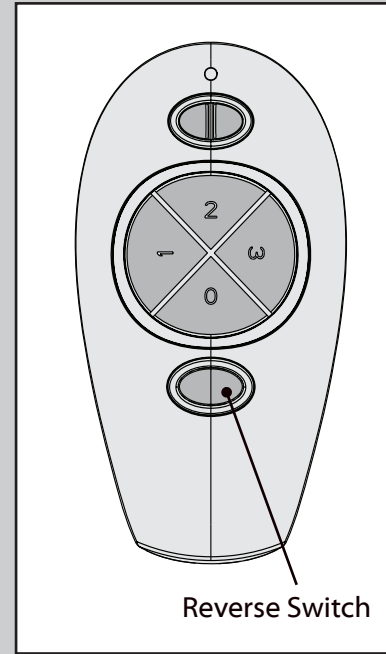

**Changing the direction of air flow** - press the reverse switch.

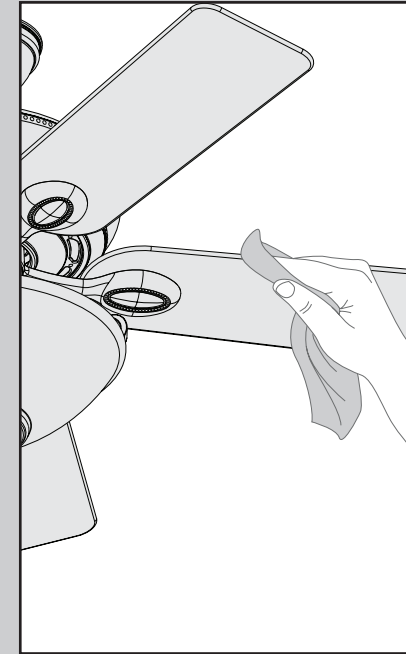

**Cleaning the fan** - use soft brushes or cloths to prevent scratching. Cleaning products may damage the finishes.

## Fan doesn't work

- Make sure power switch is on.
- Pull the pull chain to make sure it is on.
- Push the motor reversing switch firmly left or right to ensure that it is engaged.
- Check the circuit breaker to ensure the power is turned on.
- Make sure the blades spin freely.
- Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram on page 10.
- Check the plug connection in the switch housing.

## Excessive wobbling

- Tighten all of the blade and blade iron screws until they are snug.
- Turn the power off, support the fan carefully, and check that the hanger ball is properly seated.
- Use the provided balancing kit and instructions to balance the fan.

## Noisy Operation

- Tighten the blade and blade iron screws until they are snug.
- Check to see if any of the blades are cracked. If so, replace all of the blades.

## Lights dim when turned on or do not turn on at all.

- Make sure the wattage of the light bulbs installed matches the specifications on the light sockets.