


## INSTALLATION INSTRUCTIONS

### Anystream® Filter Shower Head

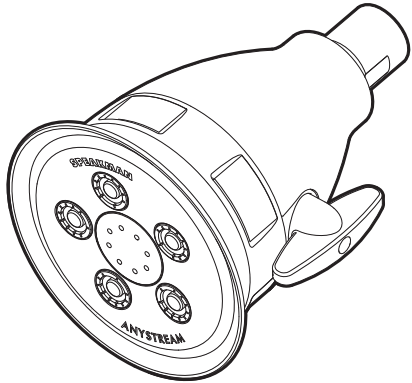

## IMPORTANT

### SAFETY TIPS:

Be sure to read and understand all instructions before beginning installation.

Inspect all connections after installation.

Cover the drain to avoid loss of parts.

Be sure to wear proper eye protection.


Do NOT over tighten any connections or damage may occur.

Shut OFF water supplies before beginning installation.

Observe all local plumbing and building codes.


## APPLY THREAD SEAL TAPE

- 1 Apply the included Thread Seal Tape to the outlet side of shower arm in a clockwise direction.

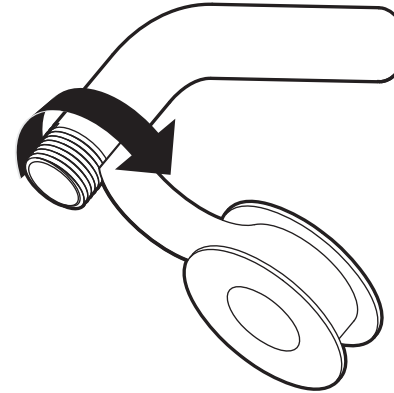

## INSTALL SHOWER HEAD

- 2 Thread Shower Head onto shower arm by turning it in a clockwise direction. Tighten with Adjustable Wrench. Turn water supply on and check for leaks.

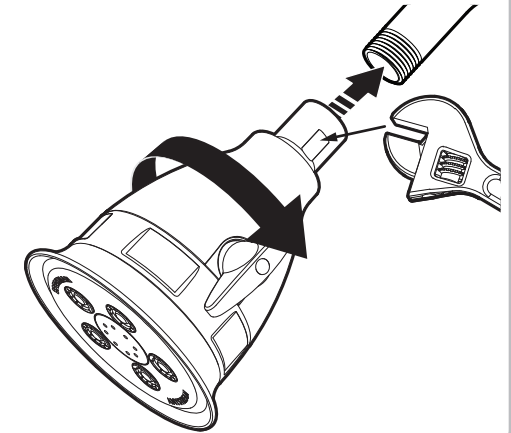

## TOOLS & SUPPLIES NEEDED

Thread Seal Tape  
(INCLUDED)



Adjustable  
Wrench



## MAINTENANCE

Periodic cleaning using a mild soap and warm water will help keep your shower head's appearance in its original condition.

For best results, dry immediately with a soft, clean cloth. **DO NOT USE** harsh and/or abrasive cleaners.

To help restore the finish, occasionally apply a non-abrasive wax to your showerhead body (follow manufacturers' instructions).


On CHROME PLATED SHOWER HEADS, a two (2) part white vinegar, one (1) part water solution can be used to break down excessive mineral deposits on the sprays. Remove Filter from shower head. Let the shower head soak in the solution for about ½ hour then rinse thoroughly. Brush off any remaining mineral deposits if necessary.

**DO NOT USE** the vinegar/water treatment on any finish other than Chrome.


To reduce mineral build-up, turn the handle to FLOOD position to let the water drain out after every use.

## ADJUST SPRAY PATTERN

- 3 Adjust spray pattern by rotating side handle to preferred Anystream® position.

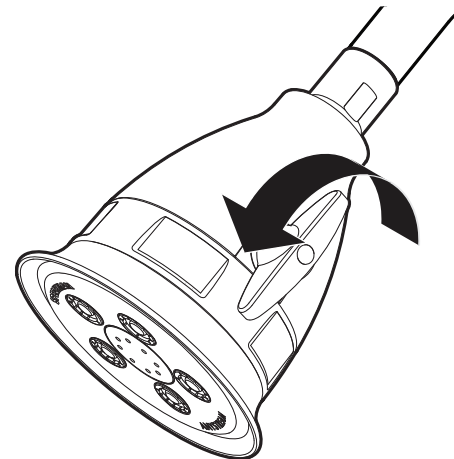

## ROUGH IN DIAGRAM

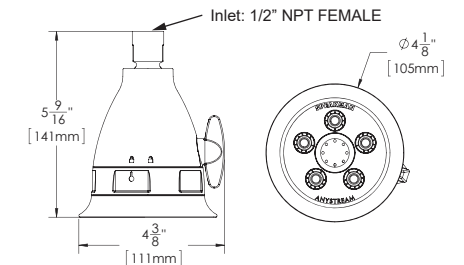

Model: SR-2005-HBF-E2

Max. Flow Rate: 2.0 gpm (7.6 L/min)

Min. Flow Rate: 1.75 gpm (6.6 L/min) @ 45psi

FOR USE WITH AUTOMATIC COMPENSATING VALVES RATED AT 6.6 L/MIN (1.75 GPM) OR LESS.

Model: SR-2005-HBF-E175

Max. Flow Rate: 1.75 gpm (6.6 L/min)

Min. Flow Rate: 1.5 gpm (5.7 L/min) @ 45psi

FOR USE WITH AUTOMATIC COMPENSATING VALVES RATED AT 5.7 L/MIN (1.50 GPM) OR LESS.



## FILTER MAINTENANCE

The shower head filter should be replaced every 6 months or 10,000 gallons. (*Whichever comes first*). Your time may vary depending on your water conditions. Use only genuine Speakman Filters (Part Numbers **FSR-1** or **FS-1**).

We recommend you check your filter monthly to verify it's condition. During your monthly inspection, we recommend that you remove and shake the filter vigorously for 15 seconds to guarantee the best water flow through the filter.

## FOR BEST PERFORMANCE

If you notice a sudden loss in performance of the shower head, this may be caused by sediment or debris from your water supply and can be easily remedied by performing the following steps.

- Remove Filter from the Shower Head by following the instructions provided.
- Turn the filter 180° and run water through the outlet end of the filter.
- Run water through the filter for several minutes.
- During this time you may notice discolored water exiting from the filter. This is normal and is the sediment and/or debris that was causing the poor performance of the filter.
- Reinstall or replace the Filter by following the instructions provided.

## IMPORTANT


This product is not intended for exterior installations. Do not expose the Filter to freezing conditions, as this may cause cracking of the Filter and water leakage.

Do not use with water that is micro-biologically unsafe or of unknown quality without disinfection before the unit.

This unit is not intended to provide filtration of drinking (potable) water, and should not be used as a potable water source.


## UNLOCK SHOWER HEAD

- 1 The Filter can be replaced while the Shower Head is still attached to the Shower Arm. Rotate the ring to the UNLOCK position.

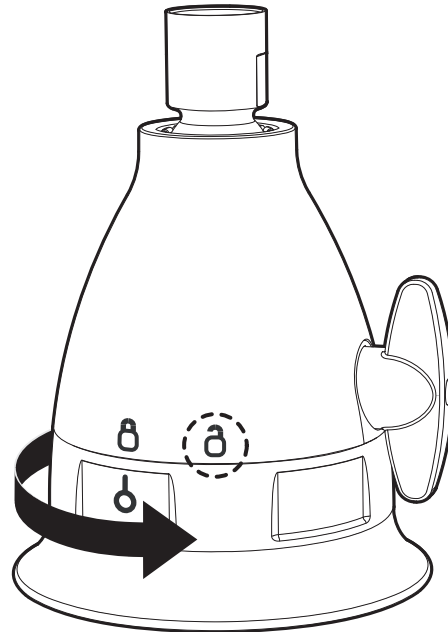


## REPLACE FILTER

- 2 Remove the existing Filter from the Shower Head and discard. Remove protective film from both the inlet and outlet of the new Filter. Align and install the new Filter into the Shower Head and reassemble.

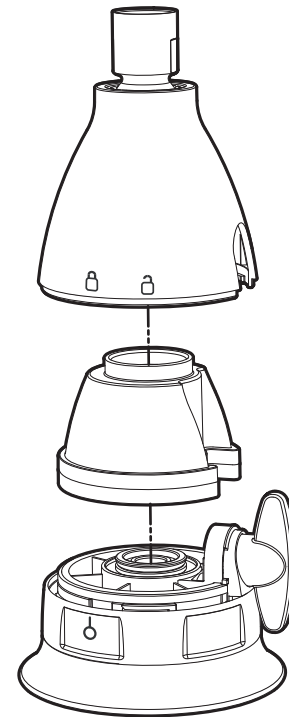

## LOCK SHOWER HEAD

- 3 After the Shower Head is reassembled, rotate the ring to the LOCK position.

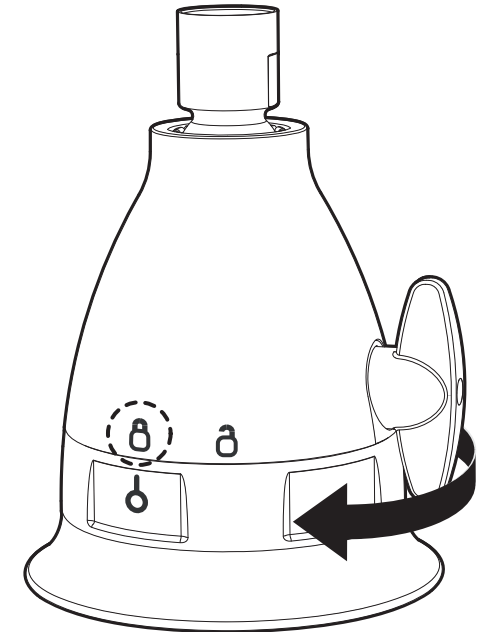

This system has been tested according to NSF/ANSI 177 for reduction of free available chlorine. The concentration of free chlorine in water entering the system was reduced to a concentration less than or equal to the permissible limit for water leaving the system, as specified in NSF/ANSI 177. This system has not been evaluated for free available chlorine reduction performance in the presence of chloramines. Free available chlorine reduction performance may be impacted by the presence of chloramines in the water supply. Please contact your local water utility to determine if chloramines are used in treating your water supply.

Minimum Chlorine Reduction per NSF/ANSI 177 is  $\geq 50\%$  free available chlorine (FAC) when used with an influent challenge water of 2mg /L FAC.

